

**THANK YOU FOR DOWNLOADING THIS MANUAL. I HOPE IT HELPS  
YOU RESOLVE ANY ISSUES YOU HAVE HAD WITH YOUR GAME.**

**THIS MANUAL WAS PURCHASED, AND SCANNED BY BASEMENT  
ARCADE ASSOCIATES, [WWW.BASEMENTARCADE.COM](http://WWW.BASEMENTARCADE.COM) AND IS  
OFFERED FOR FREE DOWNLOAD AT OUR SITE.**

**THIS PDF IS NOT TO BE DISTRIBUTED ON ANY COLLECTION CD  
/ DVD, NOR IS TO BE LINKED TO VIA ANY OTHER INTERNET SITE  
WITHOUT PERMISSION FROM US. LIKEWISE IT IS NOT TO BE  
DISTRIBUTED FROM ANY OTHER SITE WITHOUT OUR  
PERMISSION.**

**ABIDING BY THESE REQUESTS, WILL INSURE THE CONTINUING  
SUPPORT OF NEW MANUALS ADDED TO OUR SITE.**

**ALL ORIGINAL COPYRIGHTS HELD BY THEIR ORIGINAL OWNERS,  
THIS PDF COPYRIGHTED BASEMENT ARCADE ASSOCIATES.**

**--MARK--**

**Bally/Midway's**  
**MCR**  
**System Games**

---

**Standardized General**  
**Instructions**

---

*Bally*

MIDWAY MFG. CO.

10601 W. Belmont Avenue  
Franklin Park, Illinois 60131  
U.S.A.



Phone: (312) 451-9200    Cable Address: MIDCO    Telex No.: 72-1596

FORM NO. M051-00986-A025

**WARNING**

**THIS GAME MUST BE GROUNDED. FAILURE TO DO SO MAY  
RESULT IN DESTRUCTION TO ELECTRONIC COMPONENTS.**

**WARNING:** This equipment generates, uses, and can radiate radio frequency energy and if not used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a CLASS A computing device pursuant to SUBPART J of PART 15 of FCC RULES, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

**ELECTRICAL BULLETIN:** FOR ALL APPARATUS COVERED BY THE CANADIAN STANDARDS ASSOCIATION (CSA) STANDARD C22.2 NO. 1, WHICH EMPLOYS A SUPPLY CORD TERMINATED WITH A POLARIZED 2-PRONG ATTACHMENT PLUG.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**ATTENTION:** POUR PREVENIR CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

**Bally MIDWAY**

*Invites You To Use*

**OUR TOLL FREE NUMBERS FOR  
SERVICE INFORMATION CONCERNING THIS GAME, OR ANY  
OTHER BALLY MIDWAY GAME YOU NOW HAVE ON LOCATION.**

**CALL US FOR PROMPT, COURTEOUS  
ANSWERS TO YOUR PROBLEMS.**

**VIDEO ——— Continental U.S. 1-800-323-7182**

**PINBALL ——— Continental U.S. 1-800-323-3555**

**Bally MIDWAY**

10601 West Belmont Avenue, Franklin Park, Illinois, 60131

phone (312) 461-9200

© COPYRIGHT MCMLXXXIV BY BALLY MIDWAY MFG. CO.

ALL RIGHTS RESERVED

NO PART OF THIS PUBLICATION MAY BE REPRODUCED BY ANY MECHANICAL, PHOTOGRAPHIC, OR ELECTRONIC PROCESS, OR IN THE FORM OF A PHONOGRAPHIC RECORDING, NOR MAY IT BE TRANSMITTED, OR OTHERWISE COPIED FOR PUBLIC OR PRIVATE USE, WITHOUT PERMISSION FROM THE PUBLISHER. THIS MANUAL IS FOR SERVICE USE ONLY, AND NOT FOR GENERAL DISTRIBUTION. FOR PERMISSION REQUESTS, WRITE: BALLY MIDWAY MFG. CO., 10601 W. BELMONT AVE., FRANKLIN PARK, IL 60131

Printed in U.S.A.

# TABLE OF CONTENTS

| DESCRIPTION   | PAGE |
|---|------|
| <b>I. Location and Setup</b>  | 1-1  |
| Inspection .....  | 1-1  |
| Installation .....  | 1-3  |
| Game Volume Adjustment Control .....  | 1-4  |
| Option Switch Settings .....  | 1-4  |
| Cocktail Table Leg Extension Installation .....   | 1-5  |
| <b>II. Maintenance and Repair</b>   | 2-1  |
| 2.1 Introduction .....  | 2-1  |
| 2.2 Cleaning .....  | 2-1  |
| 2.3 Fuse Replacement .....  | 2-1  |
| 2.4 Opening Control Panel .....   | 2-2  |
| 2.4.1 Upright Model .....   | 2-3  |
| 2.4.2 Mini Model .....  | 2-4  |
| 2.4.3 Cocktail Model .....  | 2-5  |
| 2.5 Main - Display - Glass Removal .....  | 2-6  |
| 2.5.1 Upright Model .....   | 2-7  |
| 2.5.2 Mini Model .....  | 2-10 |
| 2.5.3 Cocktail Model .....  | 2-11 |
| 2.6 T.V. Bezel Assembly Removal .....   | 2-12 |
| 2.6.1 Upright Model .....   | 2-13 |
| 2.6.2 Mini Model .....  | 2-14 |
| 2.6.3 Cocktail Model .....  | 2-15 |
| 2.7 T.V. Monitor Replacement .....  | 2-16 |
| 2.7.1 Upright Model .....   | 2-17 |
| 2.7.2 Mini Model .....  | 2-19 |
| 2.7.3 Cocktail Model .....  | 2-20 |
| 2.8 Printed Circuit Board (P.C.B.) Replacement .....  | 2-22 |
| 2.8.1 Upright Model .....   | 2-23 |
| 2.8.2 Mini Model .....  | 2-25 |
| 2.8.3 Cocktail Model .....  | 2-27 |
| 2.9 Opening the Upper Attraction Panel .....  | 2-29 |
| 2.9.1 Upright Model .....   | 2-30 |
| 2.9.2 Mini Model .....  | 2-33 |
| 2.10 Replacing the Game Upper Attraction Panel Lighting .....                               | 2-35 |
| 2.10.1 Upright Model .....  | 2-36 |
| 2.10.2 Mini Model .....   | 2-39 |
| 2.11 Speaker Replacement .....  | 2-40 |
| 2.11.1 Upright Model .....  | 2-41 |
| 2.11.2 Mini Model .....   | 2-45 |
| 2.11.3 Cocktail Model .....   | 2-46 |
| 2.12 Opening the Lower Attraction Panel and Servicing It's Lighting Assembly .....          | 2-47 |
| 2.12.1 Upright Model .....  | 2-48 |
| 2.13 Servicing the Control Panel Lighting Assembly .....                                    | 2-49 |
| 2.13.1 Upright Model .....  | 2-50 |
| 2.14 Servicing Auxiliary Lighting .....   | 2-52 |
| 2.14.1 Upright Model - Servicing Windshield Fluorescent Light .....                         | 2-53 |
| 2.14.2 Upright Model - Servicing the Black Light Above Control Console .....                | 2-54 |
| 2.14.3 Upright Model - Servicing the Fluorescent Light Behind the Front Service Panel ..... | 2-55 |



# I. Location and Setup

## INSPECTION

1. Remove the game from its shipping crate.
2. Inspect the entire outside of it for any signs of damage.
  - ☐ Any scratches?, dents?, cracks?
  - ☐ Any broken controls?
  - ☐ Any broken glass or plastic?
  - ☐ Just look it over closely and make a note of any signs of damage.
3. Remove the shipping cleats from the bottom of the cabinet.
  - ☐ UPRIGHT MODELS ONLY: In order to help prevent easy theft of your game, you may wish to remove the Caster Wheel Assemblies from the bottom of your cabinet at this time.
4. Install the four levelers, one at each corner of the cabinet.
  - ☐ Level the cabinet.
5. Open the cabinet and inspect the inside of the game for any signs of damage. See Figure 1-1.
  - ☐ Also check to make sure all plug-in connectors on the wire harness are firmly seated.

**NOTE:** ALL connectors or plugs are keyed so they will only go together when all pins are properly lined up.
- ☐ Replug any connectors found unplugged. DO NOT FORCE PLUGS ONTO CONNECTORS. DO NOT FORCE PLUGS TOGETHER. If it won't go on easily, assuming the keys are lined up, it either does not belong there or is damaged.
- ☐ Make sure all printed circuit boards (P.C.B.'s) are firmly seated in their connectors. See Figure 1-1. These connectors are also keyed. The P.C.B.'s will only go into them one way without being damaged.
- ☐ Note the location of the game's serial number. See Figure 1-1.
- ☐ Check all major subassemblies to be sure they are mounted securely. These are called out in Figures 1-1 & 1-2.
  - Power supply.
  - Control panel(s).
  - T.V. monitor.
  - Other P.C.B.'s and/or P.C.B. rack, etc.
  - Power Chassis assembly.
6. Make a note of any problems that can't be easily corrected.
7. Call your distributor and/or service man about your problem list.

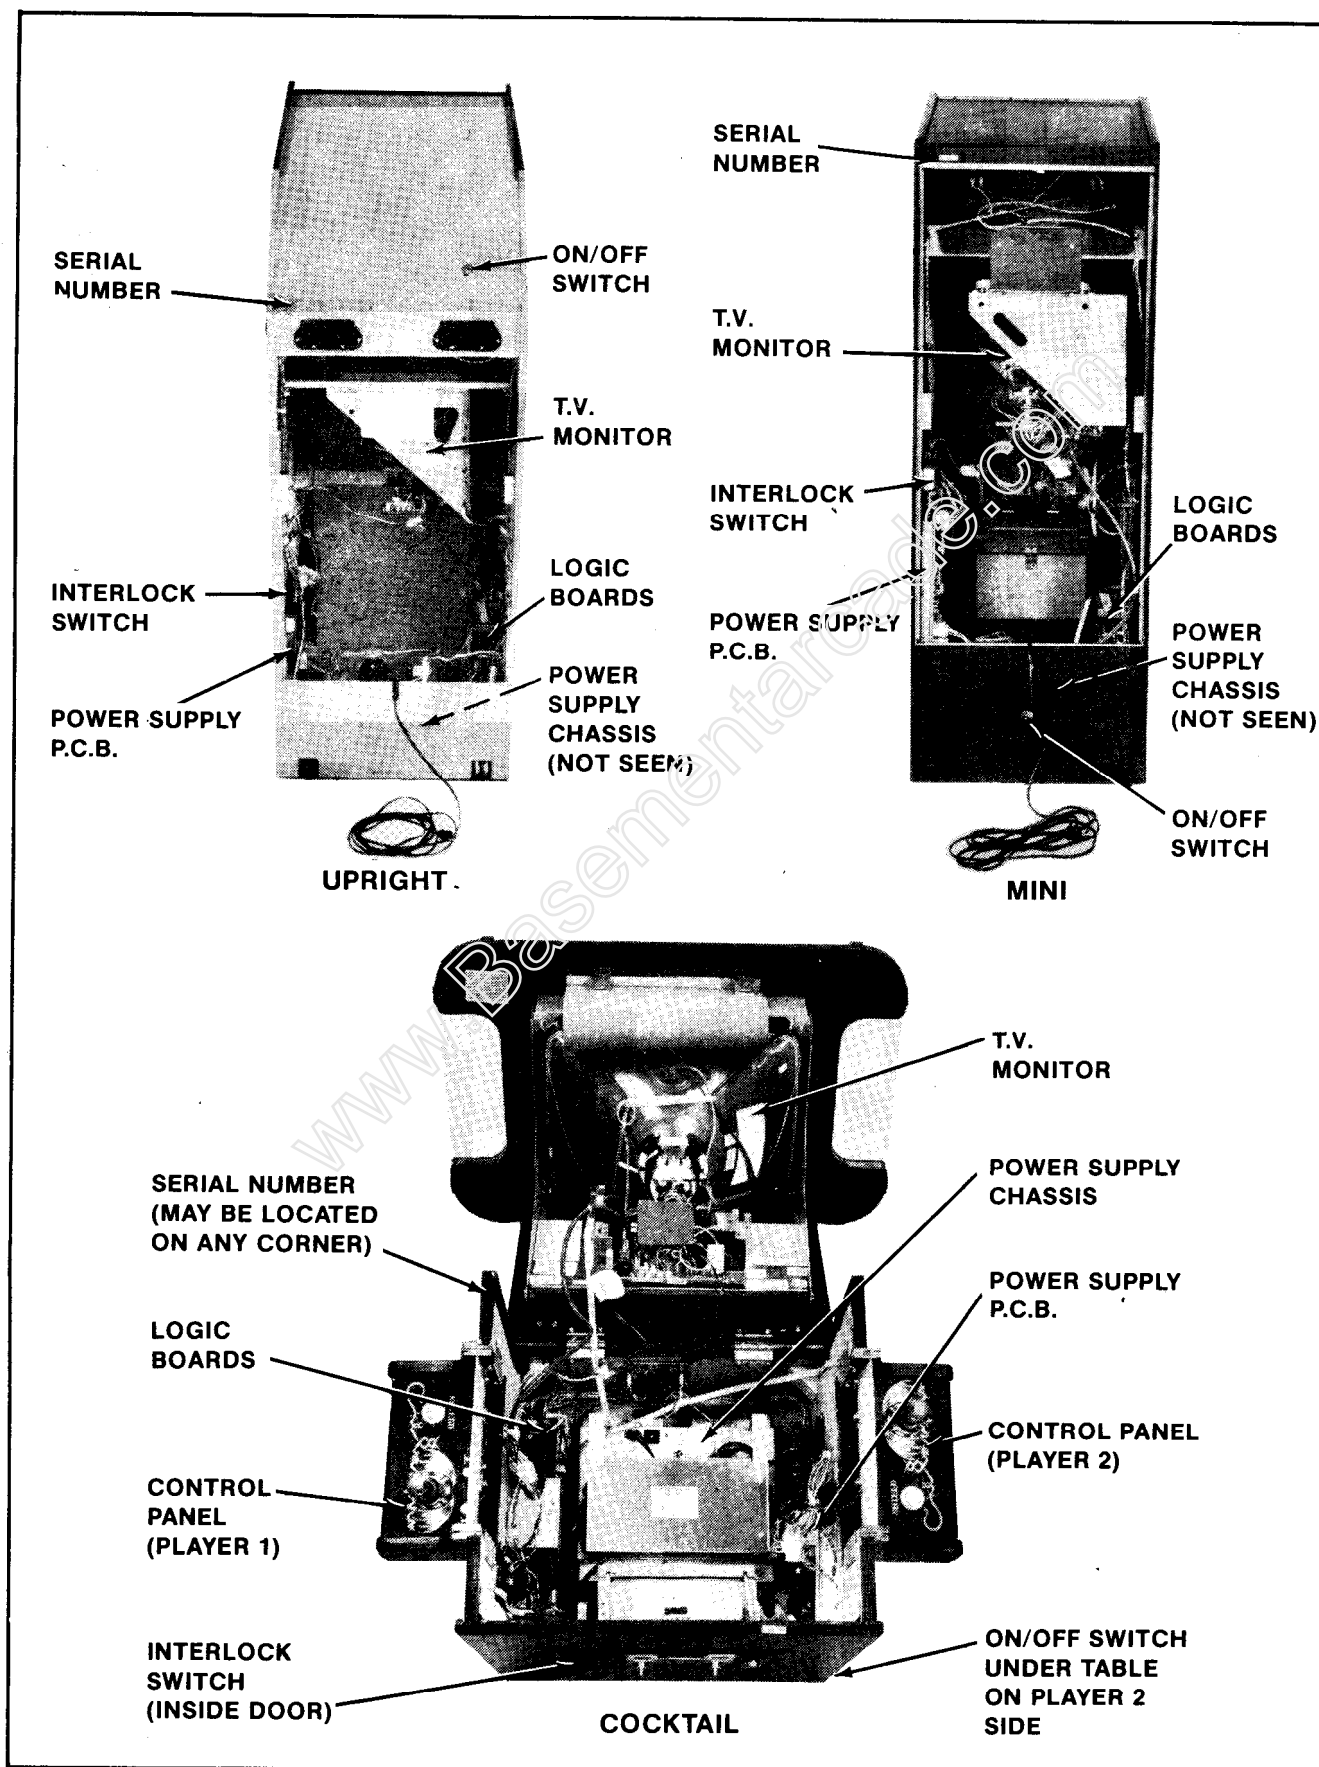


Figure 1-1 Location of Serial No., Interlock Switch, On/Off Switch, & Major Sub-Assemblies

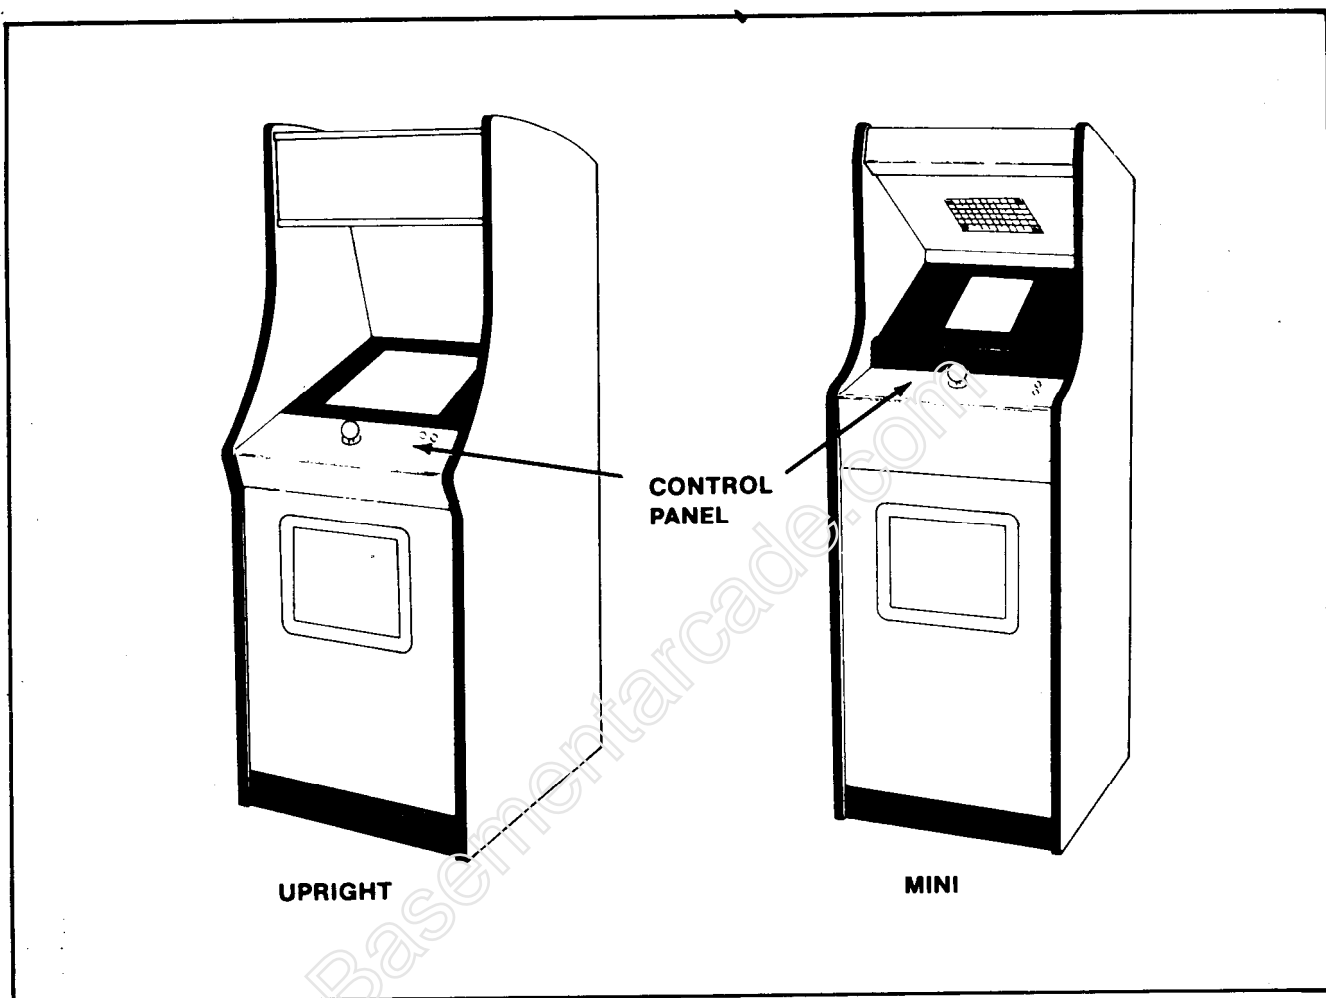


Figure 1-2 Major Sub-Assemblies (cont. from Fig. 1-1)

## INSTALLATION

### 1. Location requirements:

- ☐ **Power:**  
Domestic 110 V @ 60 Hz  
Foreign 200 V to 240 V @ 50 Hz
- ☐ **Temperature:** 32° to 100° F (0° to 38° C)
- ☐ **Humidity:** Not over 95% relative
- ☐ **Space required:**

|          |                                 |
|----------|---------------------------------|
| Upright  | 32" x 25" (81cm x 63cm) APPROX. |
| Mini     | 20" x 24" (50cm x 60cm)         |
| Cocktail | 32" x 22" (81cm x 55cm)         |
- ☐ **Game height:**

|          |                     |
|----------|---------------------|
| Upright  | 70" (175cm) APPROX. |
| Mini     | 61" (153cm)         |
| Cocktail | 29" ( 73cm)         |

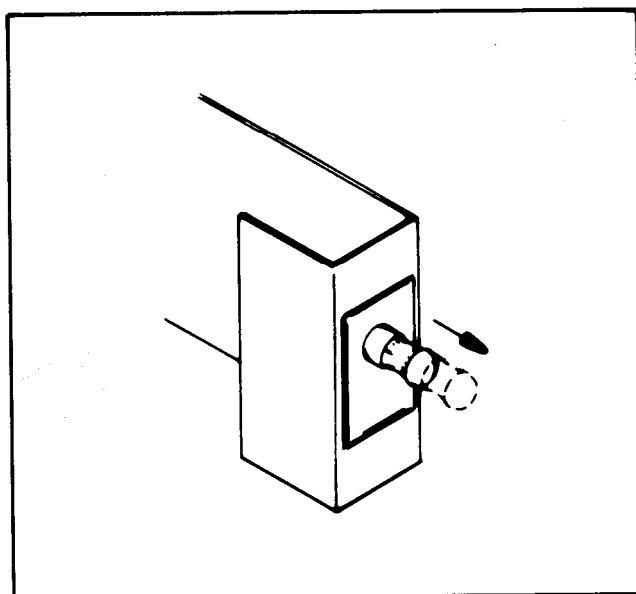


Figure 1-3 Interlock Switch Operation

## 2. Voltage Selection:

Your game is designed to work properly on the line voltage where you are located. Check your line voltage with a meter to determine what its value is. Then check the power input wires to the main power supply transformer on your game to be sure they are connected to taps which correspond to your line voltage value.

If the power input wires to the main power supply transformer are not connected to taps which correspond to your local line voltage, move them to the proper taps.

If the line voltage in your area falls outside the upper or lower limits of the range of inputs covered by the main power supply transformer, **DO NOT PLUG YOUR GAME IN** until you have talked with your distributor and/or service man and obtained a solution to this problem. Otherwise you could damage your game.

## 3. Interlock and power ON/OFF switches. See Figure 1-1.

- ☐ To help prevent the possibility of getting an electric shock while working inside the game cabinet, interlock switches have been installed at each cabinet access door (this **DOES NOT** include the coin door in the Upright and Mini models).

- ☐ When any access door is opened, the interlock switch installed there turns off all power to the game.

- ☐ Check each interlock switch for proper operation.

After checking the line voltage in your area and determining that the input wires to the main power supply transformer of your game are connected properly — or — after obtaining a solution to your over or under voltage problem from your distributor and/or your service man, plug the game into your A.C. wall outlet.

The game ON/OFF switches for all models are located as shown in Figure 1-1. Turn the game on and allow it to warm up a few minutes.

Slowly open each access door to the game (this **does not** include the coin door on the Upright and Mini models).

As the door is opened approximately 1" (2.54cm) the power to the game should go off (the T.V. monitor, all the lights, and all sounds will stop).

If this does not happen, check the interlock switch by this door to see if it has broken loose from its mounting or if it is stuck in the "ON" position.

If the switch is found to be bad, turn the game off, unplug it, and replace the interlock switch. When done, plug the game back into the wall outlet, close the access door, and turn the game back on.

After the game has warmed up, repeat the above interlock switch test.

When the interlock switch is working properly and turns the power to the game off, power may be restored to the game with the access door(s) open. Take hold of the interlock switch plunger and **gently** pull it out to its fully extended position. **THIS IS TO BE USED ONLY FOR SERVICING THE GAME.** See Figure 1-3.

## GAME VOLUME ADJUSTMENT CONTROL

See Figure 1-4.

The game volume control pot is just inside the cabinet, not far from the coin door frame. There is only one pot. For adjustment, it may be reached through the coin door.

To make the sounds louder, turn the pot clockwise as you face it (↻).

To make the sounds **less** loud, turn the pot counter-clockwise as you face it (↺).

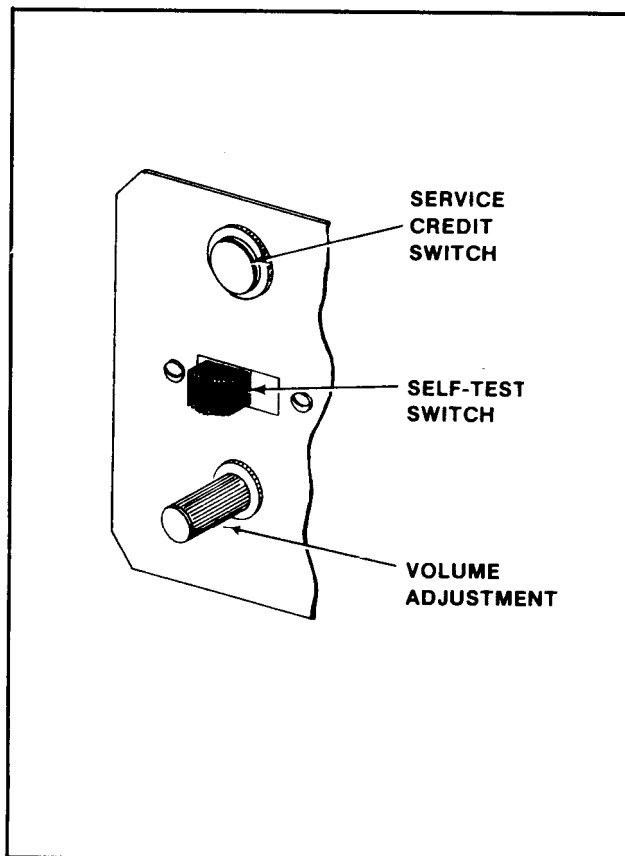


Figure 1-4 Game Volume Adjustment Control



## OPTION SWITCH SETTINGS

To change the most common option switch settings, you **DO NOT** have to take the game apart or go into the cabinet and hunt for tiny switches on P.C. boards. These most common options can be changed from the main console of the game while it is in the Self-Test mode. (See the "Self-Test" section of this manual for further details.) The Self-Test switch is located just inside the cabinet not far from the coin door frame as you face it.

When changing any options, ALWAYS perform the Self-Test and play the game to be sure the ones selected are working properly. Of course, when you must change one of the switches that is located on one of the game's P.C. boards, it is also recommended that you perform the Self-Test and play the game to be sure the switches have worked properly and that no switches were accidentally

moved that were not meant to be. (These switches are small and this can happen.)

The P.C. board option switch settings, and what they will make the game do can be found in your game's "Parts & Operating Manual." These switches are **MAINLY INTENDED** for use by a technician who is checking and/or performing tests on the game. See Figure 1-5 for one example of option switch locations.

**NOTE:** In order to set the option switches located on the game's P.C. Boards, these Boards need not be removed from their card rack.

See your game's "Parts & Operating Manual" for exact location of these switches.

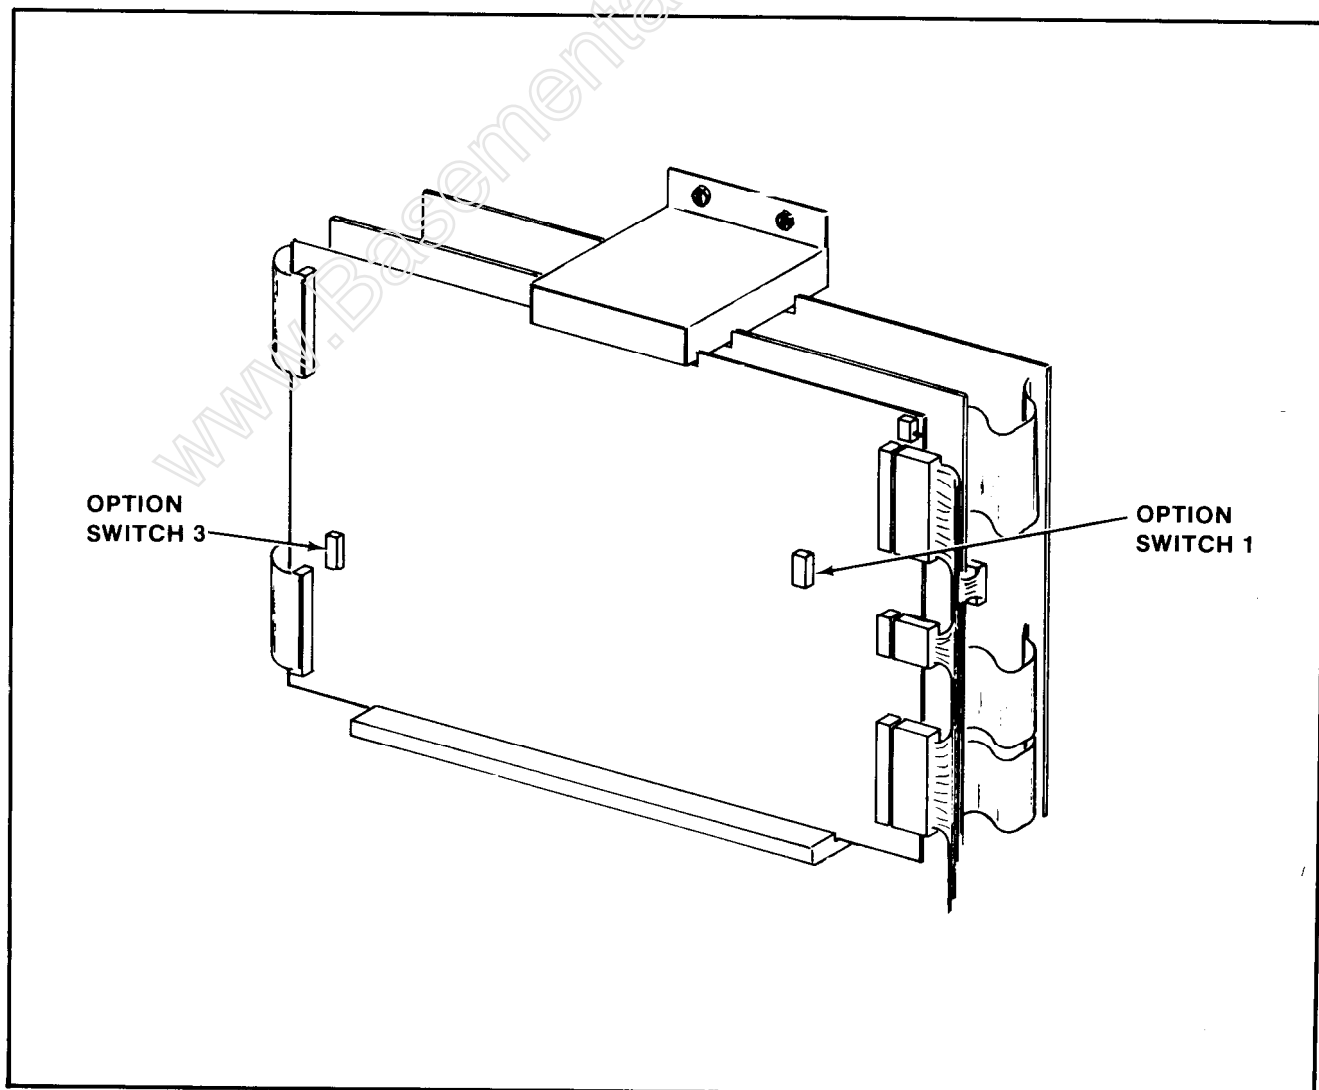


Figure 1-5 Option Switch Locations (one example)

## COCKTAIL TABLE LEG EXTENSION INSTALLATION

There are two ways in which this can be accomplished: 1) the **perferred method** and 2) the **alternate method**. Both are completely covered below.

1. The **perferred method** is more labor intensive and requires 3 strong persons. Two to lift up the Cocktail Table while the third installs the Leg Extensions.

- A. Lift the Cocktail Table off the floor.
- B. Remove the Glide from each Leg.
- C. Install a Leg Extension in each Cocktail Table Leg that you removed a Glide from. See Figure 1-6. **Make sure** they are tightly screwed in place. They **must not** be loose.
- D. Reinsert the 4 Glides into the bottoms of the Leg Extensions you just installed. See Figure 1-6.
- E. Leg Extension installation is now complete.

2. The **alternate method** is less labor intensive and requires only 1 strong person to tilt the Cocktail Table onto its side without dropping it. This same person can then install the Leg Extensions.

- A. Tilt the Cocktail Table onto its side and lay it **gently** on the floor. **Do not** drop it or bounce it!
- B. Remove the Glide from each Leg.
- C. Install a Leg Extension in each Cocktail Table Leg that you removed a Glide from. See Figure 1-7. **Make sure** they are tightly screwed in place. They **must not** be loose.

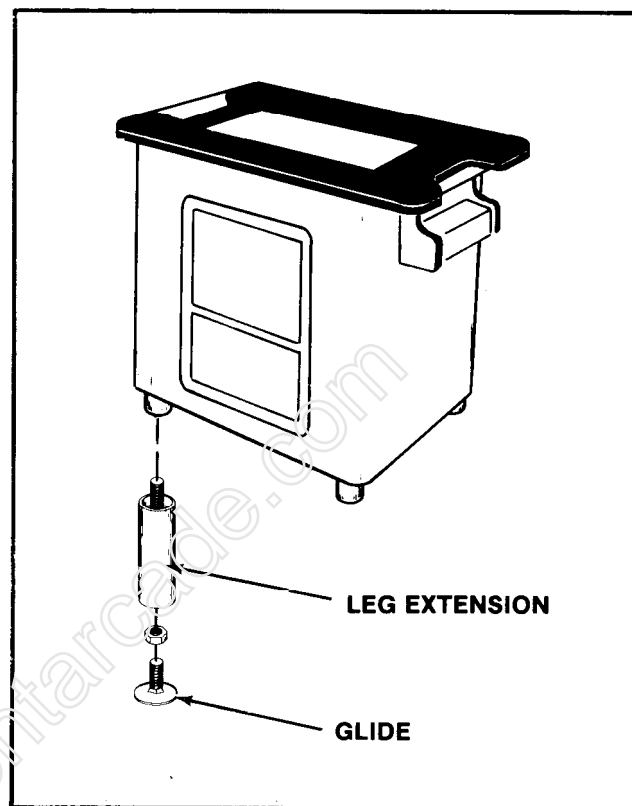


Figure 1-6 Cocktail Table Leg Extension Installation

- D. Reinsert the 4 Glides into the bottoms of the Leg Extensions you just installed. See Figure 1-7.
- E. Tilt the Cocktail Table back to the upright position and **recheck all the leg extensions for tightness**. They **must not** be loose.
- F. Leg Extension installation is now complete.

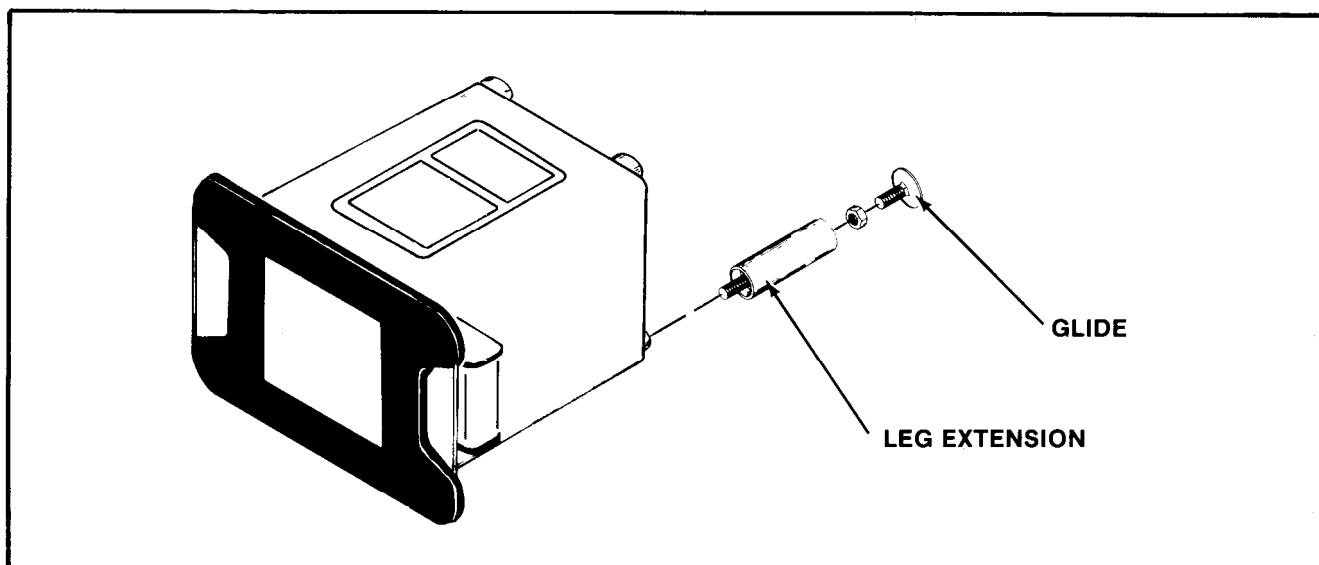


Figure 1-7 Cocktail Table Leg Extension Installation

# II. Maintenance and Repair

## 2.1 INTRODUCTION

Your **NEW** game needs certain types of maintenance to keep it in good working order. **CLEAN**, well **MAINTAINED** games **attract players** and **EARN MORE PROFITS**.

The most important thing for you to remember is to play your game thoroughly **EVERY TIME** you collect money from the coin box. **JUST LOOKING** at your game **WILL NOT** tell you if all its controls and inside parts are working correctly. **ONLY** being familiar with and playing your game will inform you whether or not it is working the way it should.

The second most important thing you should remember is to clean the outside of the game and coin acceptor mechanisms on a regular basis.

## 2.2 CLEANING

The outside of the game cabinet plus the metal can be cleaned with any non-abrasive household cleaner. However, the front of the T.V. monitor tube and **both sides** of all other glass and plastic on or in the game **MUST** be cleaned with anti-static cleaner **ONLY**. For cleaning the coin acceptors: hot soapy water may be used on the plastic ones and any household cleanser may be used on the metal ones. If you wish, special coin machine cleaners that leave no residue may be purchased from your distributor.

**DO NOT** dry-wipe any of the plastic panels. This is because any dust that was on them can scratch their surfaces. If this has happened, anyone looking through this type of damaged plastic would feel he was looking at the game through a fog. This fogging

damage **CANNOT** be repaired or reversed. The **ONLY** solution is to **replace** the damaged piece of plastic.

## 2.3 FUSE REPLACEMENT

This game contains several fuses located as shown in Figure 2-1.

### 1. UPRIGHT MODEL:

As viewed from the back, facing the cabinet, with the rear access door removed; the fuses are located on the Power Chassis and the Power Supply Board Assemblies.

### 2. MINI MODEL:

As viewed from the back, facing the cabinet, with the rear access door removed; the fuses are located on the Power Chassis and the Power Supply Board Assemblies.

### 3. COCKTAIL TABLE MODEL:

As viewed from the coin door side of the cabinet, with the monitor tilted open to one side; the fuses are located on the Power Chassis and Power Supply Board Assemblies.

Replace fuses **ONLY** with the type and size listed in the Illustrated Parts Breakdown Section of your game manual.

See the T.V. Monitor Manual (available on request from your Distributor or the Monitor manufacturer) and/or the T.V. Troubleshooting Section of your game manual for information on these fuses.

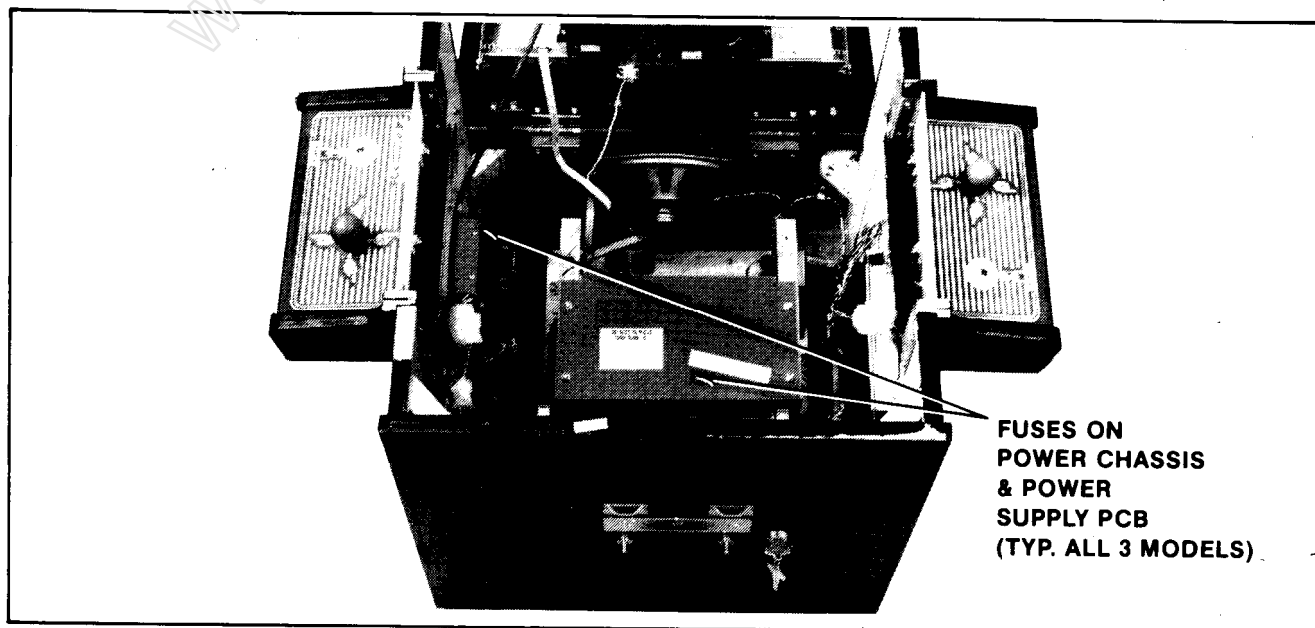


Figure 2-1 Location of Fuses

## **2.4 OPENING THE CONTROL PANEL**

### **2.4.1 Upright Models**

### **2.4.2 Mini Models**

### **2.4.3 Cocktail Models**



### 2.4.1 UPRIGHT MODEL: (See Figure 2-2)

- ❑ The control panel is held in place by two or three latches. See Figure 2-2.  
They are spring loaded to provide constant positive pressure on their latch plates.  
They can be reached through the coin door **AFTER turning power to the game off.**  
To release the latches, lift up and toward the front center of the control panel.  
Once they are released, unhook them from their latch plates
- ❑ To remove the control panel:  
Raise it up and tilt it toward you until you can see the cable behind it.  
Cradling the control panel between yourself and the cabinet, disconnect it from its cabling and nylon retaining strap.  
The control panel is now free and can be removed.
- ❑ To reinstall the control panel, reverse this procedure.

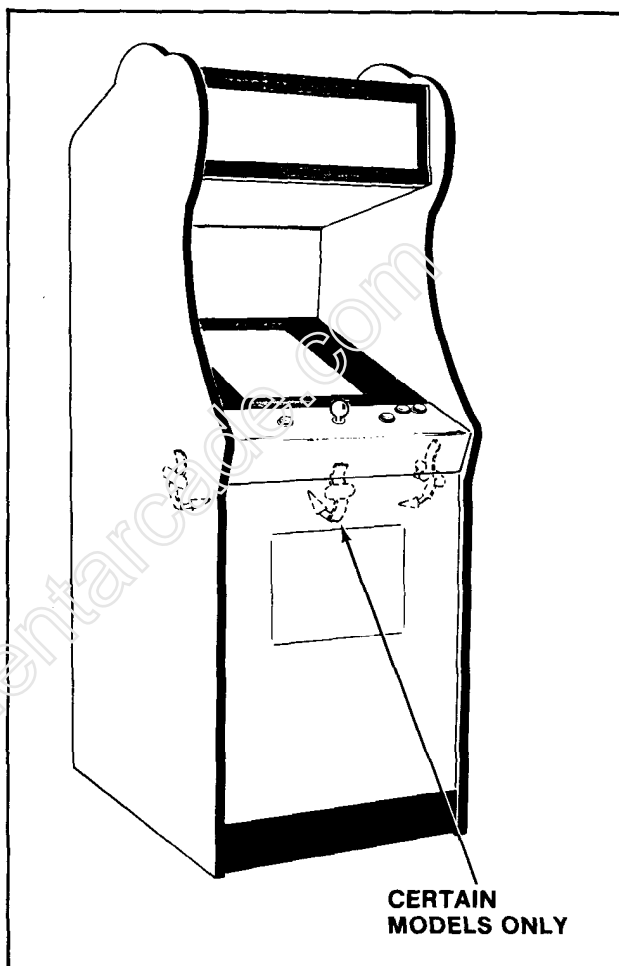


Figure 2-2 Opening the Control Panel - Upright

### 2.4.2 MINI MODEL: (See Figure 2-3)

- ☐ The control panel is held in place by two latches. See Figure 2-3.  
They are spring loaded to provide constant positive pressure on their latch plates.  
They can be reached through the coin door **AFTER turning power to the game off.**  
To release the latches, lift up and toward the center control panel.  
Once they are released, unhook them from their latch plates.
- ☐ To remove the control panel:  
Raise it up and tilt it toward you until you can see the cable behind it.  
Cradling the control panel between yourself and the cabinet, disconnect it from its cabling and nylon retaining strap.  
The control panel is now free and can be removed.
- ☐ To reinstall the control panel, reverse this procedure.

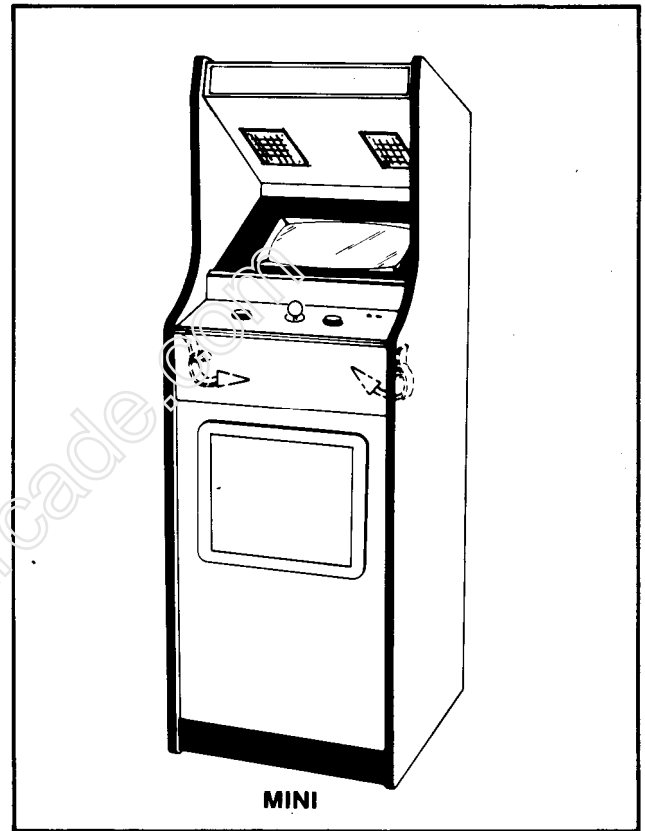


Figure 2-3 Opening the Control Panel - Mini

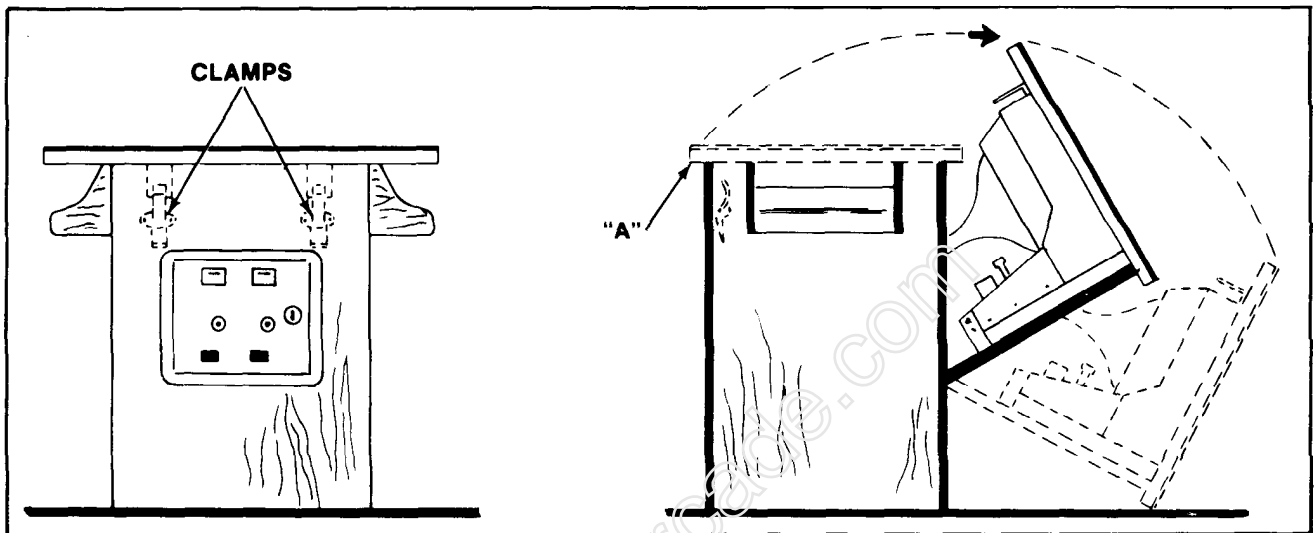


Figure 2-4 Opening the Cocktail Game

### 2.4.3 COCKTAIL TABLE MODEL: (See Figures 2-4 and 2-5)

- Each control panel is held in place by several screws, two on the inside of the cabinet and three along the outside bottom edge of the control panel.

**Turn power to the game off.**

Open the coin box door and release the two latches indicated in Figure 2-4.

**WARNING:** The right hand latch is very close to the **HIGH VOLTAGE** on the monitor. **BE CAREFUL!**

Once they're released, unhook them from their latch plates.

Grasp the table top at "A" and open it as indicated in Figure 2-4.

**CAUTION:** Due to the weight of the monitor, **EXTREME CARE MUST** be taken when opening the cabinet.

Remove the screws which secure the control panel in place. See Figure 2-5.

- To remove the control panel(s):  
Disconnect it from its cabling.  
The control panel is now free and can be removed.
- To reinstall the control panel, reverse this procedure.

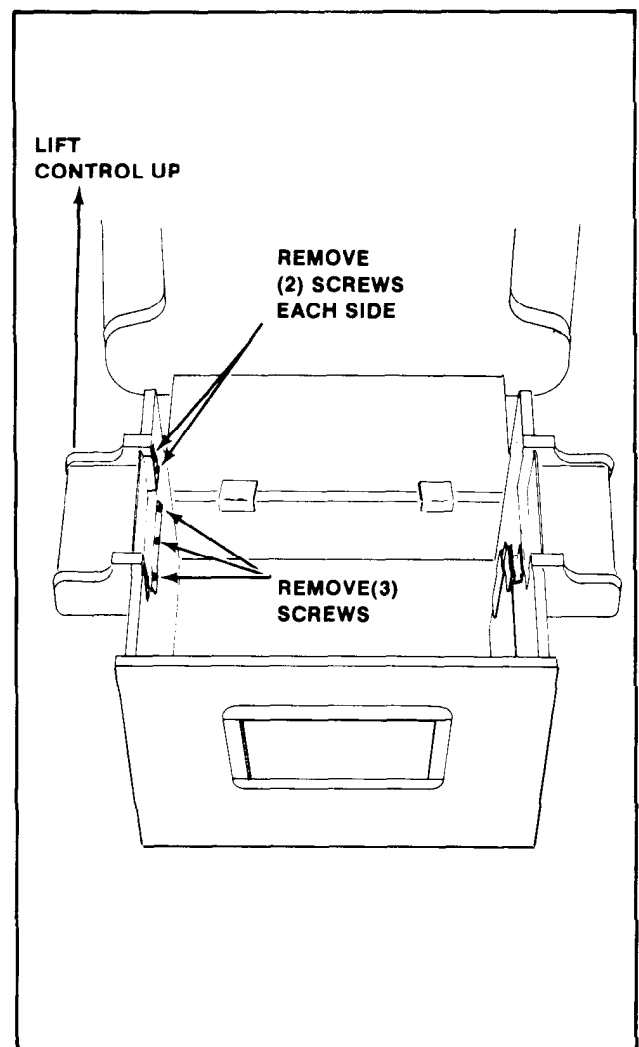


Figure 2-5 Removing the Control Panel - Cocktail

## **2.5 MAIN—DISPLAY—GLASS REMOVAL**

### **2.5.1 Upright Models**

### **2.5.2 Mini Models**

### **2.5.3 Cocktail Models**



## 2.5 REMOVAL OF THE MAIN-DISPLAY-GLASS

UPRIGHT

### 2.5.1 UPRIGHT MODEL: (See Figure 2-6)

**NOTE:** In order to do this, the control panel **MUST** be removed first.

- ☐ Turn the power to the game off and remove the control panel.
- ☐ This frees the main-display-glass so it can be lifted up.
- ☐ By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out.
- ☐ To reinstall the main-display-glass, reverse this procedure.

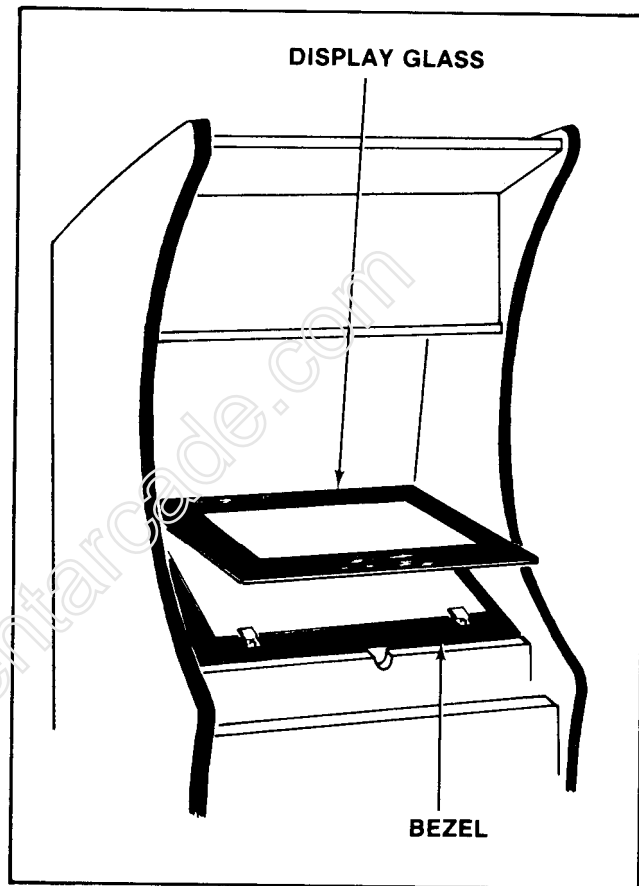


Figure 2-6 Removing the Main Display Glass - Upright

## 2.5.1 UPRIGHT MODEL: (Cont'd)

**NOTE:** In order to do this, the control panel **MUST** be removed first. See the "Upright Model" procedure.

- ☐ Turn the power to the game off and remove the control panel.
- ☐ Remove the screws which secure the glass clamping plate. See Figure 2-7.
- ☐ Lift out the glass clamping plate. This frees the main-display-glass so it can be lifted up.
- ☐ By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out. See Figure 2-7.
- ☐ To reinstall the main-display-glass, reverse this procedure.

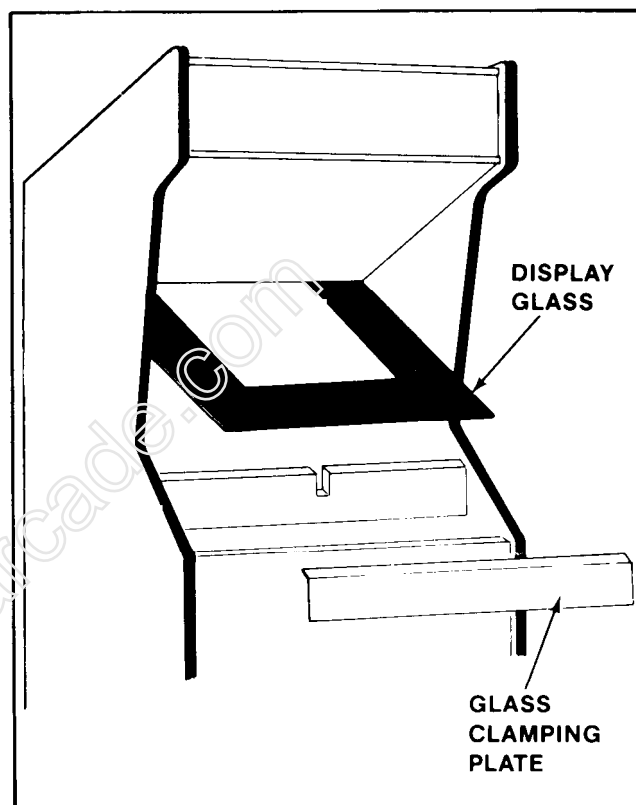


Figure 2-7 Removing the Main Display Glass - Upright

## 2.5.1 UPRIGHT MODEL: (Cont'd)

**NOTE:** In order to do this, the control panel **MUST** be removed first. See the "Upright Model" procedure.

- ❑ Turn the power to the game off and remove the control panel. This frees the main-display-glass so it can be lifted up.
- ❑ Grasp the main-display-glass in the bottom center, lift up slightly and pull it toward you about an inch, let it down just far enough so you can get hold of its top edge with your other hand and lift it out of the game. See Figure 2-8.
- ❑ To reinstall the main-display-glass, reverse this procedure.


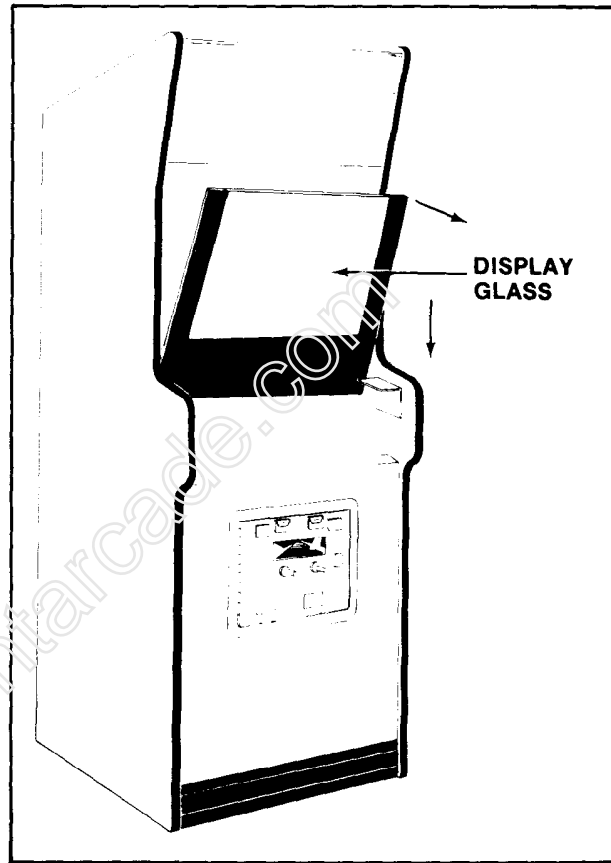


Figure 2-8 Main Display Glass Removal

**2.5.2 MINI MODEL:** (See Figure 2-9.)

**NOTE:** In order to do this, the control panel **MUST** be removed first. See the "Mini Model" procedure.

- ☐ Turn the power off to the game and remove the control panel.
- ☐ Remove the screws which secure the glass clamping plate.
- ☐ Lift out the glass clamping plate. This frees the main-display-glass so it can be lifted up.
- ☐ By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out.
- ☐ Reverse this procedure to reinstall the main-display-glass.

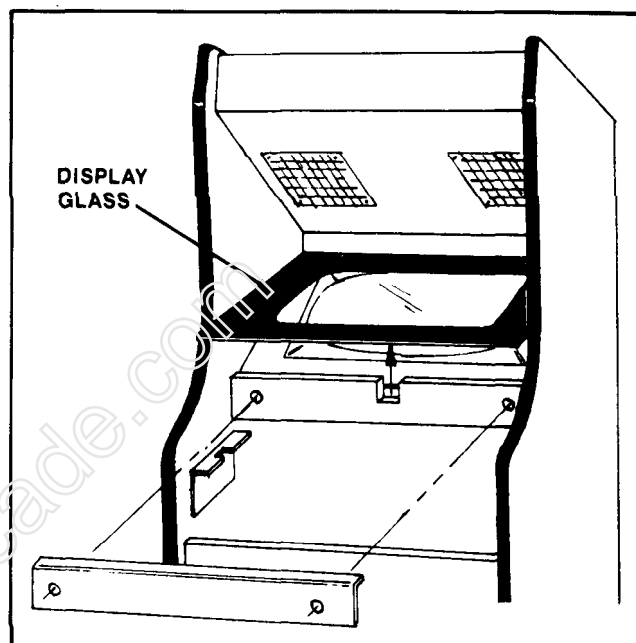

**Figure 2-9 Removing the Main Display Glass - Mini**



**2.5.3 COCKTAIL TABLE MODEL:** (See Figure 2-10)

**NOTE:** This may be done with the table top in the open or the closed position. If you decide to open the table top, **TURN THE POWER TO THE GAME OFF FIRST.**

- ☐ Remove the screws which secure the table top glass clamps in place.
- ☐ Remove the table top glass.
- ☐ To reinstall the table top glass, simply reverse this procedure.

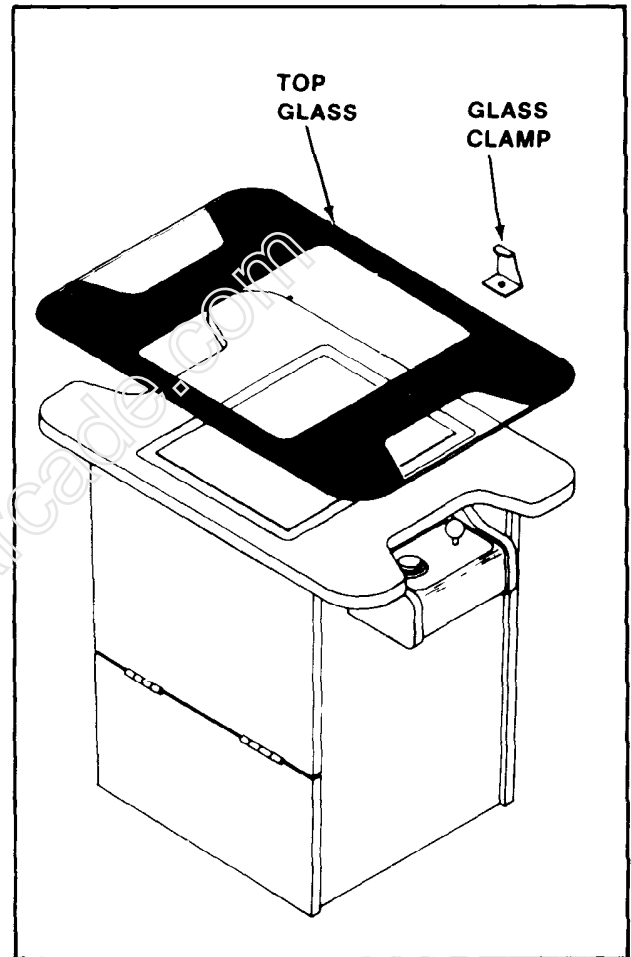


Figure 2-10 Removing the Top Glass - Cocktail

## **2.6 T.V. BEZEL ASSEMBLY REMOVAL**

**2.6.1 Upright Models**

**2.6.2 Mini Models**

**2.6.3 Cocktail Models**

## 2.6 T.V. BEZEL ASSEMBLY REMOVAL

UPRIGHT

### 2.6.1 UPRIGHT MODEL: (See Figure 2-11)

**NOTE:** In order to do this, the main-display-glass **MUST** be removed first. See the Upright Model procedure.

- ☐ Loosen the screws which secure the T.V. bezel-glass-clamps in place.  
Move the clamps to the side and the bezel glass may be removed.  
Remove the above mentioned screws and the bezel with four bezel-glass-clamps may be removed.
- ☐ To reinstall the T.V. bezel assembly, reverse this procedure.

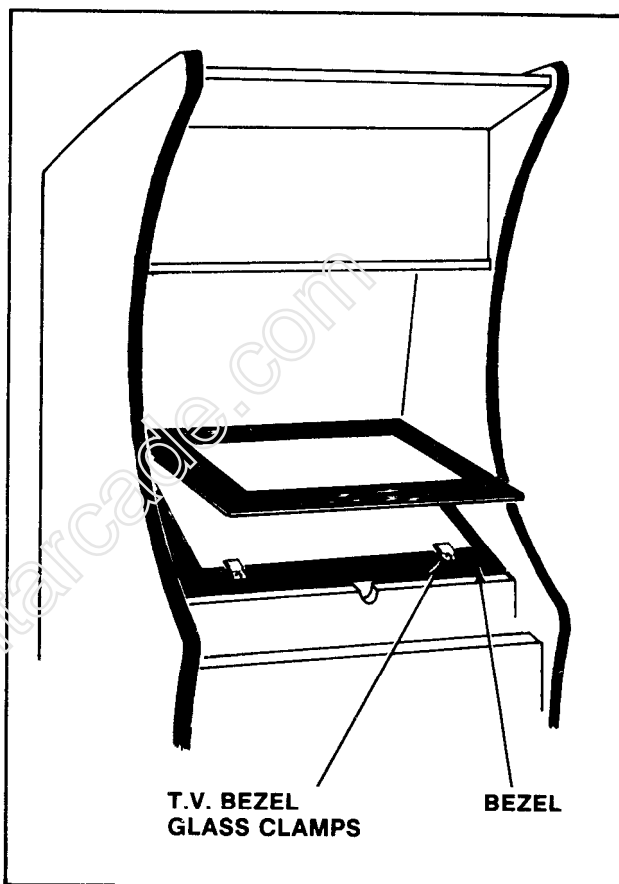


Figure 2-11 Removing the T.V. Bezel - Upright

### 2.6.2 MINI MODEL: (See Figure 2-12)

**NOTE:** In order to do this, the main-display-glass **MUST** be removed first. See the "Mini Model" procedure.

- ☐ Remove the screws which secure the T.V. bezel assembly and lift it out.

**NOTE:** Use the hole in the center of the main-display-glass support to grasp it.

- ☐ Reverse this procedure to reinstall the T.V. bezel assembly.

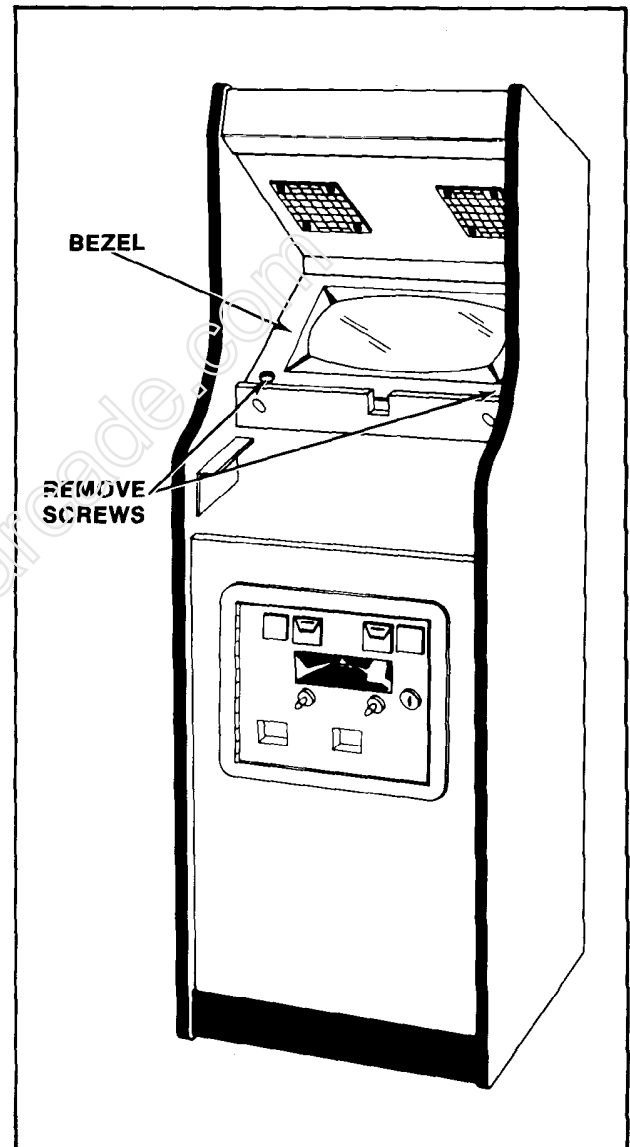


Figure 2-12 Removal of T.V. Bezel Assembly

### 2.6.3 COCKTAIL TABLE MODEL: (See Figure 2-13)

**NOTE:** In order to do this, the main-display-glass **MUST** be removed first. See "Cocktail Model" procedure.

- ❑ Loosen the screws which secure the T.V. bezel glass-clamps in place.  
Move the clamps to the side and the bezel glass may be removed.  
Remove the screws which secure the bezel assembly to the table top and the bezel with four bezel-glass-clamps may be removed.
- ❑ To reinstall the T.V. bezel assembly, simply reverse this procedure.

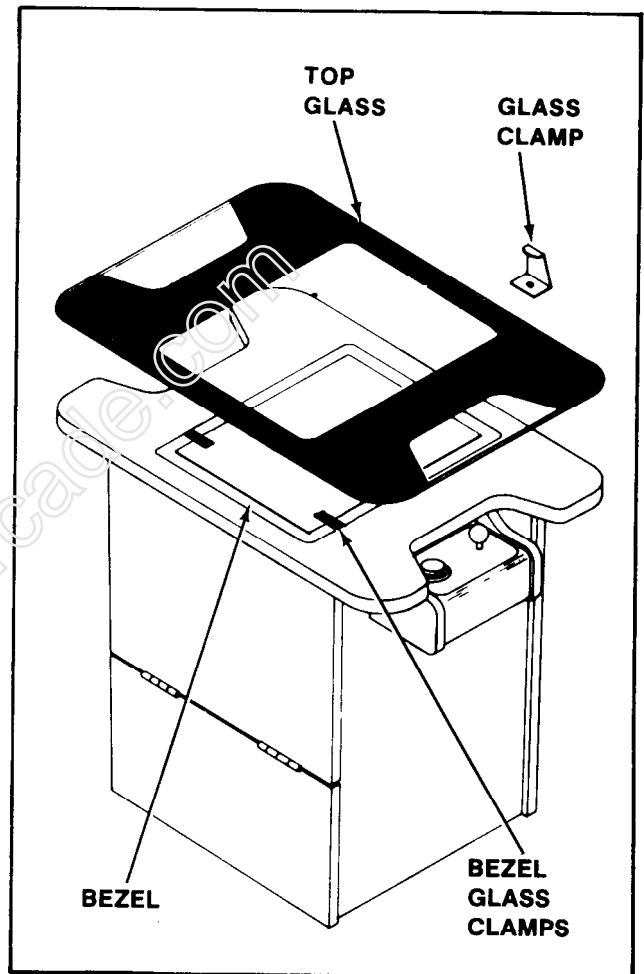


Figure 2-13 Removing the T.V. Bezel - Cocktail

## **2.7 T.V. MONITOR REPLACEMENT**

**2.7.1 Upright Models**

**2.7.2 Mini Models**

**2.7.3 Upright Models**

**WARNING:** High voltages may exist in any television unit, even with the power disconnected. Use **EXTREME CAUTION** and do not touch electrical parts or the T.V. yoke area with your hands or with metal objects held in your hands! In addition, **BE SURE TO USE HEAVY GLOVES** when handling the monitor. You could cut your hands on the metal T.V. chassis without such protection.

**DANGER:** The T.V. monitor **DOES NOT** contain an isolation transformer on its chassis (it is mounted instead on the floor of the cabinet). When servicing the monitor on a test bench, **YOU MUST ISOLATE THE MONITOR FROM AC VOLTAGE WITH AN ISOLATION TRANSFORMER.**

### 2.7.1 UPRIGHT MODEL: (See Figure 2-14)

- ☐ Turn power off to the game.
- ☐ Open the rear access door.
- ☐ Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**

Before removing the T.V. monitor, the main-display-glass and bezel **MUST** be removed. See above "Upright Model" procedure.

With the removal of only four bolts, the T.V. monitor and its mounting channels will be loose.

The monitor mounting channels slide on top of and against two metal guides mounted to the cabinet's right and left sides. The monitor is removed by sliding it out the back of the cabinet. See Figure 2-14.

- ☐ To reinstall the T.V. monitor, reverse this procedure.
- ☐ After replacing the T.V. monitor, be sure to run the game Self-Test.

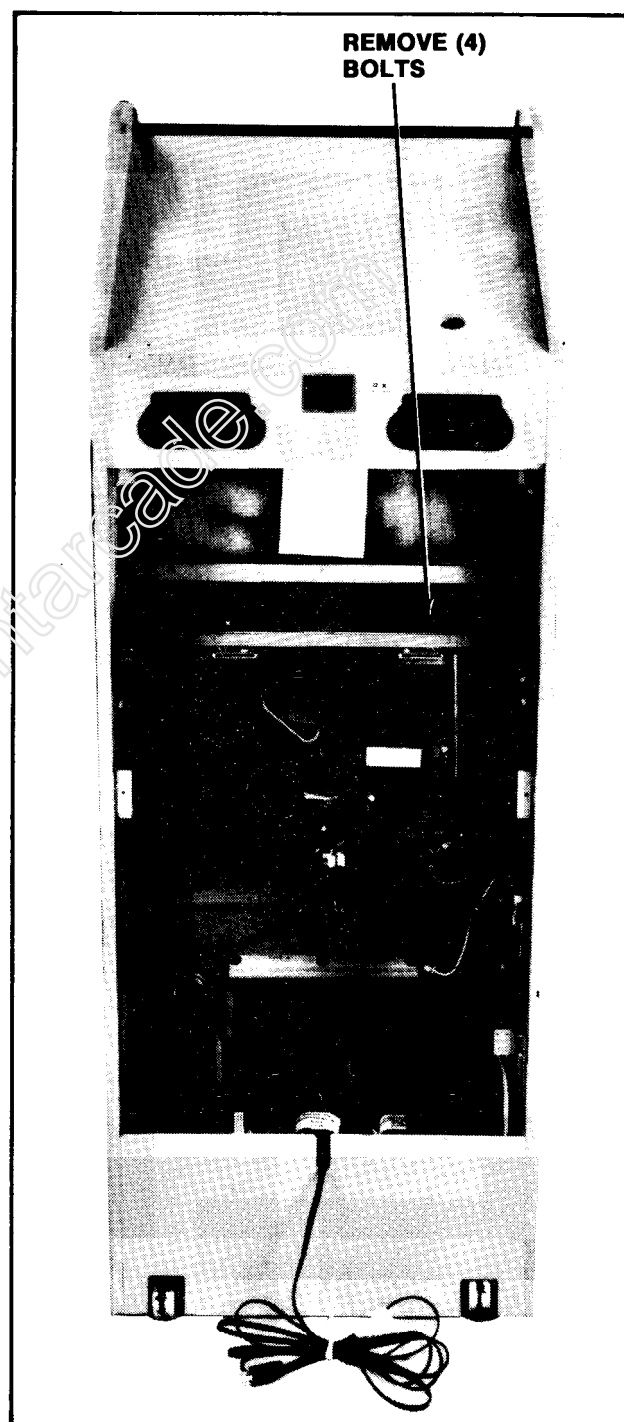


Figure 2-14 Removing the Monitor - Upright

**WARNING:** High voltages may exist in any television unit, even with the power disconnected. Use **EXTREME CAUTION** and do not touch electrical parts or the T.V. yoke area with your hands or with metal objects held in your hands!

In addition, **BE SURE TO USE HEAVY GLOVES** when handling the monitor. You could cut your hands on the metal T.V. chassis without such protection.

**DANGER:** The T.V. monitor **DOES NOT** contain an isolation transformer on its chassis (it is mounted instead on the floor of the cabinet). When servicing the monitor on a test bench, **YOU MUST ISOLATE THE MONITOR FROM AC VOLTAGE WITH AN ISOLATION TRANSFORMER.**

### 2.7.1 UPRIGHT MODEL: (See Figure 2-15) (Cont'd)

- ☐ Turn power off to the game.
- ☐ Open the rear access door.
- ☐ Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**  
Before removing the T.V. monitor, the main-display-glass **MUST** be removed. See above "Upright Model" procedure.
- ☐ With the removal of only four bolts, the T.V. monitor will be loose.

**CAUTION:** **BE SURE** to support the T.V. monitor from the rear while removing the four bolts so it will not fall out of the cabinet.

- ☐ The monitor mounting channels slide on top of and against two metal guides mounted to the cabinet's right and left sides. The monitor is removed by sliding it out the back of the cabinet.
- ☐ To reinstall the T.V. monitor, reverse this procedure.
- ☐ After replacing the T.V. monitor, be sure to run the game Self-Test.

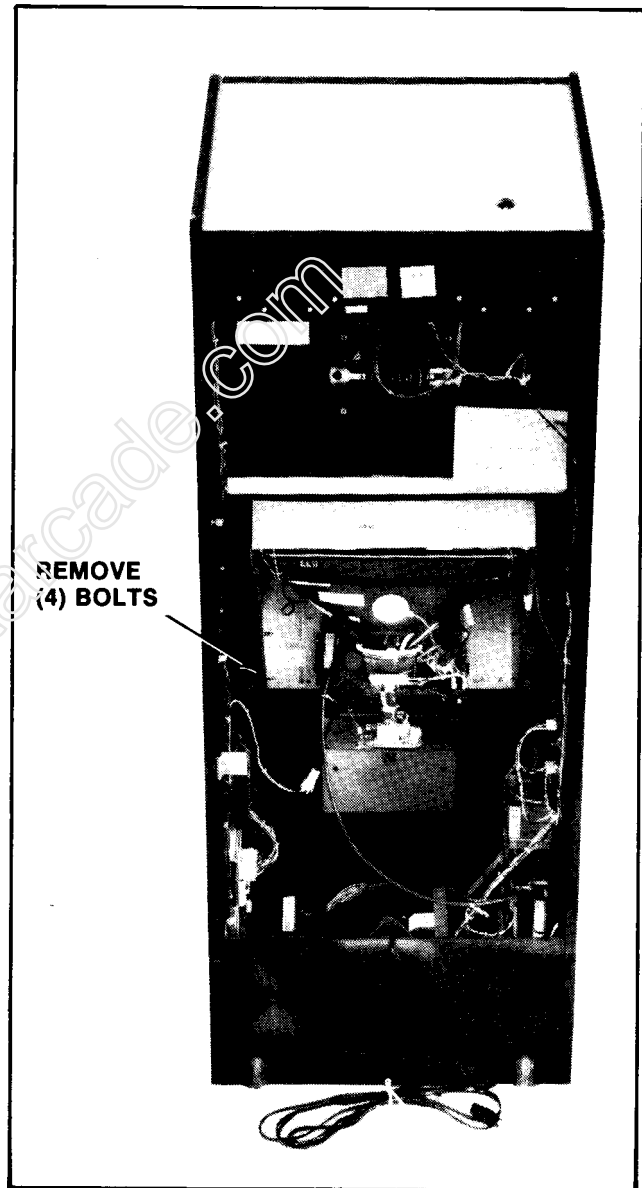


Figure 2-15 Removing the Monitor - Upright



**WARNING:** High voltages may exist in any television unit, even with the power disconnected. Use **EXTREME CAUTION** and do not touch electrical parts or the T.V. yoke area with your hands or with metal objects held in your hands!

In addition, **BE SURE TO USE HEAVY GLOVES** when handling the monitor. You could cut your hands on the metal T.V. chassis without such protection.

**DANGER:** The T.V. monitor **DOES NOT** contain an isolation transformer on its chassis (it is mounted instead on the floor of the cabinet). When servicing the monitor on a test bench, **YOU MUST ISOLATE THE MONITOR FROM AC VOLTAGE WITH AN ISOLATION TRANSFORMER.**

#### 2.7.2 MINI MODEL: (See Figure 2-16)

- ☐ Turn the power off to the game.
- ☐ Open the rear access door.
- ☐ Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**

Before removing the T.V. monitor, the main-display-glass and bezel **MUST** be removed. See above "Mini Model" procedure.

With the removal of only four bolts, the T.V. monitor will be loose.

**CAUTION:** BE SURE to support the T.V. monitor from the rear while removing the four bolts so it will not fall out of the cabinet.

The monitor is removed by supporting it and pulling straight back as shown in Figure 2-16.

- ☐ To reinstall the T.V. monitor, reverse this procedure.

After replacing the T.V. monitor, be sure to run the game Self-Test.

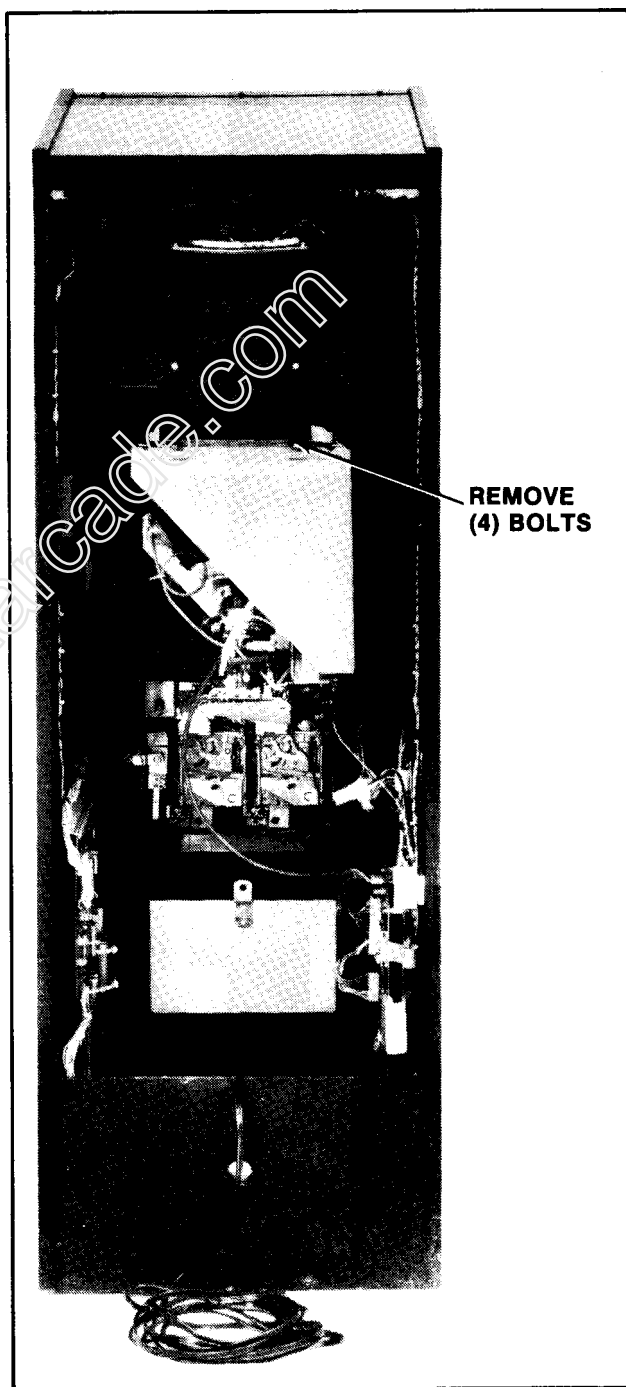


Figure 2-16 Removing the Monitor - Mini

**WARNING:** High voltages may exist in any television unit, even with the power disconnected. Use **EXTREME CAUTION** and do not touch electrical parts or the T.V. yoke area with your hands or with metal objects held in your hands! In addition, **BE SURE TO USE HEAVY GLOVES** when handling the monitor. You could cut your hands on the metal T.V. chassis without such protection.

**DANGER:** The T.V. monitor **DOES NOT** contain an isolation transformer on its chassis (it is mounted instead on the floor of the cabinet). When servicing the monitor on a test bench, **YOU MUST ISOLATE THE MONITOR FROM AC VOLTAGE WITH AN ISOLATION TRANSFORMER.**

### 2.7.3 COCKTAIL TABLE MODEL: (See Figure 2-18)

- ☐ Turn the power off to the game.
- ☐ Open the coin box door and release the two latches indicated in Figure 2-17.

**WARNING:** The right hand latch is very close to the **HIGH VOLTAGE** on the monitor.

- ☐ Once the latches are released, unhook them from their latch plates.
- ☐ Grasp the table top at "A" and open it as indicated in Figure 2-17.

**CAUTION:** Due to the weight of the monitor, **EXTREME CARE MUST** be taken when opening the cabinet.

- ☐ Remove the screws which hold the table top glass clamps in place.
- ☐ Remove the table top glass.
- ☐ Lift out the T.V. bezel assembly. See above "Cocktail" procedure.
- ☐ Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**
- ☐ Remove the screws holding the T.V. monitor chassis to the "L" by the door hinge(s). See Figure 2-18.
- ☐ Close the Cocktail Table and re-latch it.
- ☐ Remove the screws which secure the T.V. monitor mounting brackets to the edges of the slot cut in the table top. See Figure 2-18.
- ☐ Pry up the end of each monitor mounting bracket with a screwdriver or similar tool until you can grasp them both.

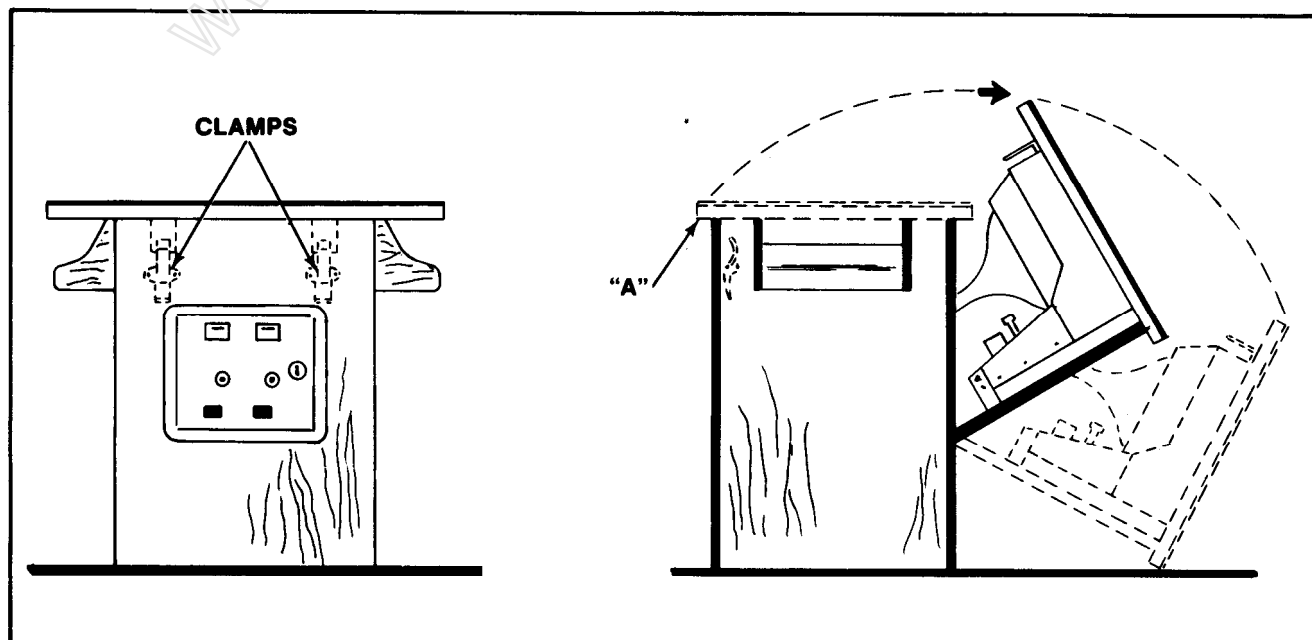


Figure 2-17 Opening the Cocktail Game

- ❑ Lift the T.V. monitor straight up and out of the table top being VERY CAREFUL not to bump the neck of the picture tube.
- ❑ To reinstall the T.V. monitor assembly, reverse this procedure.
- ❑ Be sure to check the clearance of the "L" brackets BEFORE setting the monitor into the table top.
- ❑ After replacing the T.V. monitor, be sure to run the game in Self-Test.

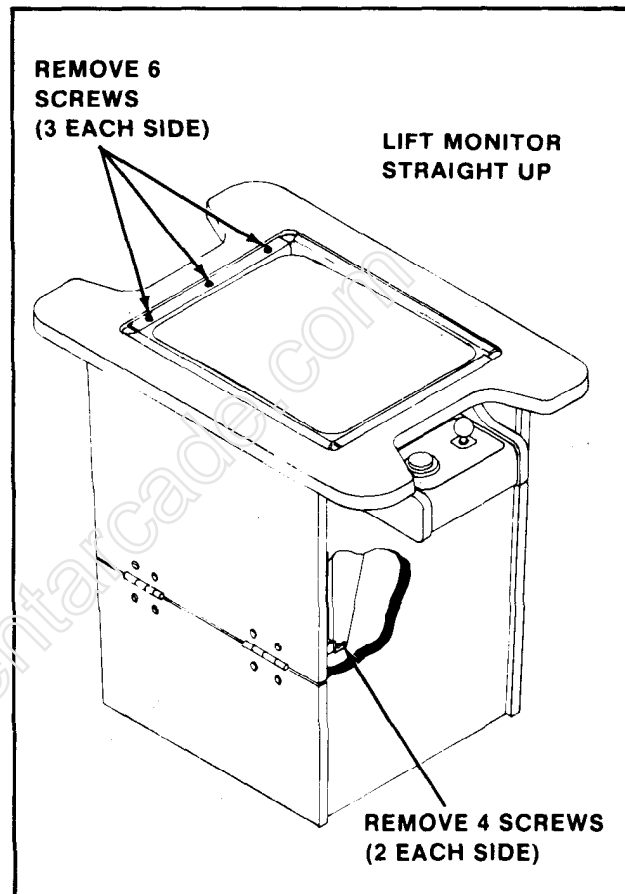


Figure 2-18 Removing the Monitor - Cocktail

## **2.8 PRINTED CIRCUIT BOARD (P.C.B.) REPLACEMENT**

**2.8.1 Upright Models**

**2.8.2 Mini Models**

**2.8.3 Cocktail Models**

**2.8.1 UPRIGHT MODEL:** (See Figure 2-19)

- ☐ Turn the power to the game off.
- ☐ Unlock and open the rear access door (game board) and the coin door (sound board).
- ☐ Disconnect the game board from all its cabling.
- ☐ Disconnect the sound board from all its cabling.
- ☐ Remove the indicated P.C.B. supports and lift the above P.C.B.'s out of the cabinet.
- ☐ Disconnect the power supply board from all its cabling, remove the P.C.B. supports indicated in Figure 2-19, and slide it out the back of the cabinet.
- ☐ To reinstall the above P.C.B.'s, reverse this procedure.

**NOTE:** P.C.B.'s are all keyed and will **ONLY** fit into their connectors one way without forcing them. The plugs on the cable harness which connect it to the P.C.B.'s are also keyed and will **ONLY** go onto their connectors one way without forcing them.

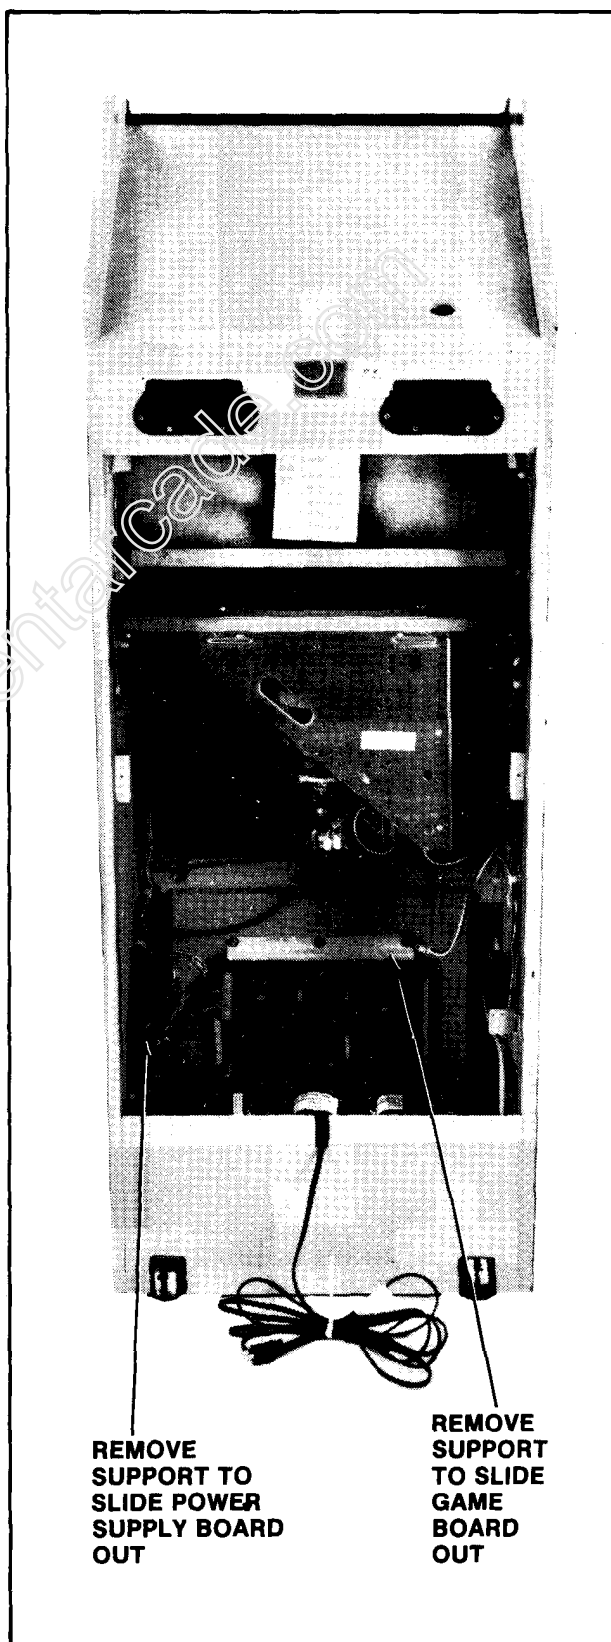


Figure 2-19 Removing P.C.B.'s - Upright

**NOTE:** P.C.B.'s are all keyed and will **ONLY** fit into their connectors one way without forcing them. The plugs on the cable harness which connect it to the P.C.B.'s are also keyed and will **ONLY** go onto their connectors one way without forcing them.

### 2.8.1 UPRIGHT MODEL: (See Figure 2-21) (Cont'd)

- ☐ Turn the power to the game off.
- ☐ Unlock and open the coin door.
- ☐ Reach inside and release the game's front access door locking latches. See Figure 2-20 and the drawing on top of the coin box lid.
- ☐ Slide out the utility shelf. See Figure 2-21.
- ☐ Mounted on the utility shelf is the commercial card rack with six cards in it.
- ☐ Mounted next to the commercial card rack is its power supply P.C.B.
- ☐ To remove the cards from the commercial card rack, simply lift on their extractors and remove them.

**NOTE:** BEFORE removing the "GAME PCB", be sure to disconnect it from all its cabling.

- ☐ To remove the power supply PCB for the commercial card rack. See Figure 2-21.

Disconnect it from all its cabling, remove the screws which secure the top PCB support to its mounting bracket (be careful not to lose the washers), and lift it out.

- ☐ To reinstall the above P.C.B.'s, reverse this procedure.

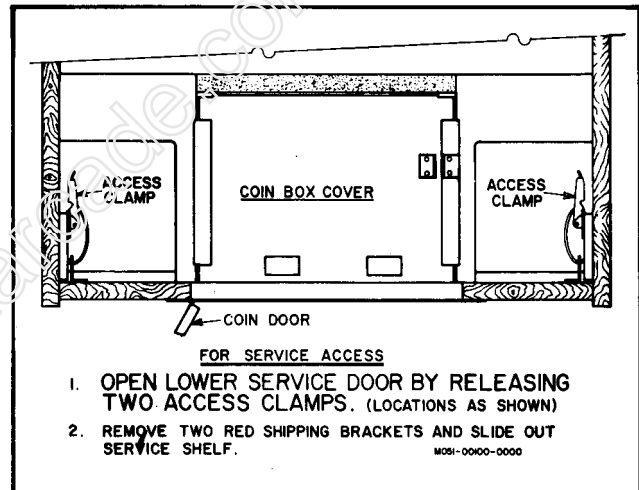


Figure 2-20 Opening the Front Access Door - Upright

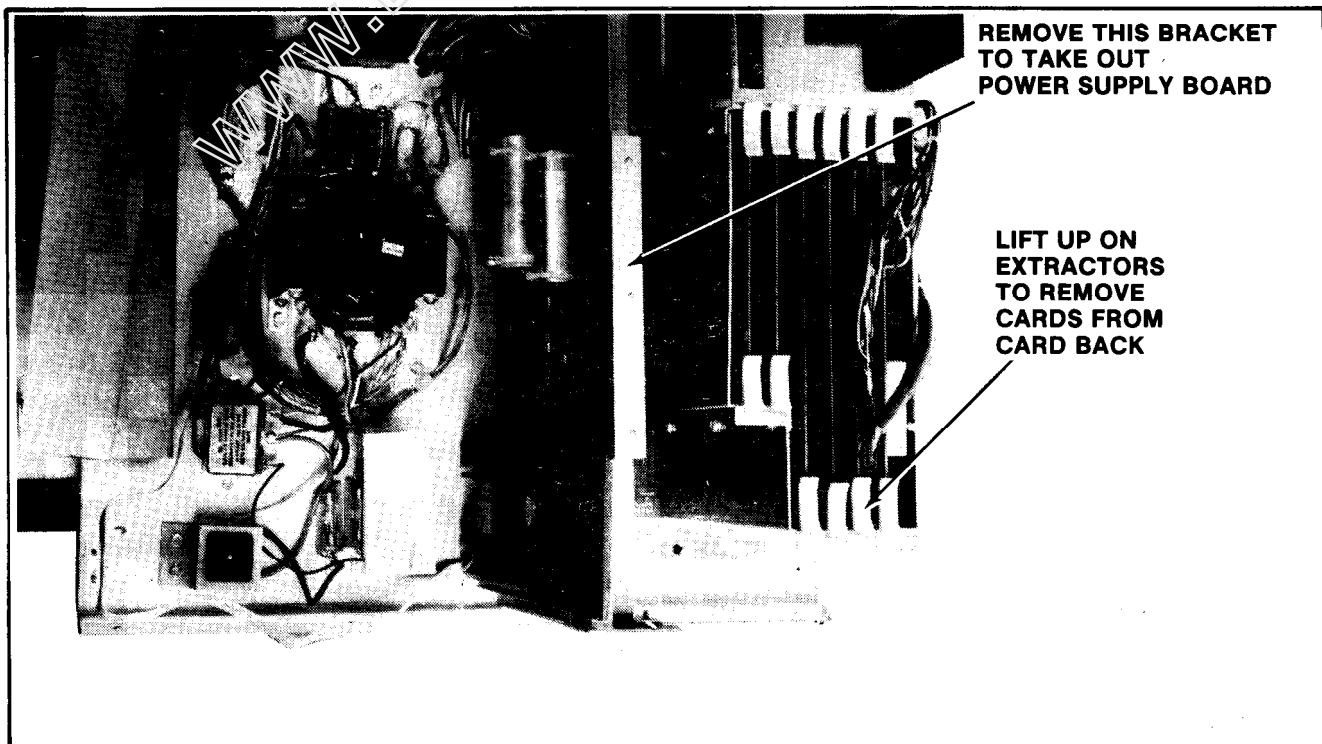


Figure 2-21 Removing Printed Circuit Boards - Upright

### 2.8.2 MINI MODEL: (See Figure 2-22)

- ☐ Turn the power off to the game.
- ☐ Unlock and open the rear access door.
- ☐ Disconnect the game board from all its cabling.
- ☐ Disconnect the sound board from all its cabling.
- ☐ Remove the indicated P.C.B. supports and lift the above P.C.B.'s out of the cabinet.
- ☐ Disconnect the power supply board from its cabling, remove the P.C.B. supports indicated in Figure 2-22 and slide it out the back of the cabinet.
- ☐ To reinstall the above P.C.B.'s, reverse this procedure.

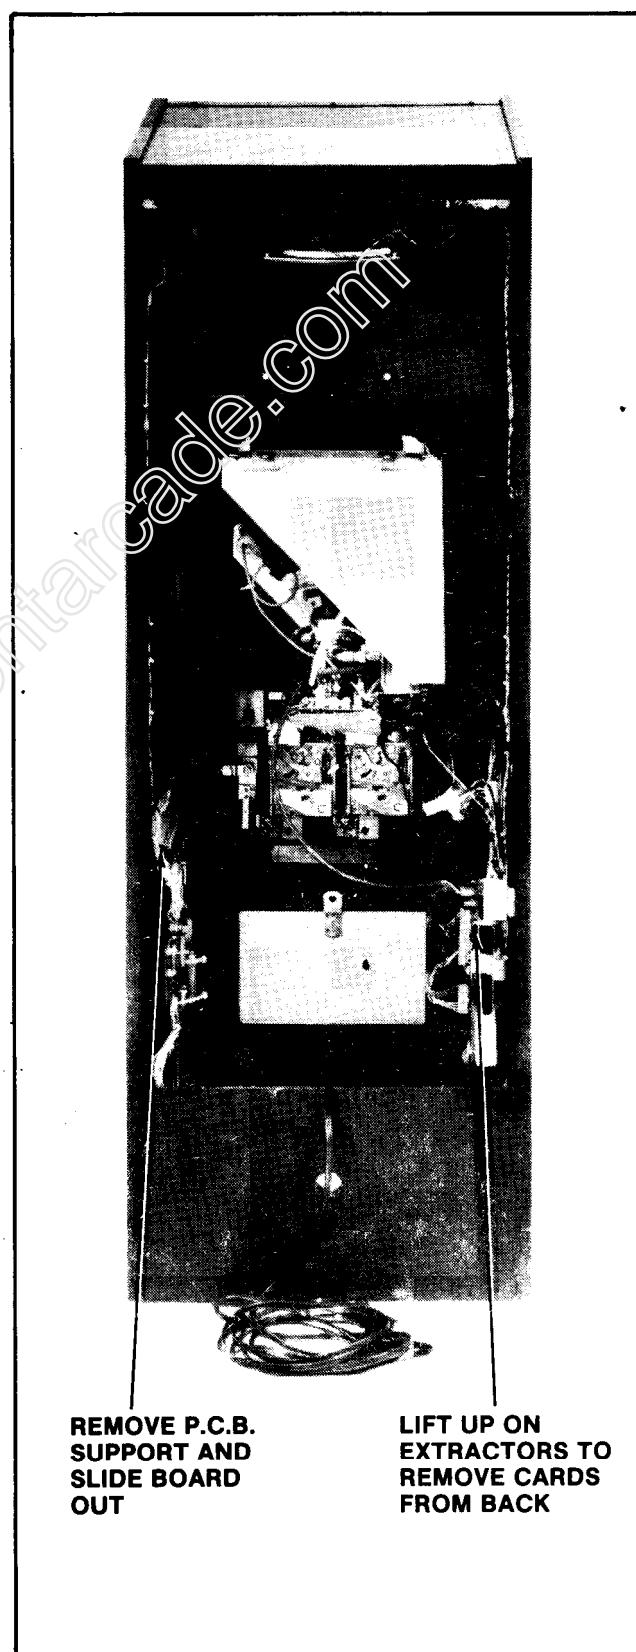


Figure 2-22 Removing P.C.B.'s - Mini

### 2.8.2 MINI MODEL: (See Figure 2-23) (Cont'd)

- ☐ Turn the power off to the game.
- ☐ Unlock and open the rear access door.
- ☐ Disconnect the "GAME PCB" from all its cabling.
- ☐ To remove any of the PCB's from the commercial card rack, just lift up on their extractors and slide them up and out. They may now be removed from the cabinet.
- ☐ Disconnect the power supply board from all its cabling, remove the P.C.B. supports indicated in Figure 2-23, and slide it out the back of the cabinet.
- ☐ To reinstall the above P.C.B.'s reverse this procedure.



Figure 2-23 Removing Printed Circuit Boards - Mini



**2.8.3 COCKTAIL TABLE MODEL:** (See Figure 2-24)

- ☐ Turn the power off to the game.
- ☐ Open the cabinet.  
Open the coin box door and release the two latches indicated in Figure 2-17.

**WARNING:** The right hand latch is very close to the HIGH VOLTAGE on the monitor.

Once they're released, unhook them from their latch plates.

- ☐ Grasp the table top at "A" and open it as indicated in Figure 2-17.

**CAUTION:** Due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.

- ☐ To remove the power supply board. See Figure 2-24.

Disconnect it from all its cabling.

Remove the two smallest P.C.B. supports.

Once these are removed, the power supply can be lifted out the top of the cabinet.

To reinstall the power supply board, reverse this procedure.

- ☐ To remove the game and sound boards. See Figure 2-24.

Disconnect the game board from all its cabling.

Disconnect the sound board from all its cabling.

- ☐ Remove the indicated P.C.B. supports and lift the above P.C.B.'s out of the cabinet.

To reinstall the game and sound boards, reverse this procedure.

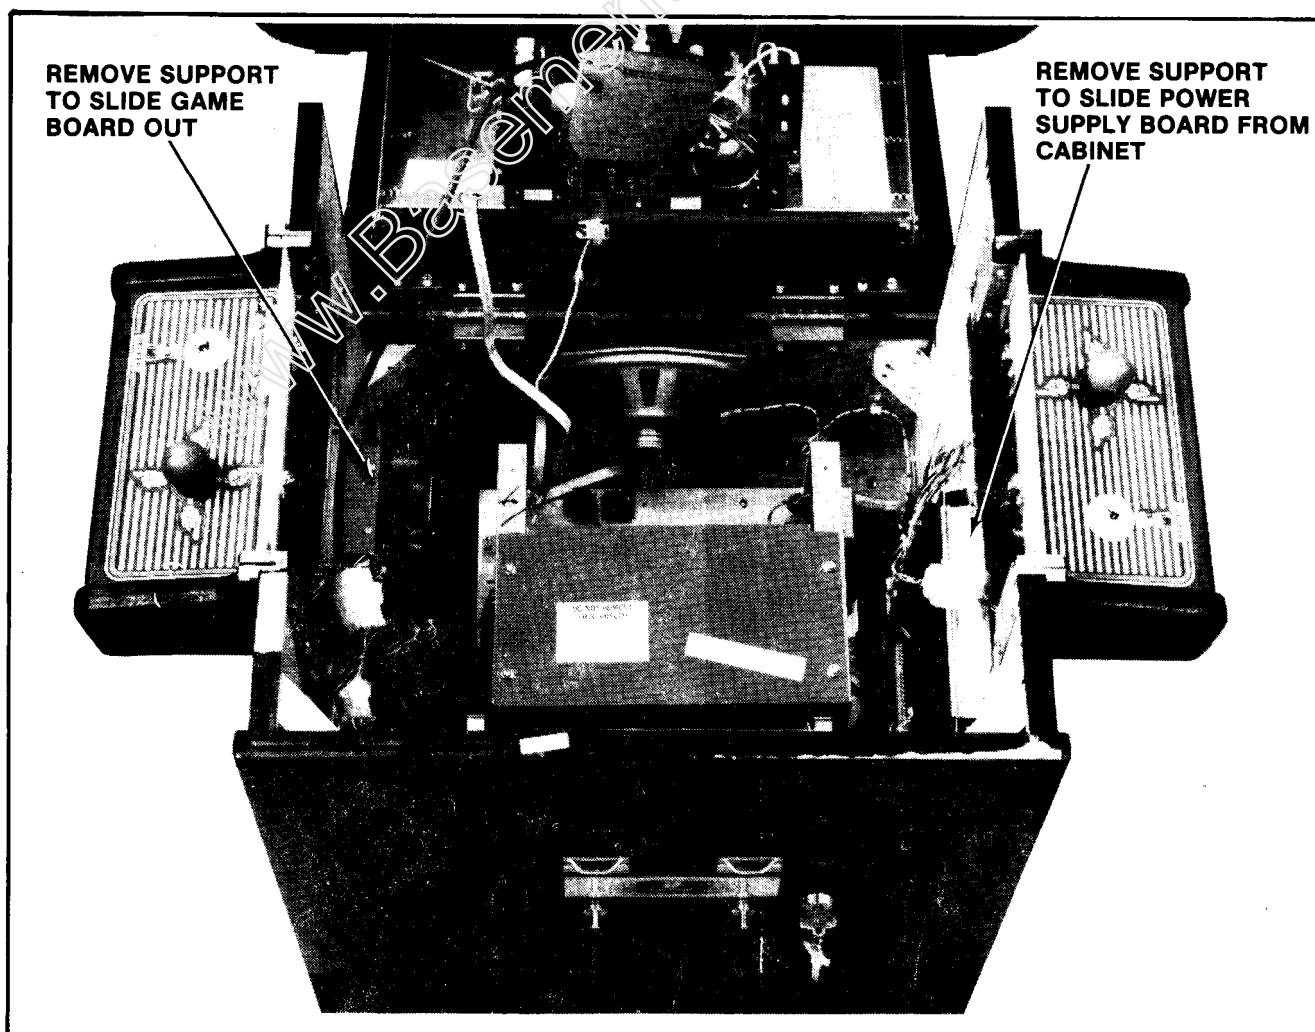


Figure 2-24 Removing P.C.B's - Cocktail

**2.8.3 COCKTAIL TABLE MODEL:** (See Figure 2-25) (Cont'd)

- ☐ Turn the power off to the game.
- ☐ Open the cabinet:  
Open the coin box door and release the two latches indicated in Figure 2-17.

**WARNING:** The right hand latch is very close to the HIGH VOLTAGE on the monitor. BE CAREFUL!!

Once they're released, unhook them from their latch plates.

- ☐ Grasp the table top at "A" and open it as indicated in Figure 2-17.

**CAUTION:** Due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.

- ☐ To remove the power supply board. See Figure 2-25.  
Disconnect it from all its cabling.  
Remove the two smallest P.C.B. supports.  
Once these are removed, the power supply can be lifted out the top of the cabinet.  
To reinstall the power supply board, reverse this procedure.
- ☐ To remove the PCB's from the commercial card rack. See Figure 2-25.  
Disconnect the "GAME PCB" from all its cabling.  
To remove any of the PCB's from the commercial card rack, just lift up on their extractors and slide them up and out.  
They may now be removed from the cabinet.
- ☐ To reinstall these PCB's, reverse this procedure.

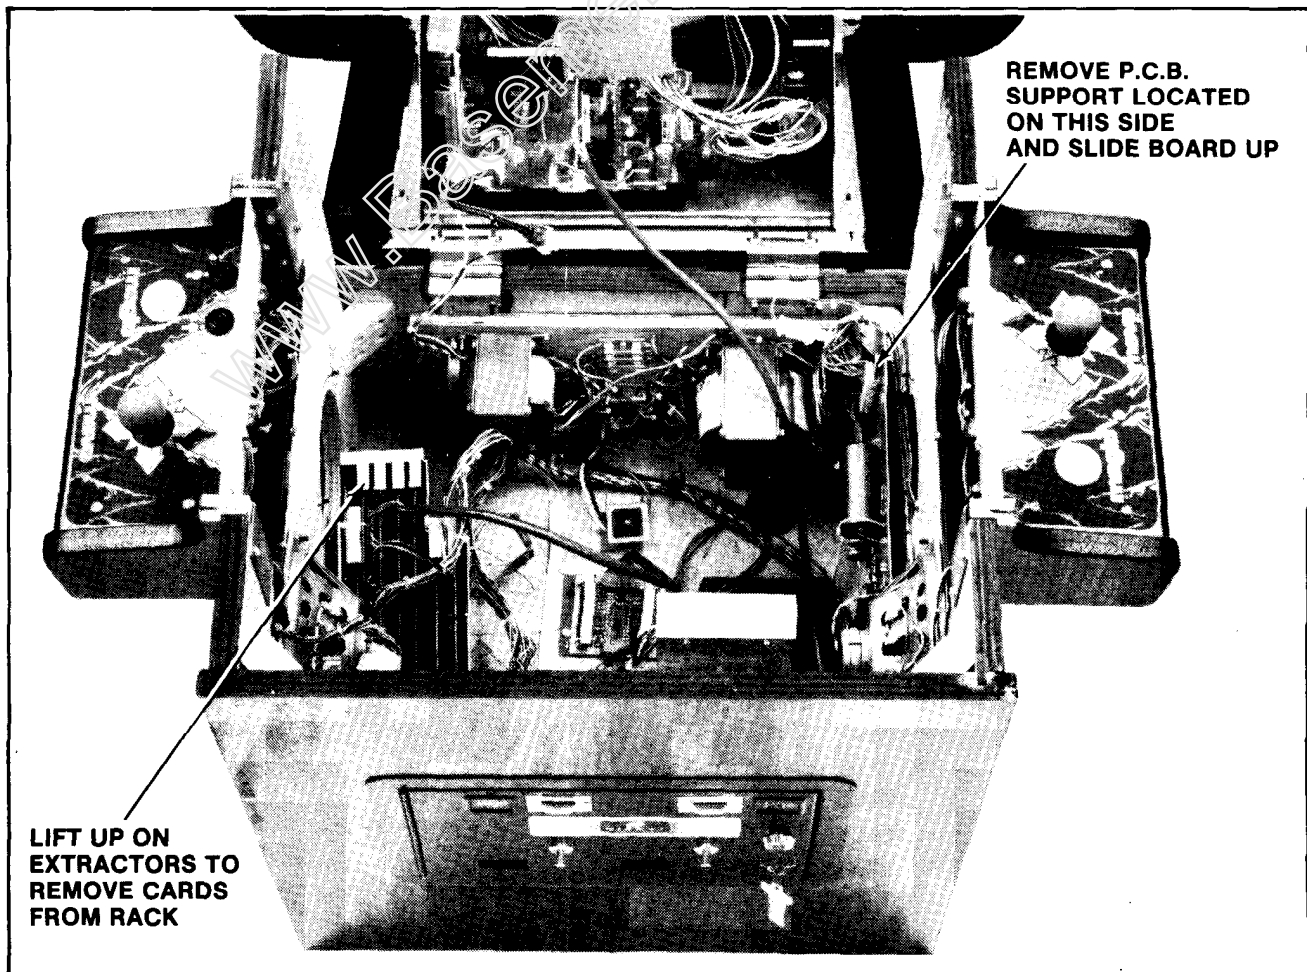


Figure 2-25 Removing Printed Circuit Boards - Cocktail

## **2.9 OPENING THE UPPER ATTRACTION PANEL**

### **2.9.1 Upright Models**

### **2.9.2 Mini Models**

**(THE COCKTAIL MODEL HAS NO BACK—LIT ATTRAC—  
TION PANEL.)**

**2.9.1 UPRIGHT MODEL:** (See Figure 2-26)

- ☐ Turn the power to the game off.
- ☐ Opening the attraction panel:  
Remove the screws which secure the top bracket in place. (They are on its top side.) See Figure 2-26.  
Remove the top bracket and slide up the attraction panel. This exposes the attraction panel fluorescent light tube and its mounting bracket assembly.
- ☐ To reinstall the attraction panel, reverse this procedure.

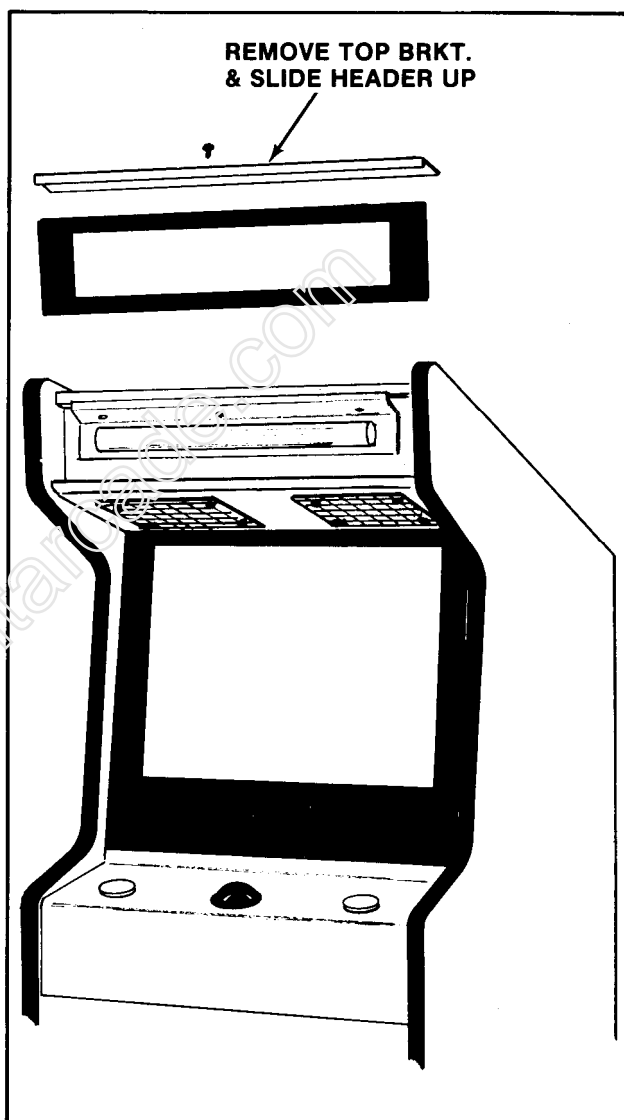


Figure 2-26 Opening the Attraction Panel - Upright

## 2.9 OPENING THE ATTRACTION PANEL (Cont'd)

UPRIGHT

### 2.9.1 UPRIGHT MODEL: (See Figure 2-27) (Cont'd)

- ☐ Turn the power to the game off.
- ☐ Opening the attraction panel:  
Remove the screws which secure the bottom bracket in place. (They are on its bottom side.) See Figure 2-27.  
Remove the lower bracket and slide down the attraction panel. This exposes the attraction panel fluorescent light tube and its mounting bracket assembly.
- ☐ To reinstall the attraction panel, reverse this procedure.

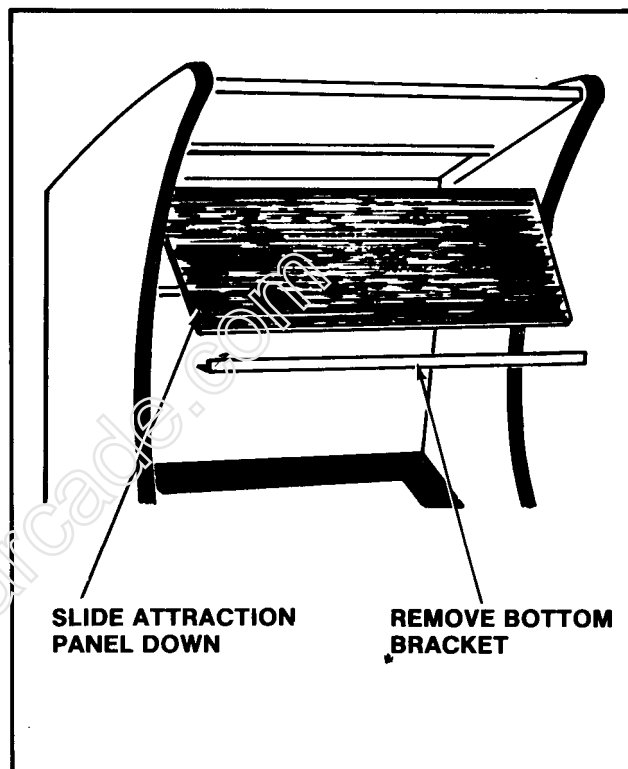


Figure 2-27 Opening the Attraction Panel  
- Upright

## 2.9 OPENING THE ATTRACTION PANEL (Cont'd)

UPRIGHT

### 2.9.1 UPRIGHT MODEL: (See Figure 2-28) (Cont'd)

- ☐ Turn the power to the game off.
- ☐ Opening the attraction panel:  
Remove the screws which secure the top bracket in place. (They are on its top side.) See Figure 2-28.  
Remove the top bracket and slide up the attraction panel. This exposes the attraction panel fluorescent light tube and its mounting bracket assembly.
- ☐ To reinstall the attraction panel, reverse this procedure.

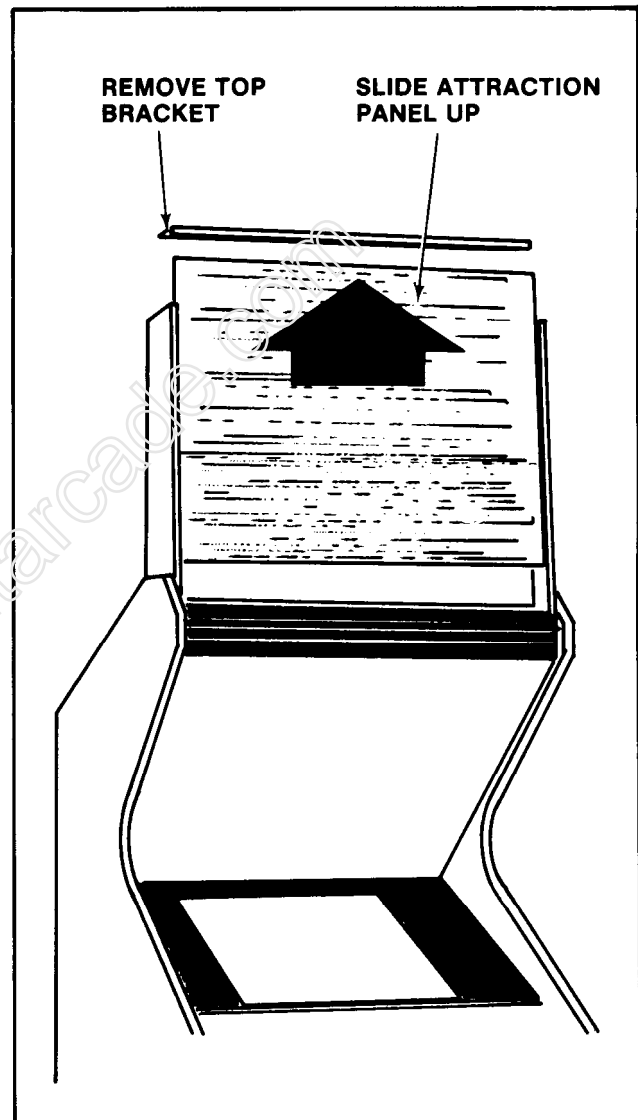


Figure 2-28 Opening the Attraction Panel  
- Upright

## 2.9.2 MINI MODEL: (See Figure 2-29)

- ☐ Turn the power off to the game.
- ☐ Remove the screws which secure the top bracket in place. (They are on its top side.)
- ☐ Remove the top bracket and slide up the attraction panel. This exposes the attraction panel light bulbs and their mounting board.
- ☐ To reinstall the attraction panel, reverse this procedure.

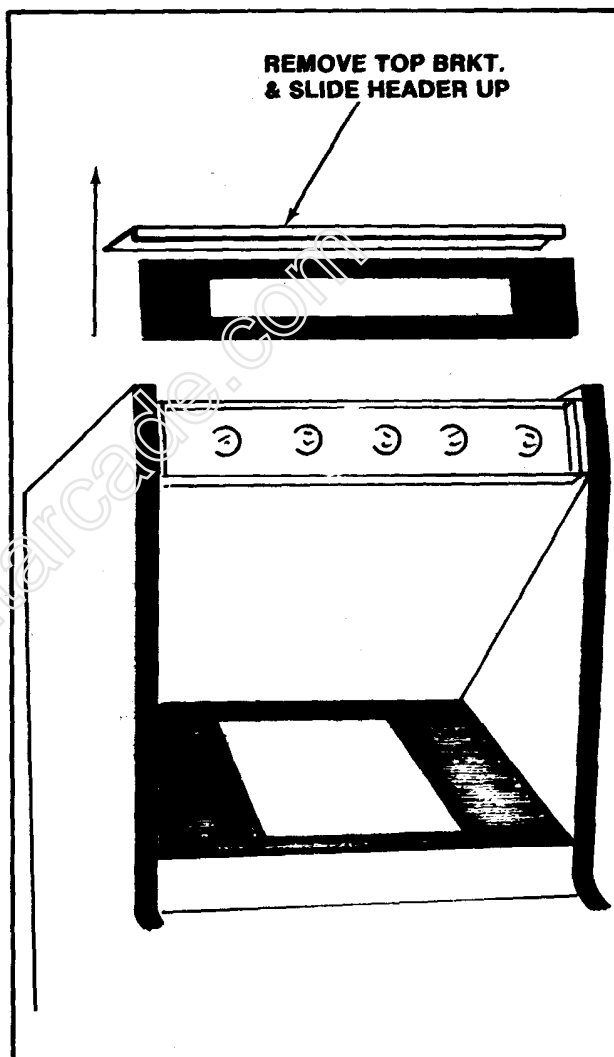


Figure 2-29 Opening the Attraction Panel - Mini

### 2.9.2 MINI MODEL: (See Figure 2-30) (Cont'd)

- ☐ Turn the power off to the game.
- ☐ Remove the screws from the top and bottom of the formed attraction panel.
- ☐ Remove the formed attraction panel by pulling it straight away from the cabinet. This exposes the attraction panel light bulbs and their mounting board.
- ☐ To reinstall the attraction panel, reverse this procedure.

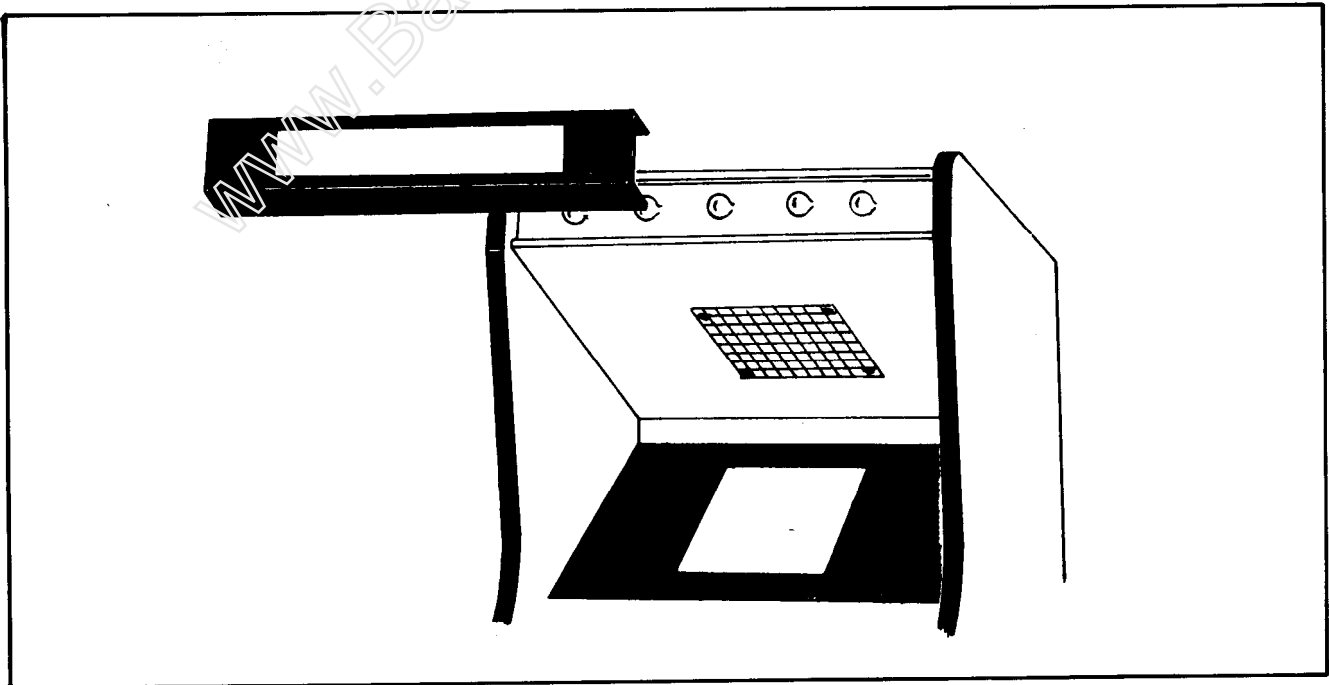


Figure 2-30 Removing the Attraction Panel - Mini



## **2.10 REPLACING THE GAMES UPPER ATTRACTION PANEL LIGHTING**

**2.10.1 Upright Models**

**2.10.2 Mini Models**

**(THE COCKTAIL MODELS HAVE NO BACK-LIT  
ATTRACTION PANEL)**

### 2.10.1 UPRIGHT MODEL:

- ☐ Turn the power to the game off.

**NOTE:** In order to do this, the attraction panel **MUST** be removed first. See "Upright Model" procedure.

- ☐ The fluorescent light tube may be replaced at this time. BE CAREFUL NOT TO DROP IT.

**WARNING:** If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.

- ☐ Replacing the fluorescent light tube starter. See Figure 2-31.

**Be sure the power to the game has been turned off.**


Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

- ☐ To replace the fluorescent light tube starter, reverse this procedure.

- ☐ Replacement of the fluorescent tube mounting bracket assembly. See Figure 2-32.

**Be sure the power is off to the game.**


Disconnect it from its power cable.

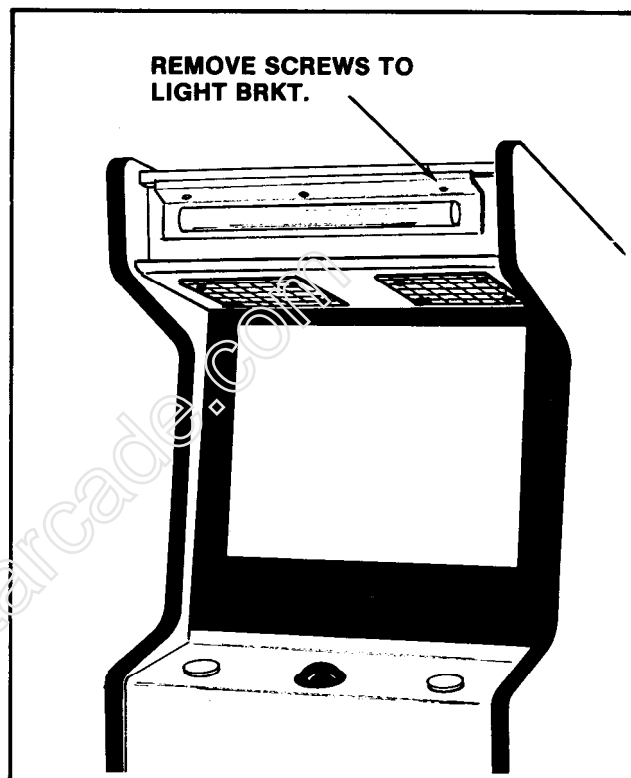

**Figure 2-32 Replacing Fluorescent Light Mounting Bracket - Upright**

Remove the screws which secure it and gently slide it out the front of the cabinet, being careful not to catch its power cable on anything.

- ☐ To reinstall the fluorescent tube mounting bracket assembly, reverse this procedure.

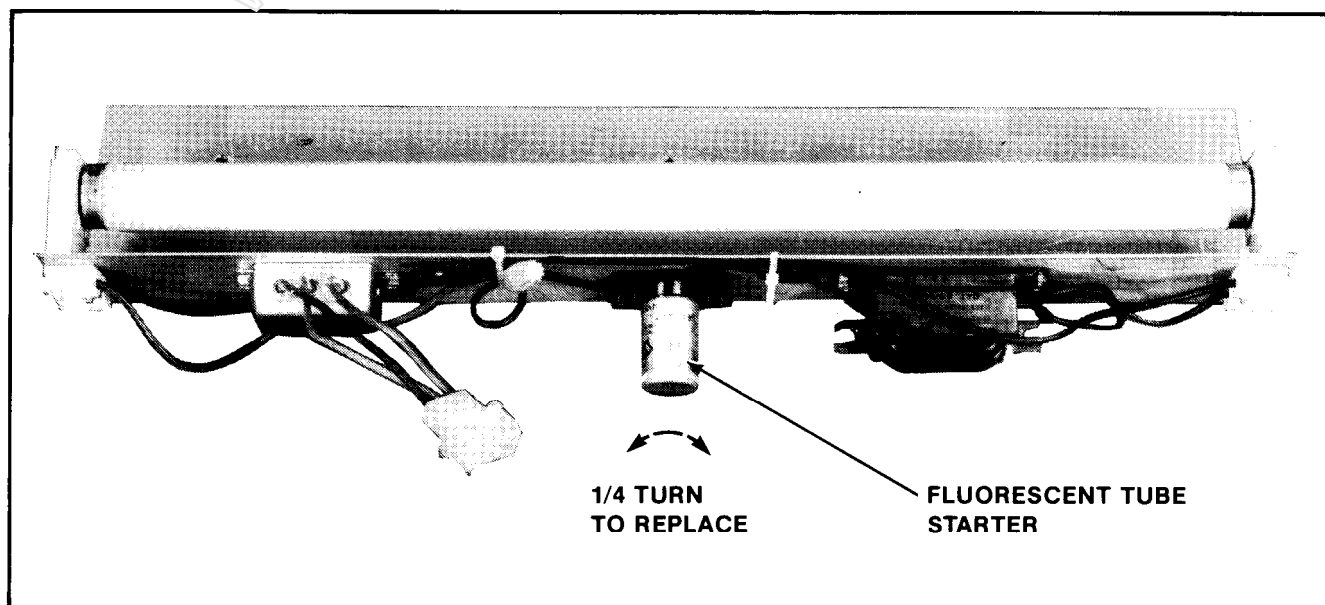

**Figure 2-31 Replacing Fluorescent Tube Starter**

## 2.10.1 UPRIGHT MODEL: (Cont'd)

- Turn the power to the game off.

**NOTE:** In order to do this, the attraction panel **MUST** be removed first. See "Upright Model" procedure.

- The fluorescent light tube may be replaced at this time. BE CAREFUL NOT TO DROP IT.

**WARNING:** If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.

- Replacing the fluorescent light tube starter. See Figure 2-34.

**Be sure the power to the game has been turned off.**

Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

- To replace the fluorescent light tube starter, reverse this procedure.
- The ultraviolet light tube may be replaced at this time by removing the rear access door of the game and the back scenery panel if necessary. See Figure 2-35. BE CAREFUL NOT TO DROP IT.

**WARNING:** If you drop an ultraviolet light tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any ultraviolet tube.

- Replacing the ultraviolet light tube starter. See Figure 2-34.

**Be sure the power to the game has been turned off.**

Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

- To replace the ultraviolet light tube starter, reverse this procedure.
- Removing the light board assembly: See Figure 2-33

The attraction panel, the rear access door of the game, and, if necessary, the back scenery panel **MUST** be removed first. This will enable you to reach all the necessary areas where cables **MUST** be disconnected.

Disconnect the light board assembly from all its cabling. There is one plug at the upper right and upper left corners of the rear of the cabinet. There is also a small plug right at the ON/OFF switch. And **DO NOT FORGET TO DISCONNECT THE GROUND WIRE LUG FROM THE ON/OFF SWITCH!**

Remove the screws which secure the light board assembly to the cabinet.

The light board assembly is now free and can be slid out through the hole in the front of the game where the attraction panel was mounted.

- To reinstall the light board assembly, reverse this procedure.
- Replacement of the fluorescent and ultraviolet tube mounting bracket assemblies. Disconnect it from its power cable. Remove the screws which secure them to the speaker board assembly.
- To reinstall the fluorescent ultraviolet tube mounting bracket assemblies, reverse this procedure.

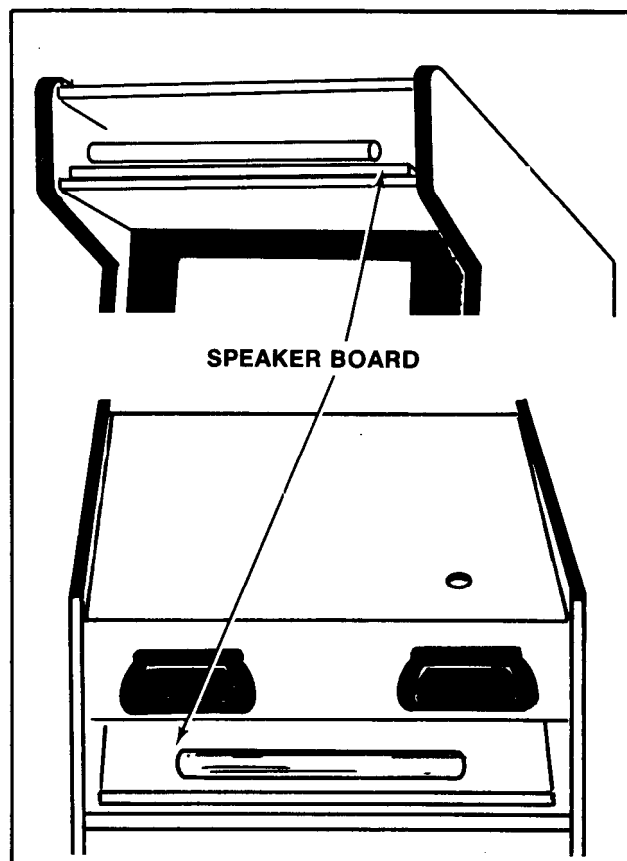


Figure 2-33 Servicing Attraction Panel Lighting  
- Upright

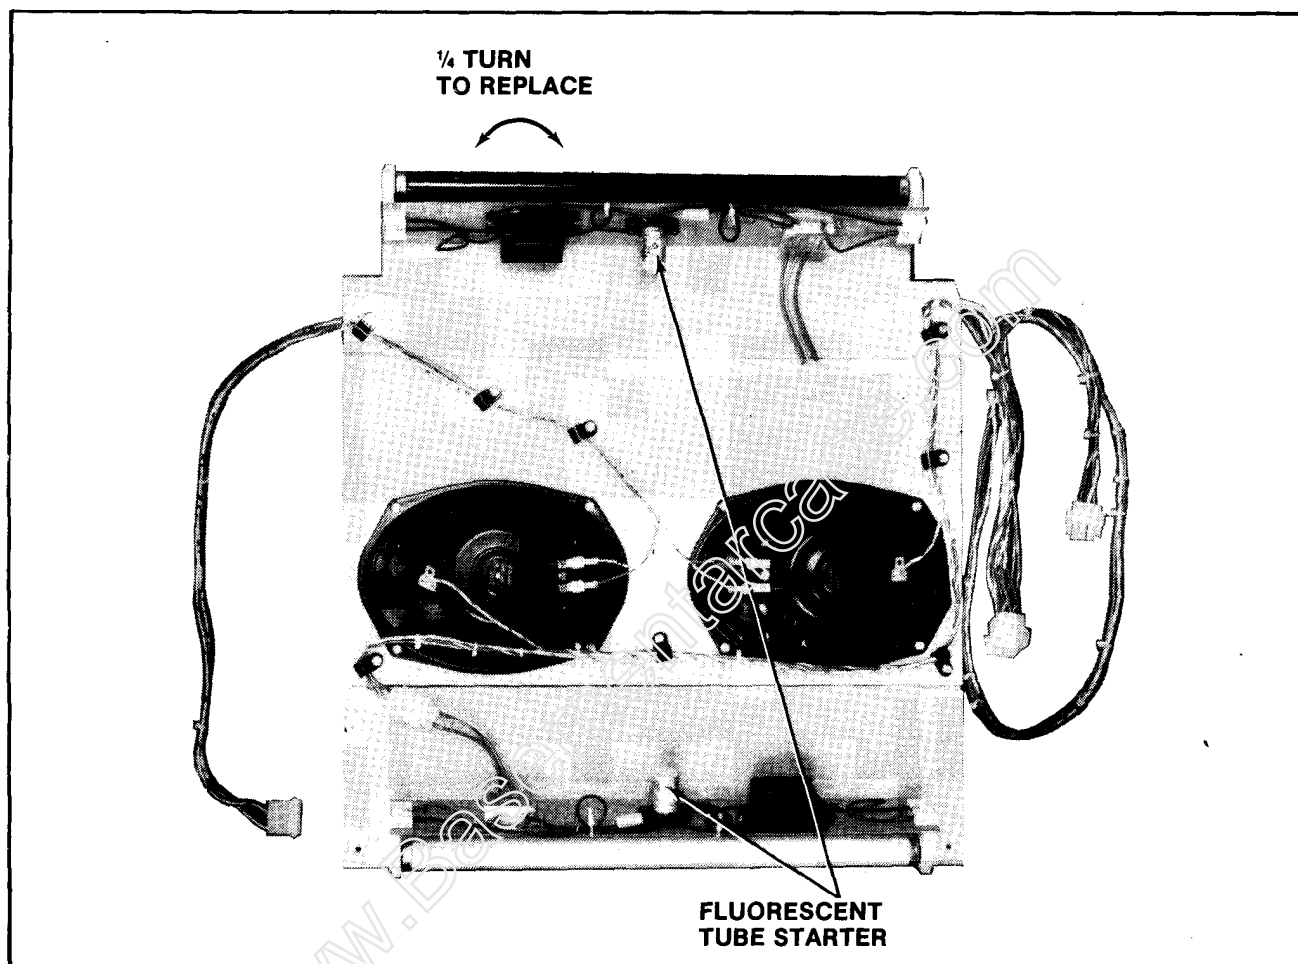


Figure 2-34 Replacing Fluorescent Tube Starter

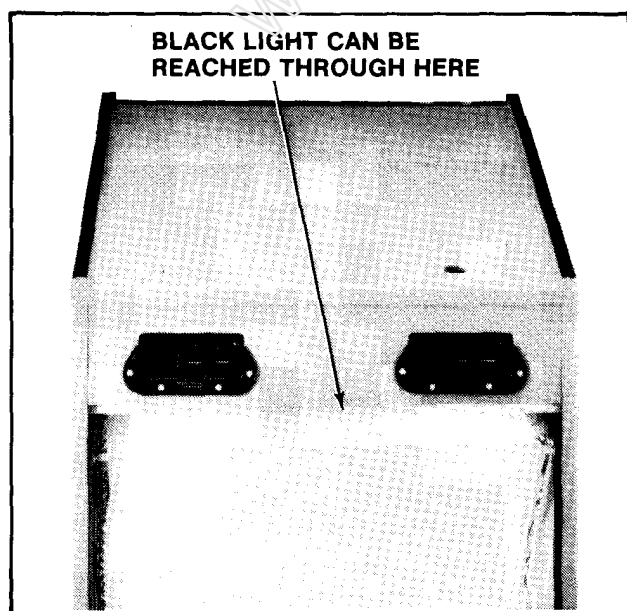


Figure 2-35 Replacing Black Light

**2.10.2 MINI MODEL:** (See Figure 2-36)

- ☐ Turn the power off to the game.

**NOTE:** In order to do this, the attraction panel **MUST** be removed first. See "Mini Model" procedure.

- ☐ To service the light bulbs and their mounting board:

Turn the power to the game back on so you can see which bulbs are burnt out.

Mark the burnt out bulbs and **turn the power to the game back off again.**

To replace the burnt out bulbs, grasp them gently and pull straight out.

The new bulbs are gently pushed into the empty sockets.


- ☐ To completely replace the light bulb mounting board:

Open the cabinet rear access door and unplug the mounting board from its power cable.

Remove the screws that hold the mounting board to the cabinet.

Gently slide the mounting board out the front of the cabinet being careful not to catch its cable on anything.

- ☐ To reinstall the above removed items, reverse this procedure.

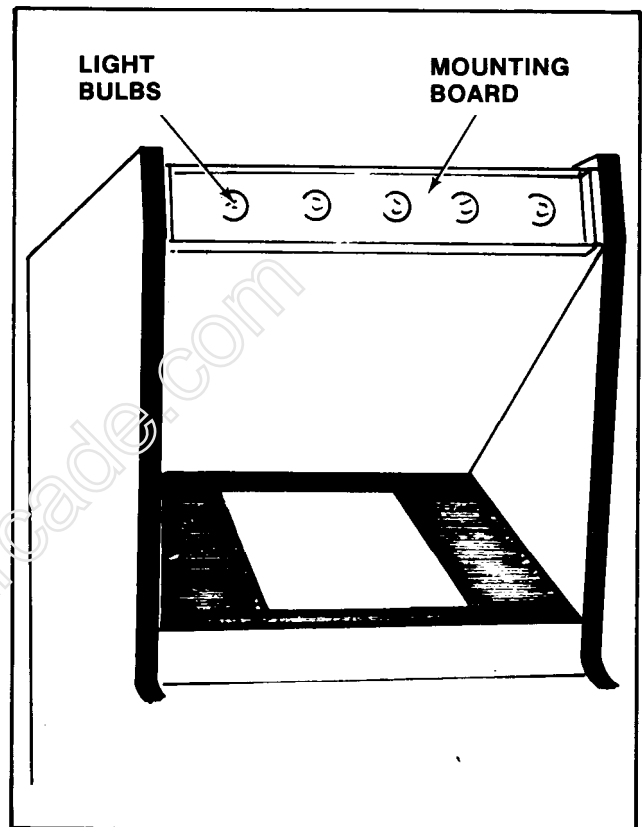

**Figure 2-36 Servicing Attraction Panel Lighting**

## **2.11 SPEAKER REPLACEMENT**

**2.11.1 Upright Models**

**2.11.2 Mini Models**

**2.11.3 Cocktail Models**

**2.11.1 UPRIGHT MODEL:** (See Figure 2-37)

- ☐ Turn the power to the game off.

**NOTE:** In order to do this, the attraction panel and fluorescent light fixture **MUST** be removed first. See "Upright Model" procedure.

- ☐ Replacing the speaker.

**Be sure the power is off to the game.**

Remove the attraction panel and disconnect the speaker from its cabling.

Remove the nuts and bolts which secure the speaker and speaker grill in place and set them and the speaker grill aside.

Once the bolts which secure the speaker in place are removed, the speaker may be removed through the opening where the attraction panel was.

- ☐ Reverse this procedure to reinstall the speaker.

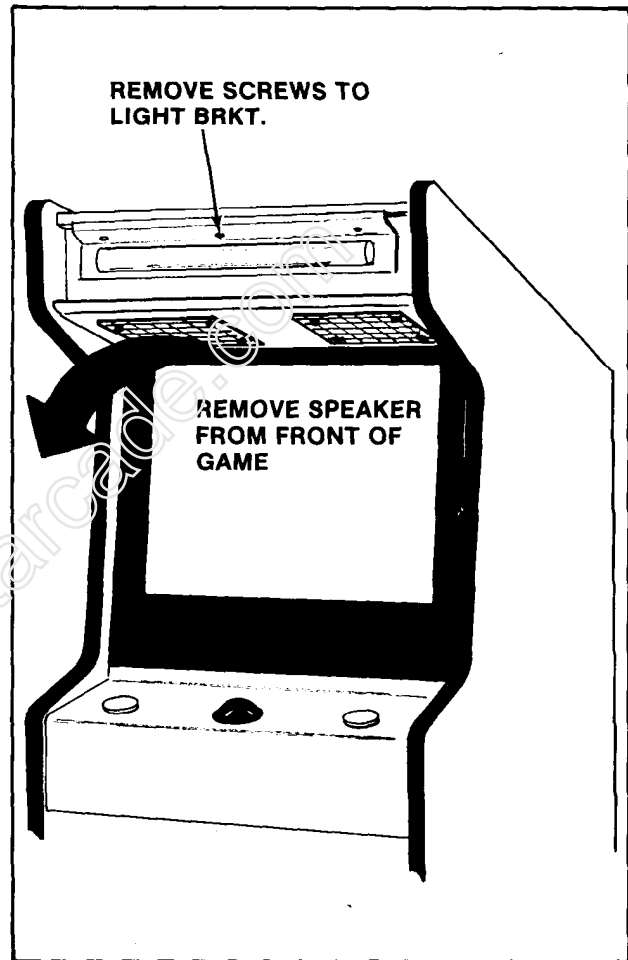


Figure 2-37 Speaker Replacement

### 2.11.1 UPRIGHT MODEL: (See Figure 2-38) (Cont'd)

**NOTE:** In order to do this, the attraction panel **MUST** be removed first. See "Upright Model" procedure.

- ☐ Replacing the speaker.
- ☐ **Be sure the power is off to the game.**

Remove the attraction panel and disconnect the speaker from its cabling.

Remove the nuts and bolts which secure the speaker and speaker grill in place and set them and the speaker grill aside.

Once the bolts which secure the speaker in place are removed, the speaker may be removed through the opening where the attraction panel was.

- ☐ Reverse this procedure to reinstall the speaker.

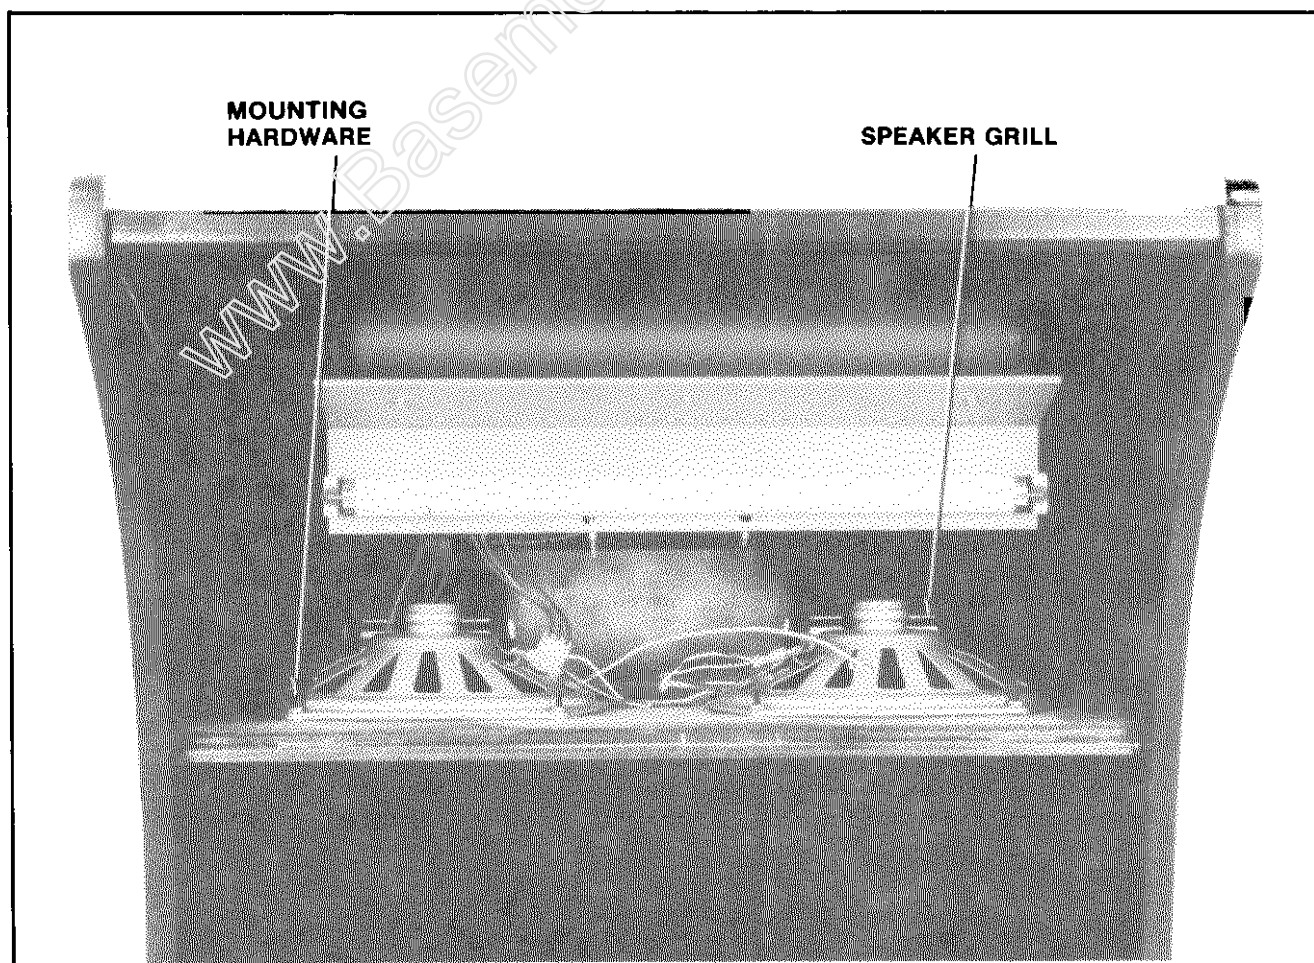


Figure 2-38 Speaker Replacement



## 2.11 SPEAKER REPLACEMENT (Cont'd)

UPRIGHT

### 2.11.1 UPRIGHT MODEL: (Cont'd)

- ❑ To replace the speaker.  
**Be sure the power is off to the game.**  
Disconnect the speaker from its cabling.  
Remove the nuts and bolts securing the speaker.  
Slide the speaker out through the rear access door.
- ❑ To reinstall the speaker, simply reverse this procedure.

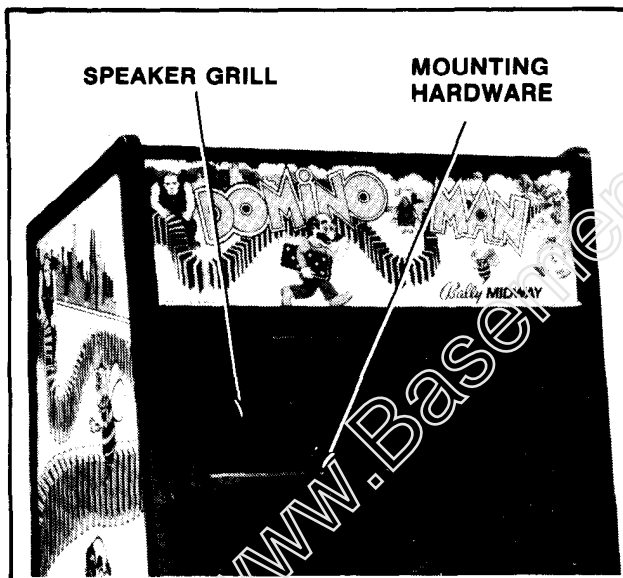


Figure 2-39 Speaker Location - Upright

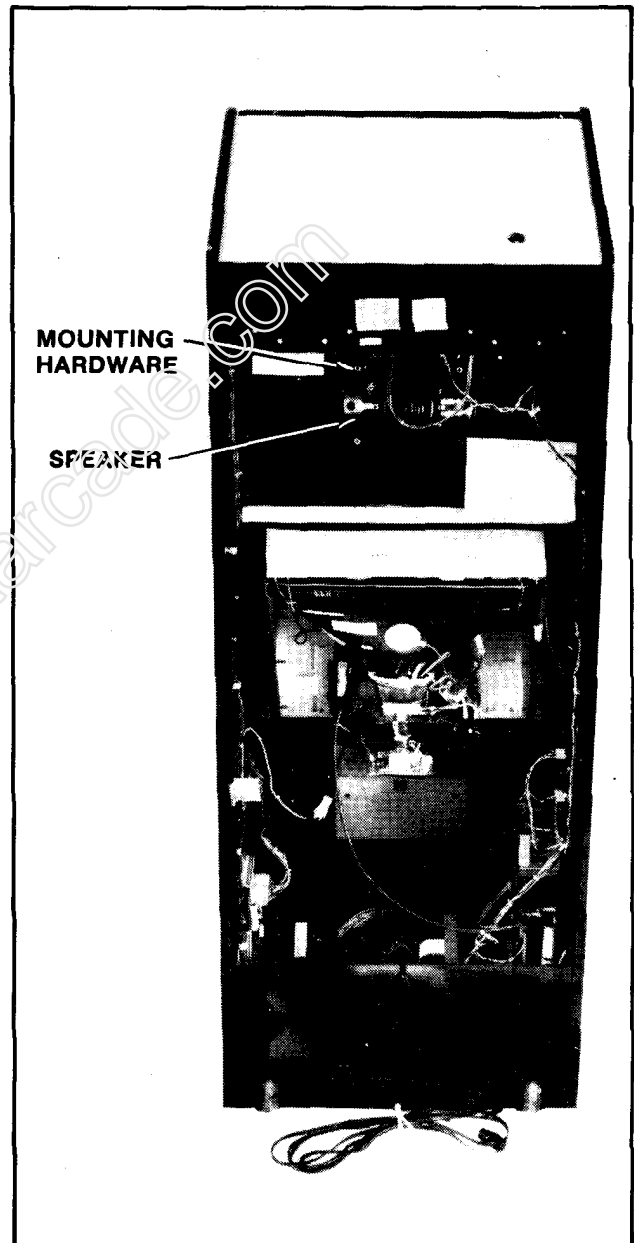


Figure 2-40 Rear View - Speaker Location - Upright

## 2.11.1 UPRIGHT MODEL: (Cont'd)

- ☐ Turn the power to the game off.

**NOTE:** In order to do this, the attraction panel **MUST** be removed first. See "Upright Model" procedure.

- ☐ Removing the speaker board assembly:

The attraction panel, the rear access door of the game, and if necessary, the back scenery panel **MUST** be removed first. This will enable you to reach all the necessary areas where cables **MUST** be disconnected.

Disconnect the speaker board assembly from all its cabling. There is one plug at the upper right and upper left corners of the rear of the cabinet. There is also a small plug right at the ON/OFF switch. And **DO NOT FORGET TO DISCONNECT THE GROUND WIRE LUG FROM THE ON/OFF SWITCH!**

Remove the screws which secure the speaker board assembly to the cabinet.

The speaker board assembly is now free and can be slid out through the hole in the front of the game where the attraction panel was mounted.

- ☐ Replacing the speaker(s).

Disconnect the speaker(s) from its cabling.

Remove the nuts and bolts which secure the speaker in place and set them aside.

Once the bolts which secure the speaker(s) in place are removed, the speaker(s) may be removed from the speaker board assembly.

- ☐ Reverse this procedure to reinstall the speaker(s).
- ☐ To reinstall the speaker board assembly, reverse this procedure.

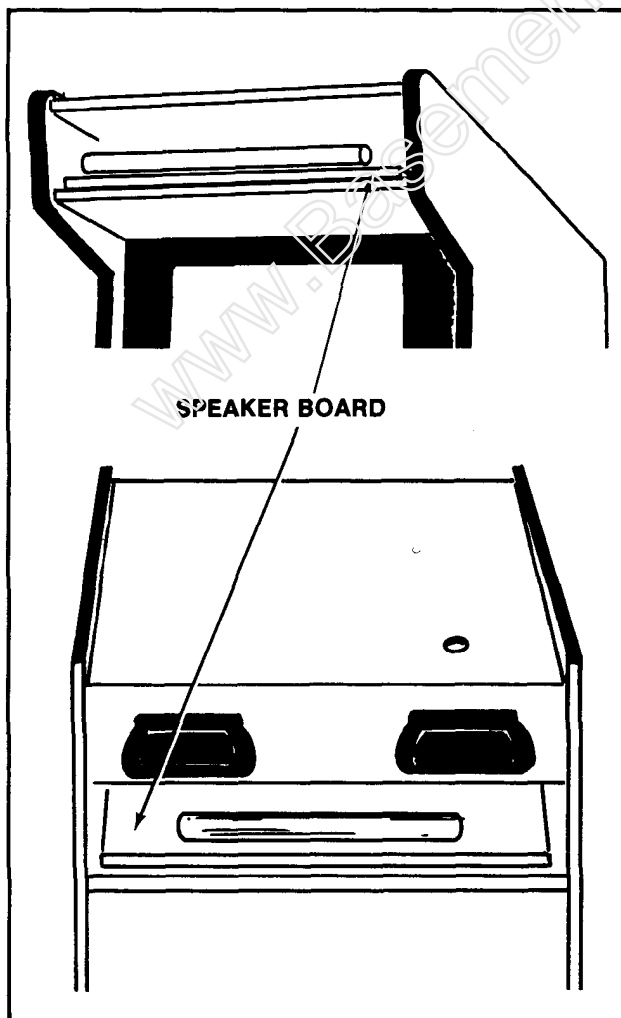


Figure 2-41 Speaker Replacement - Upright

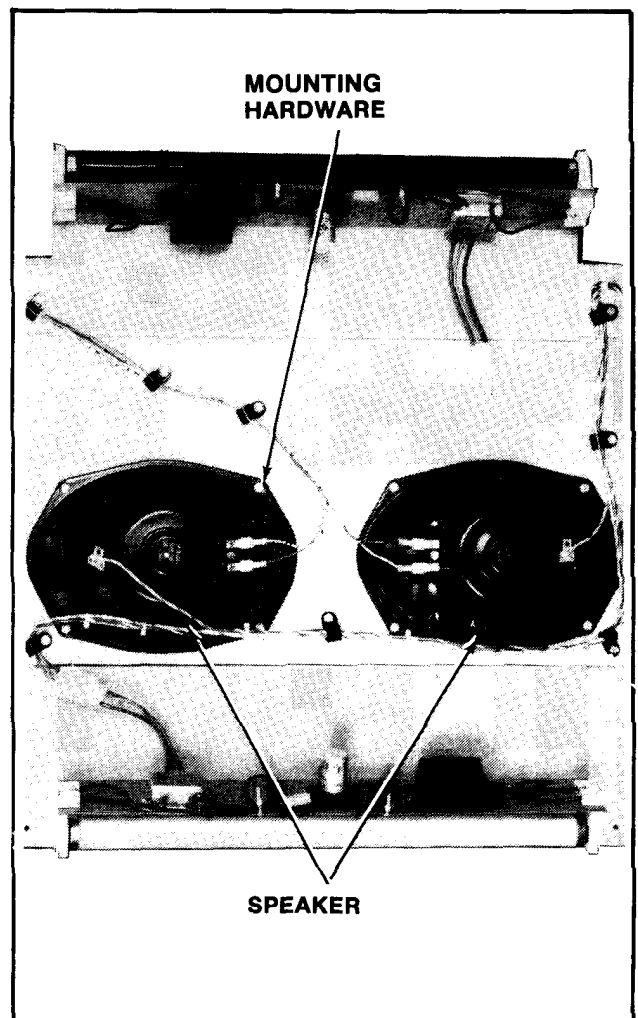


Figure 2-42 Speaker Replacement - Upright

### 2.11.2 MINI MODEL: (See Figure 2-43)

- ☐ To replace the speaker.  
**Be sure the power is off to the game.**  
Disconnect the speaker from its cabling.  
Remove the nuts and bolts securing the speaker.  
Slide the speaker out through the rear access door.
- ☐ To reinstall the speaker, simply reverse this procedure.

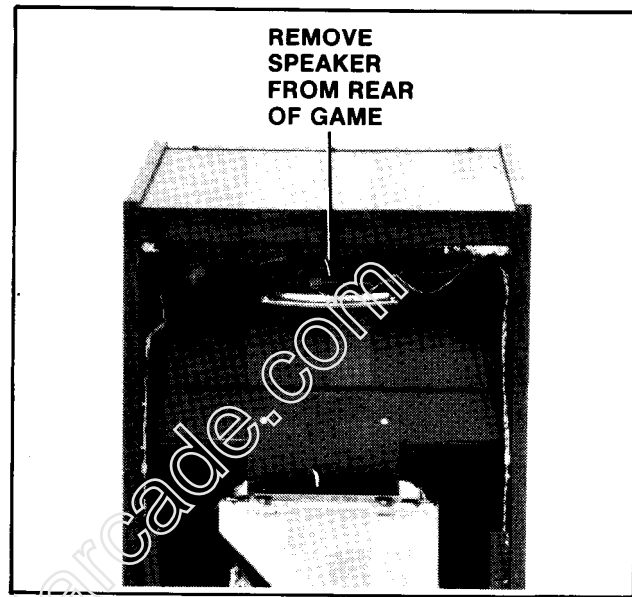


Figure 2-43 Speaker Removal - Mini

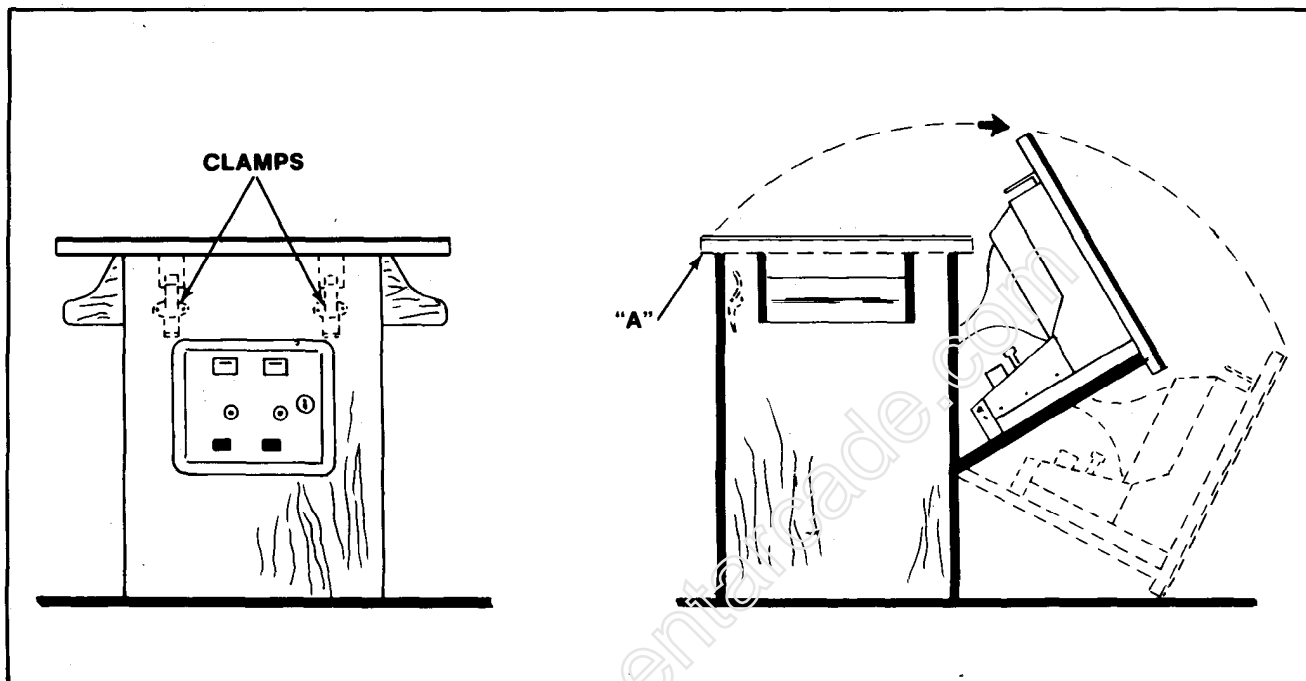


Figure 2-44 Opening the Cocktail Game

## 2.11.3 COCKTAIL TABLE MODEL:

- ☐ Turn power to the game off.
- ☐ Open the coin box door and release the two latches indicated in Figure 2-44.

**WARNING:** The right hand latch is very close to the HIGH VOLTAGE on the monitor.

Once they're released, unhook them from their latch plates.

- ☐ Grasp the table top at "A" and open it as indicated in Figure 2-44.

**CAUTION:** Due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.

- ☐ To replace the speaker.
 

**Be sure the power is off to the game.**  
 Disconnect the speaker from its cabling.  
 Remove the nuts and bolts securing the speaker.  
 Lift the speaker out.
- ☐ To reinstall the speaker, simply reverse this procedure.

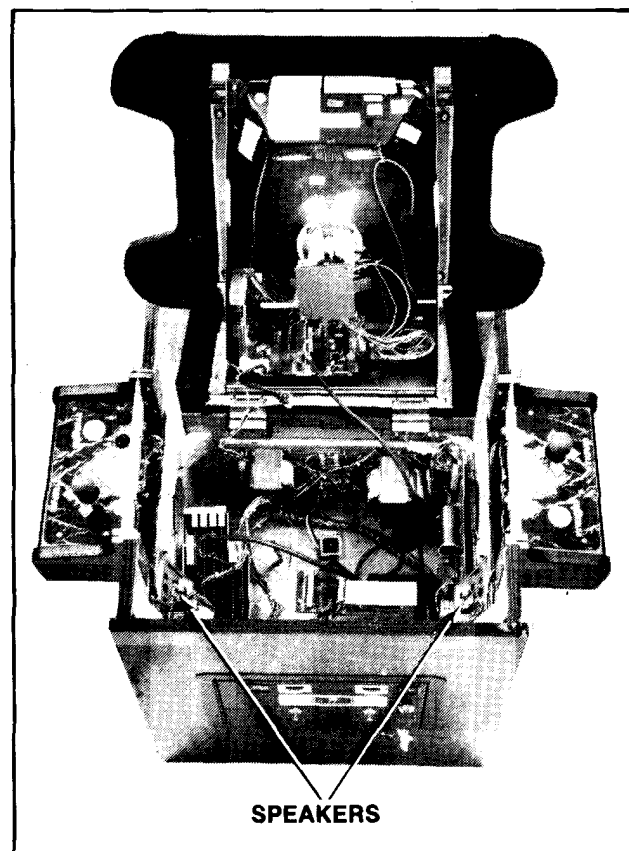


Figure 2-45 Speaker Replacement - Cocktail

**2.12 OPENING THE LOWER ATTRACTION PANEL AND  
SERVICING IT'S LIGHTING ASSEMBLY**

**2.12.1 Upright Models**

**(THE MINI AND COCKTAIL MODELS HAVE NO BACK-  
LIT LOWER ATTRACTION PANELS)**

## 2.12 OPENING THE LOWER ATTRACTION PANEL AND SERVICING ITS LIGHTING ASSEMBLY

UPRIGHT

### 2.12.1 UPRIGHT MODEL ONLY

- ☐ Be sure the power is off to the game.
- ☐ Remove the control panel as described previously. This exposes the attraction panel fluorescent light tube and its mounting bracket assembly. See Figure 2-46.

The fluorescent light tube may be replaced at this time by reaching through the space where the control panel was before you removed it.

**WARNING:** If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.

- ☐ Replacing the fluorescent tube starter. See Figure 2-47.  
Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.  
To replace the fluorescent light tube starter, reverse this procedure.
- ☐ Replacement of the fluorescent tube mounting bracket assembly. See Figure 2-46.

- ☐ Be sure the power is off to the game.
- ☐ Disconnect it from its power cable.

**NOTE:** The fluorescent tube mounting bracket is an integral part of the center attraction panel assembly and cannot be replaced unless the center attraction panel assembly is removed from the game cabinet.

- ☐ Remove the screws from top support bracket and the screws along its base which secure the mounting bracket and the center attraction panel assembly to the cabinet as shown in Figure 2-46.
- ☐ The center attraction panel assembly is now free and can be rotated forward and lifted out of the cabinet.
- ☐ The screws which secure the fluorescent tube mounting bracket to the center attraction panel are now accessible so it can be separated from the center attraction panel and replaced.
- ☐ To reinstall any of the above removed items, reverse this procedure.

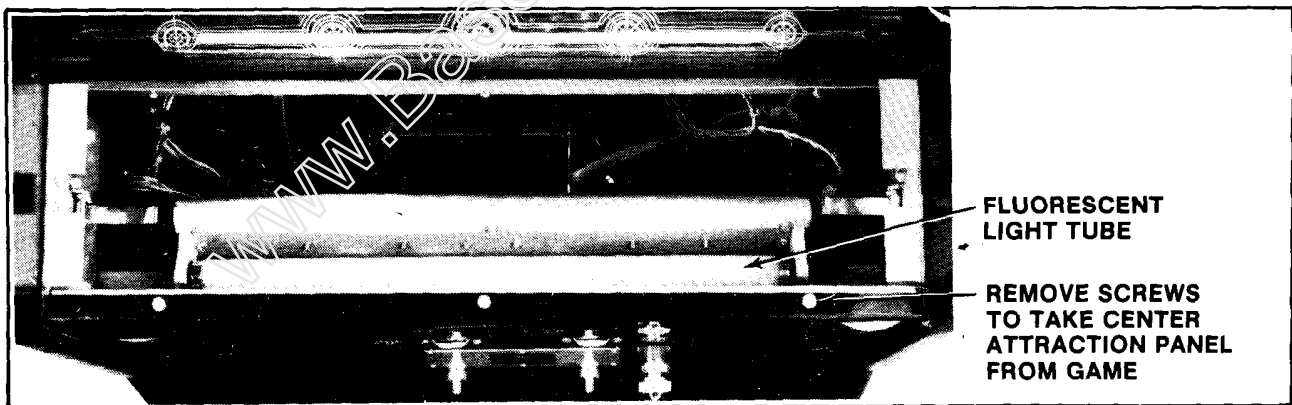


Figure 2-46 Opening Center Attraction Panel - Upright

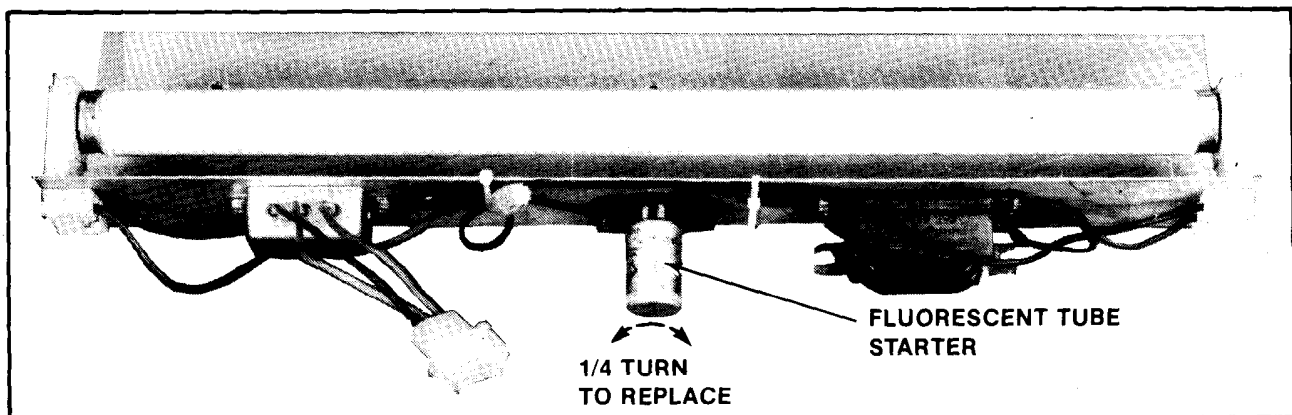


Figure 2-47 Replacing the Fluorescent Tube Starter - Upright

## **2.13 SERVICING THE CONTROL PANEL LIGHTING ASSEMBLY**

### **2.13.1 Upright Models**

**(THE MINI AND COCKTAIL MODELS HAVE NO  
CONTROL PANEL LIGHTING ASSEMBLIES)**

## 2.13.1 UPRIGHT MODEL ONLY

- ❑ Be sure the power is off to the game.
- ❑ Remove the control panel as described previously. This exposes the bottom row of screws which secure the control panel support bracket and the black light protector in place. See Figure 2-48.
- ❑ Remove all the screws which secure the above items in place and set them aside.  
The black light tube may be replaced at this time by reaching through the space where the light protector was before you removed it.

**WARNING:** If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.

- ❑ Replacing the black light tube starter. See Figure 2-47.  
Remove the black light tube.  
Remove the screws which secure the black light tube mounting bracket to the cabinet. See Figure 2-49.  
The mounting bracket is now loose and can be pulled out and slightly to one side until you can see the black light tube starter.

- ❑ Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

To replace the black light tube starter, reverse this procedure.

- ❑ The black light tube mounting bracket assembly may be replaced at this time by simply disconnecting it from its power cable and removing it from the game.
- ❑ To reinstall any of the above mentioned items, simply reverse this procedure.

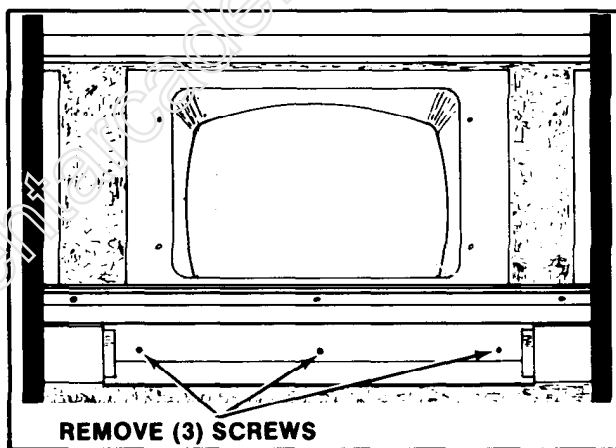


Figure 2-49 Replacing the Fluorescent Tube Starter - Upright


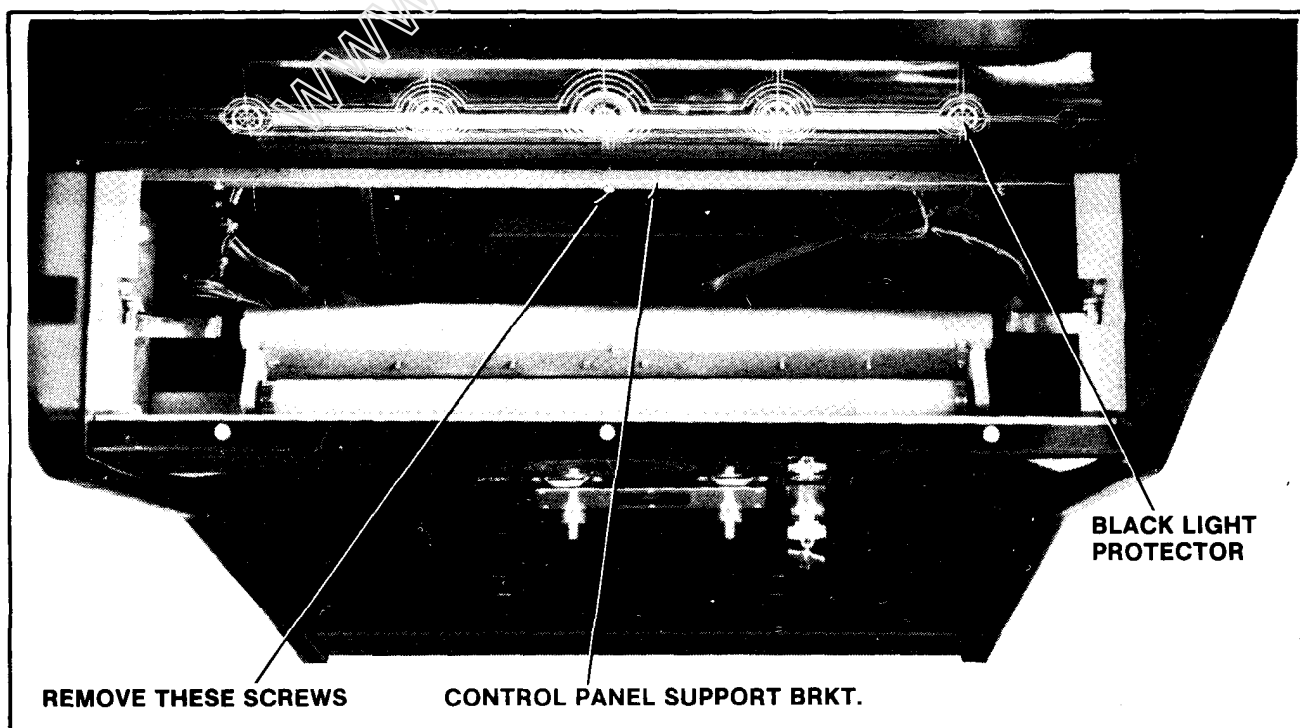


Figure 2-48 Servicing Control Panel Lighting Assembly - Upright



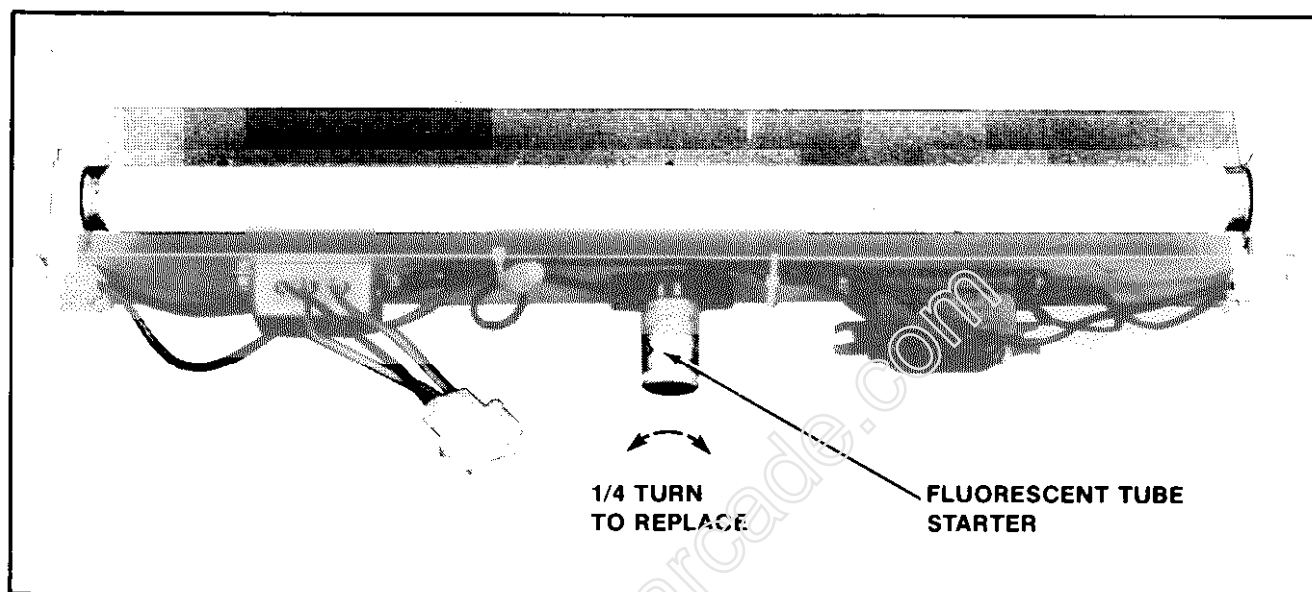

**Figure 2-50 Replacing the Fluorescent Tube Starter - Upright**

## **2.14 SERVICING AUXILIARY LIGHTING**

**2.14.1 Upright Models - Servicing Windshield Fluorescent Light**

**2.14.2 Upright Models - Servicing The Black Light Above Control Console**

**2.14.3 Upright Models - Servicing The Fluorescent Light Behind The Front Service Panel**

## 2.14 SERVICING AUXILIARY LIGHTING

UPRIGHT

### 2.14.1 UPRIGHT MODEL: Servicing Windshield Fluorescent Light

- ☐ Be sure the power is off to the game.
- ☐ Remove the upper rear access door. This exposes the windshield fluorescent light tube mounting bracket assembly. See Figure 2-51.
- ☐ Replacing the fluorescent tube starter. See Figure 2-51.

Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

To replace the fluorescent light tube starter, reverse this procedure.

- ☐ Removal of the fluorescent tube mounting bracket assembly from the cabinet.

**Be sure the power is off to the game.**

Disconnect it from its power cable.

Remove the screws along its base which secure the mounting bracket to the inside of the cabinet as shown in Figure 2-51. Remove the two end screws first and the center one last.

The fluorescent tube mounting bracket assembly is now free and can be removed from the cabinet.

- ☐ The fluorescent light tube may be easily replaced at this time.

**WARNING: If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.**

- ☐ To reinstall any of the above removed items, reverse this procedure.

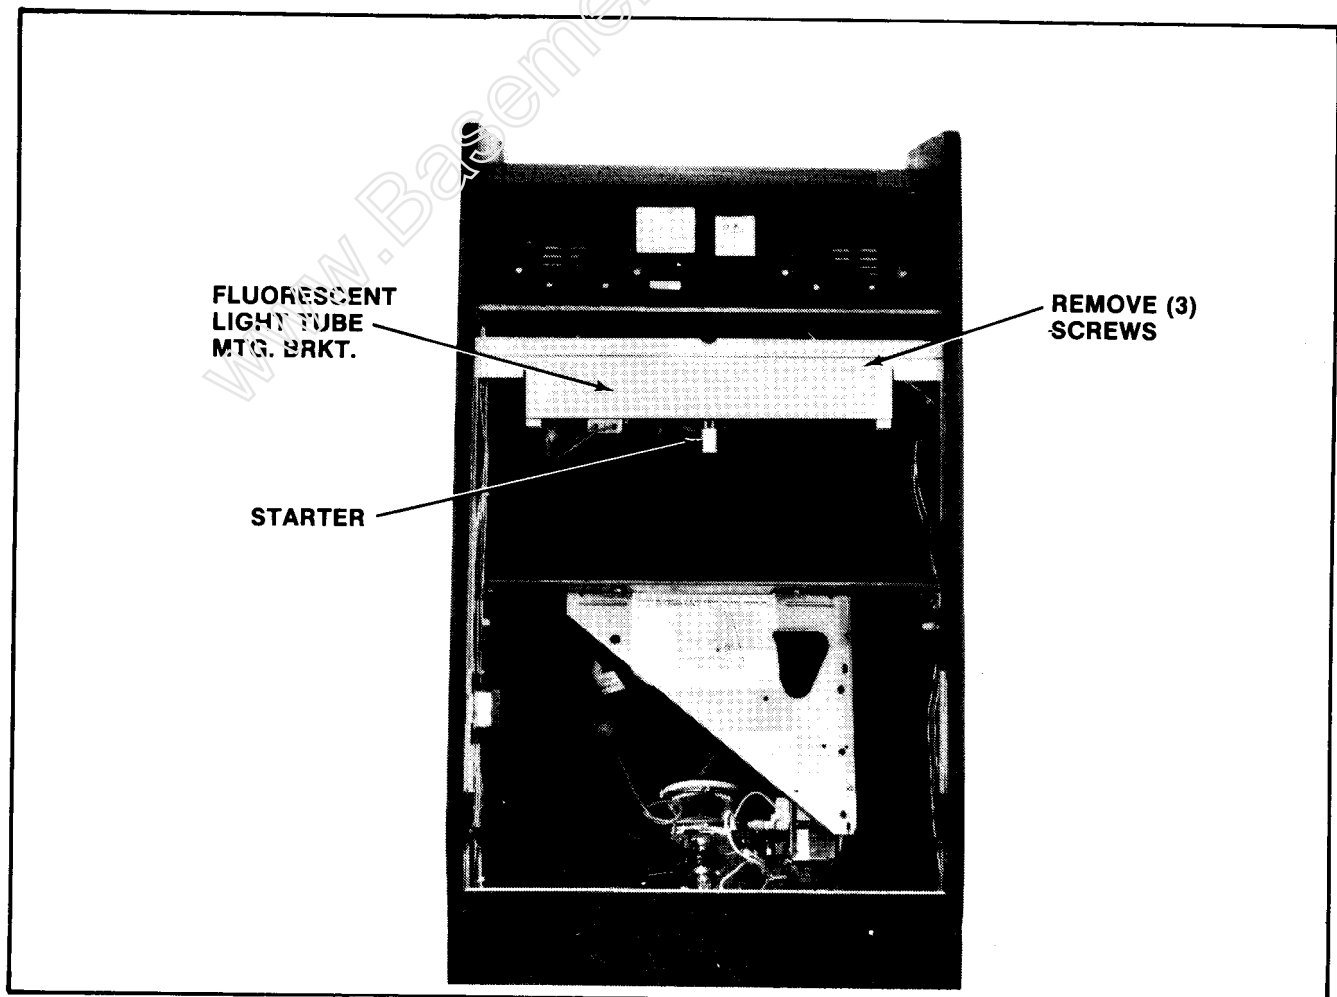


Figure 2-51 Servicing Windshield Fluorescent Light - Upright

## 2.14.2 UPRIGHT MODEL: Servicing The Black Light Above Control Console

- Turn the power to the game off and remove the screws which secure the glass clamping plate in position. See Figure 2-52.

Lift out the glass clamping plate.

Remove the screws which secure the bottom of the black light shield to the front service panel.

**Be sure** you support the black light shield as you remove these screws so it will not fall on the floor.

The black light tube may be replaced at this time. **BE CAREFUL NOT TO DROP IT.**

**WARNING:** If you drop a black light tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any black light tube.

- To reinstall the black light shield, reverse this procedure.
- Replacing the black light tube starter. See Figure 2-53.

**NOTE:** The main-display-glass **MUST** be removed in order to do this. See "Upright Model" procedure.

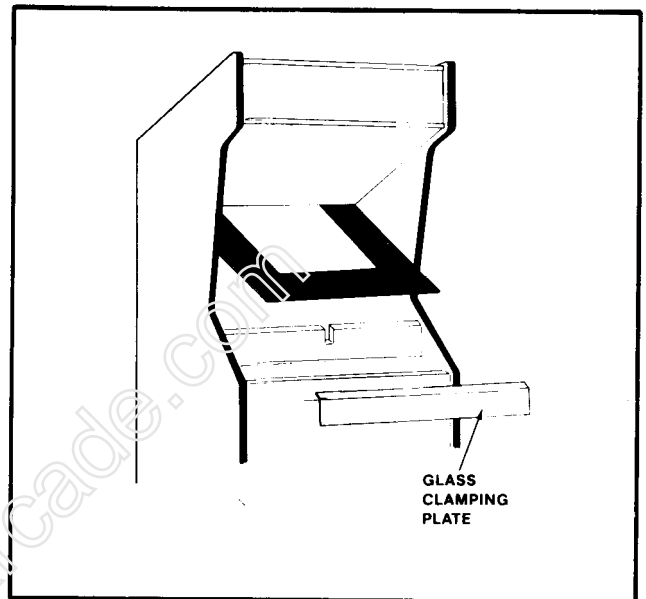


Figure 2-52 Removing Glass Clamping Plate

- **Be sure the power to the game has been turned off.**  
Grasp the starter (it is on the back of the mounting bracket, just inside the frame for the main-display-glass), give it a quarter turn, and remove it from its socket.
- To replace the black light tube starter, reverse this procedure.

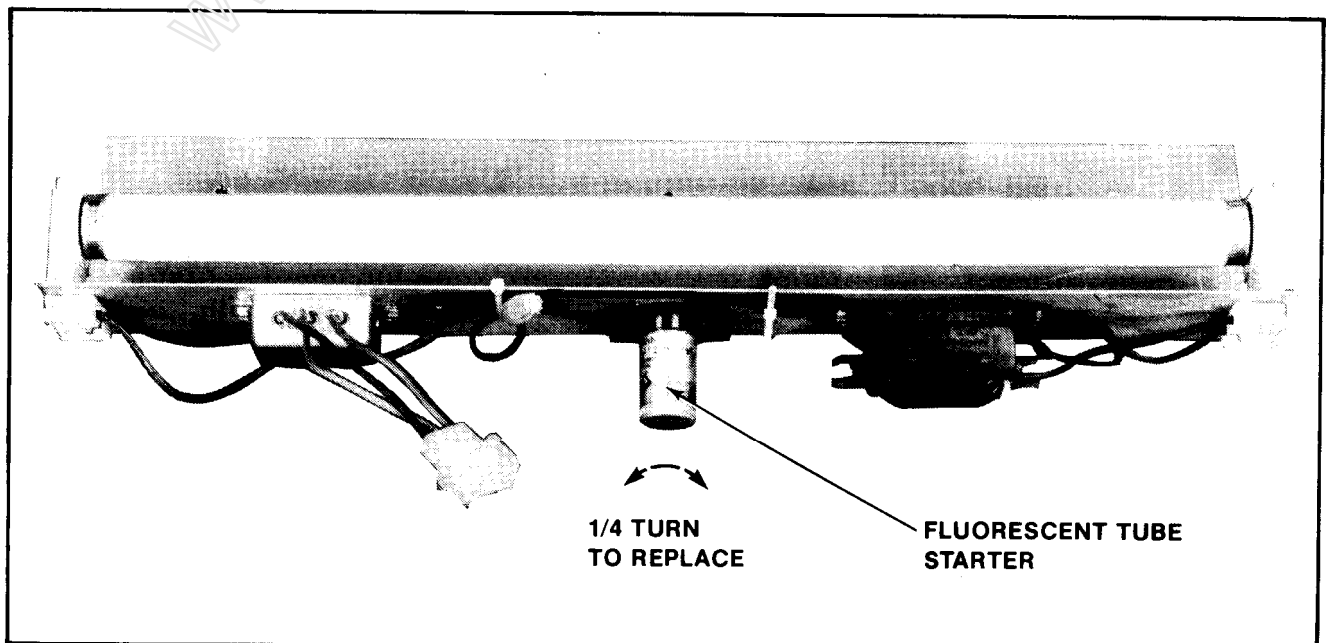


Figure 2-53 Replacing the Fluorescent Tube Starter - Upright

### 2.14.3 UPRIGHT MODEL: Servicing The Fluorescent Light Behind The Front Service Panel

- ☐ Remove the front service panel.
- ☐ Turn the power to the game off.

**NOTE:** In order to do this, the following items **MUST** be removed first, in this order, to make room: 1) the main-display-glass glass clamping plate; 2) the black light shield; and 3) the control panel. See the appropriate sections of this manual for removal instructions.

- ☐ Remove the screws at the top of the front service panel which secure it to the cabinet.
- ☐ Tilt it back to clear the black light and lift it up and out as shown in Figure 2-54.
- ☐ To reinstall the front service panel, reverse this procedure.
- ☐ The fluorescent light tube may be replaced at this time. BE CAREFUL NOT TO DROP IT!

**WARNING:** If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.

- ☐ Replacing the fluorescent light tube starter. See Figure 2-55.
- ☐ Be sure the power to the game has been turned off.

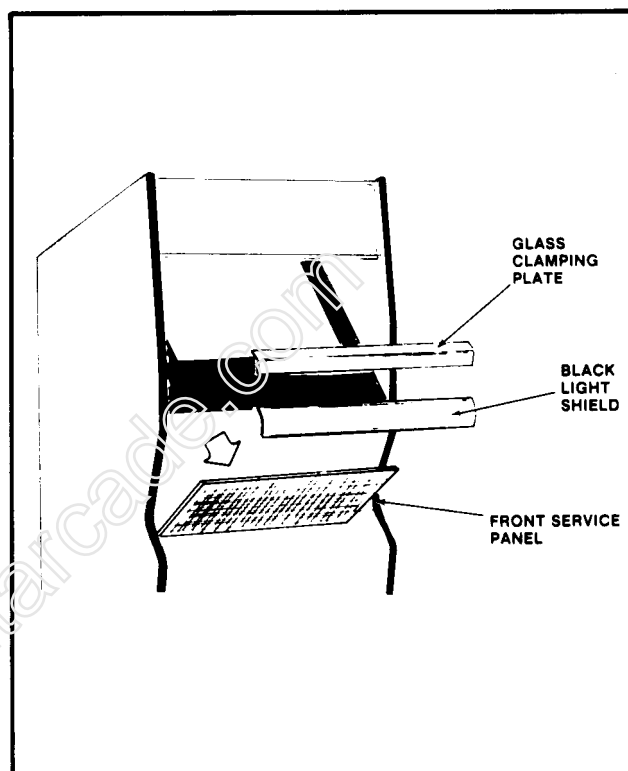


Figure 2-54 Removing the Front Service Panel - Upright

- ☐ Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.
- ☐ To replace the fluorescent light tube starter, reverse this procedure.

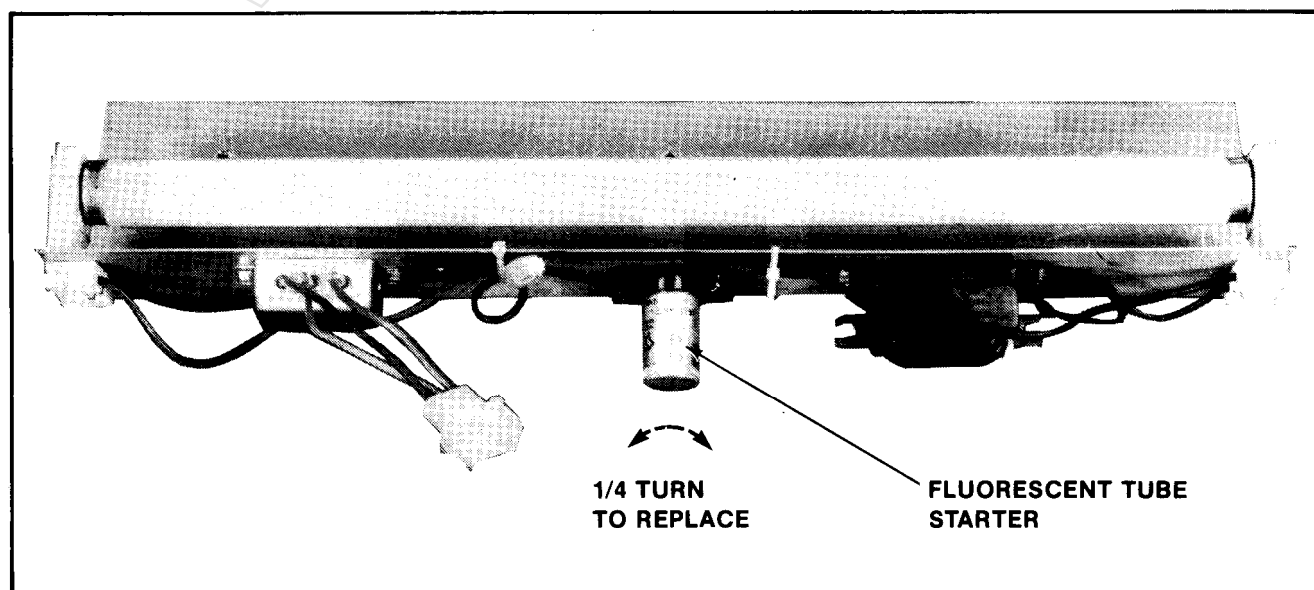


Figure 2-55 Replacing the Fluorescent Tube Starter - Upright

# III. Technical Troubleshooting

## Introduction

The most common problems occur in harness components such as the coin acceptor, player controls, interconnecting wiring, etc. The TV monitor and PCB computer cause their share of problems too, but not as much as the harness and its component parts. TV monitor troubleshooting will not be covered here because it is covered in that section of this manual.

As you already know, the PCB computer is a complex device with a number of different circuits. Some circuits remain basically the same among games, but overall there are a great many differences between them. PCB troubleshooting procedures, therefore, can be lengthy and will differ greatly among games. However, some basic Z-80 CPU information is involved in this section.

## General Suggestions

The first step in any troubleshooting procedure is correctly identifying the malfunction's symptoms. This includes not only the circuits or features malfunctioning, but also those still operational. A carefully trained eye will pick up other clues as well. For instance, a game in which the computer functions fail completely just after money was collected may have a quarter shorting the PCB traces. Often, an experienced troubleshooter will be able to spot the cause of the problem even before opening the cabinet.

After all the clues are carefully considered, the possible malfunctioning areas can be narrowed down to one or two good suspects. Those areas can be examined by a process of elimination until the cause of the malfunction is discovered.

## Harness Component Troubleshooting

Typical problems falling in this category are coin and credit problems, power problems and failure of individual features

### NO GAME CREDIT

For example, your prospective player inserts his quarter and is not awarded a game. The first item to check is if the quarter is returned. If the quarter is returned, the malfunction most certainly lies in the coin acceptor itself. First, use a set of test coins (both old and new) to ascertain that the player's coin is not undersize or underweight. If your test coins are also returned, coin acceptor servicing is indicated. Generally, the cause of this particular problem is a maladjusted magnet gate. Normally, this will mean slightly closing the magnet gate a little by turning the adjusting screw out a bit (see section on coin acceptor for more details).

If the quarter is not returned and there is no game credit, the cause of the malfunction may be in one of several areas. First try operating the coin return button; if the coin is returned, the problem is most likely in the magnet gate. Enlarge the gap according to the coin acceptor service procedures. If this does not cure the problem, remove the coin acceptor, clean it and perform the major adjustment procedure.

If the trapped coin is not returned when the wiper lever is actuated, you may have an acceptor jammed by a slug, gummed up with beer, a jammed coin chute, or mechanical failure of the acceptor mechanism. In this case, first check for the slug that will generally be trapped against the magnet. If so, simply remove the slug and test the acceptor. If the chute is blocked, remove the acceptor and remove the jammed coins. If there is actual failure of the acceptor, remove the unit and repair as indicated in the coin acceptor service procedures.

If the coin is making its way through the acceptor (that is, falling into the coin box), yet there is still no game credit, you either have a mechanical failure of the coin switch or electrical failure of the coin and credit circuits. The first place to begin is by checking the coin switch. Most of these switches are the make/break variety of micro switch, which is checked by testing for continuity between the NO, NC, and C terminals. When not actuated, the NC and C terminals should be continuous and the NO terminal open. When operated, the NO and C terminals should close and the NC should be open. If the coin switch checks out, examine the connections to the terminals to make sure there is good contact. If necessary, use the continuity tester and check from the terminal lug on the switch to the associated PCB trace. This will tell you if there is a continuous line all the way to the credit circuit.

If the coin-switch wires do not check out, the problem is in the computer — most likely in the coin and credit circuitry.

If you do get game credit when a coin is deposited, but the game will not start when the start switch is pressed, you may have a problem in the start switch, the interconnecting wiring or in the computer. First check the switch. If the switch is OK, proceed to check the wiring. Again, make sure you go from the terminal lug on the switch to the PCB trace. This way, you will check the terminal contact as well as PCB edge connector contact. If the wiring is continuous, proceed to check the PCB credit circuit. If not, check each section of the wiring, until the discontinuity is located. If the wiring is OK, the problem must lie in the computer.

## Transformer and Line Voltage Problems

Your machine must have the correct line voltage to operate properly. If the line voltage drops too low, a circuit in the computer will disable game credit. The point at which the computer will fail to work will vary some from game to game, but no game will work on line voltage that drops below 105 VAC.

Low line voltage may have many causes. Line voltage normally fluctuates a certain amount during the day as the total usage varies. Peak usage times occur mainly at dawn or dusk, so if your machine's malfunction seems to be related to the time of day, this may be a factor. A large load connected to the same line as the game (such as a large air conditioner or other device with an exceptionally large motor) may drop the line voltage significantly when starting up. This drop can result in an intermittent credit problem. In addition, poor connections in the location wiring, plug, or line cord may also cause a significant drop in power. Cold solder joints in the game's harness, especially in areas like the transformer connections, interlock switch, or fuse block, may also produce the same results, although probably on a more permanent basis.

Sometimes location owners (especially in bars) replace light switches with dimmer rheostats, and the game is sometimes on the same line. Obviously, the voltage available to the game is going to drop dramatically when the dimmer is turned.

In any case, the way to check for correct line voltage is with your VOM. Set the VOM to 250 VAC and stick the probes in the wall receptacle. If it's OK here, check the transformer primary connections. If you do not get 117 VAC, examine the solder joints on the transformer, fuse block, and interlock switch. If you do get 117 VAC, the problem must be either in the transformer, harness connections, or in the PCB power supply.

If you suspect the transformer, check its secondaries with the VOM set to 50 VAC and correlate the readings with the legend on the side of the transformer. The transformer must also be correctly grounded, so check the ground potential as well, especially if there is a hum bar rolling up or down the TV screen.

## HARNESS PROBLEMS

Other harness problems include blowing fuses and malfunctioning controls. The repeating blown-fuse problem can sometimes be quite exasperating to solve, for short circuits have the tendency to occur in areas almost impossible to find. First, try inserting a new fuse, as old fuses age and blow without cause. If the new one also blows, you definitely have a short.

The best way to approach this problem is by turning the power off and disconnecting devices that may be causing the problem, such as the TV, transformer, and PCB. Disconnect the devices by pulling off their connectors, but do not allow them to touch. If necessary, insulate them with small pieces of electrical tape. Then, connect your VOM across the terminals of the fuse block (all electrical power shut off), and set it to one of the resistance scales. This will save blowing a fuse each time you want to check the circuit.

If the VOM reveals that disconnecting the devices removed the short, reconnect the devices one by one until the short returns. The last device connected is the one that is at fault. If the VOM reads a short even after the devices are disconnected, the fault must lie in the harness itself, and only patient exploration will reveal its location. First, carefully examine all the wiring, looking for terminals that may be touching, metal objects such as coins shorting connections or burned insulation. If necessary, use the VOM to check each suspected wire.

## MALFUNCTIONING CONTROLS

One of the most common problems here is a bad potentiometer. Typically, a bad pot will cause the image to jump as it reaches a certain point. The only cure for this one is to install a new pot.

If a feature that is operated by a switch (for example, joysticks, foot pedals, control panel buttons) does not operate at all, check the switch with a VOM or continuity tester to verify its operation. If the switch does not check out, replace it. If the switch is OK, you should suspect the input to the switch from the PCB. In this case, get out the harness and logic schematics and check to see what kind of input it is. In many cases, the input will be +5 VDC. If so, use the VOM to check its presence. Normally, the switch is used to pull a +5 VDC line LOW to GND or to pull a LOW line HIGH. If the PCB output is missing, check the wire length from the PCB. If you find the signal at the PCB trace, the wire length or connection is at fault. If not, begin exploring the PCB using the logic schematics.

# A Glossary of Microprocessor Terms

**MICROPROCESSOR** — one or several microcircuits that perform the function of a computer's CPU. Sections of the circuit have arithmetic and comparative functions that perform computations and executive instructions.

**CPU** — central-processing unit. A computing system's "brain", whose arithmetic, control and logic elements direct functions and perform computations. The microprocessor section of a microcomputer is on one chip or several chips.

**PROM** — programmable read-only memory. User permanently sets binary on-off bits in each cell by selectively fusing or not fusing electrical links. Non-erasable. Used for low-volume applications.

**EPROM** — erasable, programmable, read-only memory. Can be erased by ultraviolet light bath, then reprogrammed. Frequently used during design and

development to get programs debugged, then replaced by ROM for mass production.

**ROM** — read-only memory. The program, or binary on-off bit pattern, is set into ROM during manufacture, usually as part of the last metal layer put onto the chip. Nonerasable. Typical ROM's contain up to 16,000 bits of data to serve as the microprocessor's basic instructions.

**RAM** — random-access memory. Stores binary bits as electrical charges in transistor memory cells. Can be read or modified through the CPU. Stores input instructions and results. Erased when power is turned off.

**LSI** — large scale integration. Formation of hundreds or thousands of so-called gate circuits on semiconductor chips. Very large scale integration (VLSI) involves microcircuits with the greatest component density.

**MOS** — metal-oxide semiconductor. A layered construction technique for integrated circuits that achieves high component densities. Variations in MOS chip structures create circuits with speed and low-power requirements, or other advantages (static will damage a MOS chip).

---

## Introduction to the Z-80 CPU

The term "microcomputer" has been used to describe virtually every type of small computing device designed within the last few years. This term has been applied to everything from simple "microprogrammed" controllers constructed out of TTL MSI up to low end minicomputers with a portion of the CPU constructed out of TTL LSI "bit slices." However, the major impact of the LSI technology within the last few years has been with MOS LSI. With this technology, it is possible to fabricate complete and very powerful computer systems with only a few MOS LSI components.

The Zilog Z-80 family of components can be configured with any type of standard semiconductor memory to generate computer systems with an extremely wide range of capabilities. For example, as few as two LSI circuits and three standard TTL MSI packages can be combined to form a simple controller. With additional memory and I/O devices a computer can be constructed with capabilities that only a minicomputer could previously deliver.

New products using the MOS LSI microcomputer are being developed at an extraordinary rate. The Zilog Z-80 component set has been designed to fit into this market through the following factors:

1. The Z-80 is fully software compatible with the popular 8080A CPU.
2. Existing designs can be easily converted to include the Z-80.
3. The Z-80 component set is at present superior in both software and hardware capabilities to any other microcomputer system on the market today.
4. For increased throughput the Z80A operating at a 4 MHz clock rate offers the user significant speed advantages.

Microcomputer systems are extremely simple to construct using Z-80 components. Any such system consists of three parts:

1. **CPU (Central Processing Unit)**
2. **Memory**
3. **Interface Circuits to peripheral devices**

The CPU is the heart of the system. Its function is to obtain instructions from the memory and perform the desired operations. The memory is used to contain instructions and in most cases data that is to be processed. For example, a typical instruction sequence may be to read data from a specific peripheral device, store it in a location in memory, check the parity and write it out to another peripheral device. Note that the Zilog component set includes the CPU and various general purpose I/O device controllers, while a wide range of memory devices may be used from any source. Thus, all required components can be connected together in a very simple manner with virtually no other external logic.



## General Purpose Registers

There are two matched sets of general purpose registers, each set containing six 8-bit registers that may be used individually as 8-bit registers or as 16-bit register pairs by the programmer. One set is called BC, DE and HL while the complementary set is called BC', DE' and HL'. At any one time the programmer can select either set of registers to work with through a single exchange command for the entire set. In systems where fast interrupt response is required, one set of general purpose registers and an accumulator/flag register may be reserved for handling this very fast routine. Only a simple exchange command need be executed to go between the routines. This greatly reduces interrupt service time by eliminating the requirement for saving and retrieving register contents in the external stack during interrupt or subroutine processing. These general purpose registers are used for a wide range of applications by the programmer. They also simplify programming, especially in ROM based systems where little external read/write memory is available.

## Arithmetic & Logic Unit (ALU)

The 8-bit arithmetic and logical instructions of the CPU are executed in the ALU. Internally the ALU communicates with the registers and the external

data bus on the internal data bus. The type of functions performed by the ALU include:


|                             |  |
|-----------------------------|--|
| <b>Add</b>                  | Left or right shifts<br>or rotates (arithmetic<br>and logical) |
| <b>Subtract</b>             | Increment  |
| <b>Logical AND</b>          | Decrement  |
| <b>Logical OR</b>           | Set bit  |
| <b>Logical Exclusive OR</b> | Reset bit  |
| <b>Compare</b>              | Test bit   |

## Instruction Register and CPU Control

As each instruction is fetched from memory, it is placed in the instruction register and decoded. The control sections performs this function and then generates and supplies all of the control signals necessary to read or write data from or to the registers, control the ALU and provide all required external control signals.

## Z-80 CPU Pin Description

The Z-80 CPU is packaged in an industry standard 40 pin Dual In-Line Package. The I/O pins are shown in the below figure and the function of each is described.

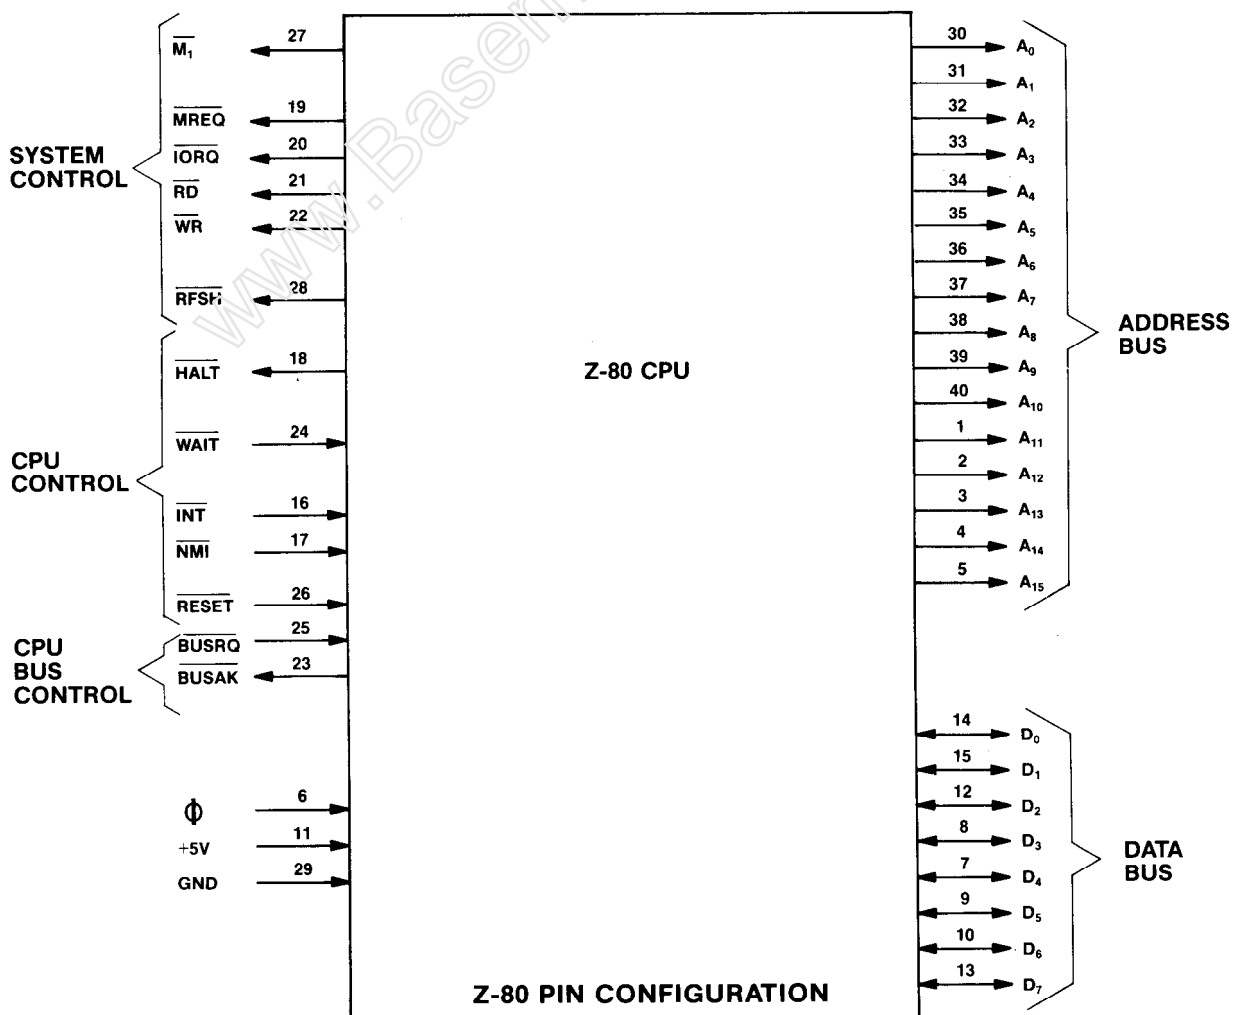

**A<sub>0</sub>-A<sub>15</sub>****(Address Bus)**

Tri-state output, active high. A<sub>0</sub>-A<sub>15</sub> constitute a 16-bit address bus. The address bus provides the address for memory (up to 64K bytes) data exchanges and for I/O device data exchanges. I/O addressing uses the 8 lower address bits to allow the user to directly select up to 256 input or 256 output ports. A<sub>0</sub> is the least significant address bit. During refresh time, the lower 7 bits contain a valid refresh address.

**D<sub>0</sub>-D<sub>7</sub>****(Data Bus)**

Tri-state input/output, active high. D<sub>0</sub>-D<sub>7</sub> constitute an 8-bit bidirectional data bus. The data bus is used for data exchanges with memory and I/O devices.

**M<sub>1</sub>****(Machine Cycle one)**

Output, active low.  $\overline{M_1}$  indicates that the current machine cycle is the OP code fetch cycle of an instruction execution. Note that during execution of 2-byte op-codes,  $\overline{M_1}$  is generated as each op code byte is fetched. These two byte op-codes always begin with CBH, DDH, EDH or FDH.  $\overline{M_1}$  also occurs with  $\overline{IORQ}$  to indicate an interrupt acknowledge cycle.

**MREQ****(Memory Request)**

Tri-state output, active low. The memory request signal indicates that the address bus holds a valid address for a memory read or memory write operation.

**IORQ****(Input/Output Request)**

Tri-state output, active low. The  $\overline{IORQ}$  signal indicates that the lower half of the address bus holds a valid I/O address for a I/O read or write operation. An  $\overline{IORQ}$  signal is also generated with an  $\overline{M_1}$  signal when an interrupt is being acknowledged to indicate that an interrupt response vector can be placed on the data bus. Interrupt Acknowledge operations occur during M<sub>1</sub> time while I/O operations never occur during M<sub>1</sub> time.

**RD****(Memory Read)**

Tri-state output, active low.  $\overline{RD}$  indicates that the CPU wants to read data from memory or an I/O device. The addressed I/O device or memory should use this signal to gate data onto the CPU data bus.

**WR****(Memory Write)**

Tri-state output, active low.  $\overline{WR}$  indicates that the CPU data bus holds valid data to be stored in the addressed memory or I/O device.

**RFSH****(Refresh)**

Output, active low.  $\overline{RFSH}$  indicates that the lower 7 bits of the address bus contain a refresh address for dynamic memories and the current MREQ signal should be used to do a refresh read to all dynamic memories.

**HALT****(Halt state)**

Output, active low.  $\overline{HALT}$  indicates that the CPU has executed a HALT software instruction and is awaiting either a non maskable or a maskable interrupt (with the mask enabled) before operation can resume. While halted, the CPU executes NOP's to maintain memory refresh activity.

**WAIT****(Wait)**

Input, active low.  $\overline{WAIT}$  indicates to the Z-80 CPU that the addressed memory or I/O devices are not ready for a data transfer. The CPU continues to enter wait states for as long as this signal is active. This signal allows memory or I/O devices of any speed to be synchronized to the CPU.

**INT****(Interrupt Request)**

Input, active low. The Interrupt Request signal is generated by I/O devices. A request will be honored at the end of the current instruction if the internal software controlled interrupt enable flip-flop (IFF) is enabled and if the  $\overline{BUSRQ}$  signal is not active. When the CPU accepts the interrupt, an acknowledge signal ( $\overline{IORQ}$  during M<sub>1</sub> time) is sent out at the beginning of the next instruction cycle. The CPU can respond to an interrupt in three different modes that are described in detail in section 5.4 (CPU Control Instructions).

**NMI****(Non-Maskable Interrupt)**

Input, negative edge triggered. The non maskable interrupt request line has a higher priority than  $\overline{INT}$  and is always recognized at the end of the current instruction, independent of the status of the interrupt enable flip-flop.  $\overline{NMI}$  automatically forces the Z-80 CPU to restart to location 0066H. The program counter is automatically saved in the external stack so that the user can return to the program that was interrupted. Note that continuous  $\overline{WAIT}$  cycles can prevent the current instruction from ending, and that a  $\overline{BUSRQ}$  will override a  $\overline{NMI}$ .

**RESET**

Input, active low. RESET forces the program counter to zero and initializes the CPU. The CPU initialization includes:

- 1) Disable the interrupt enable flip-flop

- 2) Set Register I = 00H
- 3) Set Register R = 00H
- 4) Set Interrupt Mode 0

During reset time, the address bus and data bus go to a high impedance state and all control output signals go to the inactive state.

#### **BUSRQ**

##### **(Bus Request)**

Input, active low. The bus request signal is used to request the CPU address bus, data bus and tri-state output control signals to go to a high impedance state so that other devices can control these buses. When BUSRQ is activated, the CPU will set these

buses to a high impedance state as soon as the current CPU machine cycle is terminated.

#### **BUSAK**

##### **(Bus Acknowledge)**

Output, active low. Bus acknowledge is used to indicate to the requesting device that the CPU address bus, data bus and tri-state control bus signals have been set to their high impedance state and the external device can now control these signals.

#### **CLK**

##### **(Clock)**

Single phase TTL level clock which requires only a 330 ohm pull-up resistor to +5 volts to meet all clock requirements.

## MCR SYSTEM P.C. BOARD JUMPER OPTIONS

### VIDEO GENERATOR P.C. BOARD

| MANUFACTURER | EPROM NO. | JW#1 | JW#2 | JW#3 | JW#4 | JW#5 | JW#6 | JW#7 | JW#8 |
|--------------|-----------|------|------|------|------|------|------|------|------|
| MOTOROLA     | 68764     | #    | *    | *    | #    | *    | *    | *    | *    |
|              | 68766     | #    | *    | *    | #    | *    | *    | *    | *    |
| INTEL        | 2764      | *    | #    | #    | *    | #    | *    | *    | #    |
| T. I.        | 2564      | #    | *    | *    | #    | *    | #    | #    | *    |

### SUPER C.P.U. P.C. BOARD

#### JUMPER OPTIONS FOR PROGRAM ROMS ONLY

| MANUFACTURER | EPROM NO. | JW#2 | JW#4 | JW#5 | JW#6 | JW#7 | JW#18 | JW#19 |  |
|--------------|-----------|------|------|------|------|------|-------|-------|--|
| MOTOROLA     | 68764     | #    | #    | *    | #    | *    | *     | #     |  |
|              | 68766     | #    | #    | *    | #    | *    | *     | #     |  |
| T. I.        | 2564      | #    | #    | *    | #    | *    | *     | #     |  |
| INTEL        | 2764      | *    | *    | #    | *    | #    | #     | *     |  |

#### JUMPER OPTIONS FOR BACKGROUND ROMS ONLY

| MANUFACTURER | EPROM NO. | JW#10 | JW#11 | JW#12 | JW#13 | JW#14 | JW#15 | JW#16 | JW#17 |
|--------------|-----------|-------|-------|-------|-------|-------|-------|-------|-------|
| MOTOROLA     | 68764     | *     | #     | *     | #     | *     | #     | #     | *     |
|              | 68766     | *     | #     | *     | #     | *     | #     | #     | *     |
| T. I.        | 2564      | *     | #     | *     | #     | *     | #     | #     | *     |
| INTEL        | 2764      | #     | *     | #     | *     | #     | *     | *     | #     |

### SOUND I/O P.C. BOARD

| MANUFACTURER   | EPROM NO. | JW#1 | JW#2 |  |
|----------------|-----------|------|------|--|
| NUMEROUS MFR'S | 2532      | *    | #    |  |
| NUMEROUS MFR'S | 2732      | #    | *    |  |

\* = CUT JUMPER WIRES WHERE THIS SYMBOL "\*" APPEARS.

# = LEAVE JUMPER WIRES IN WHERE THIS SYMBOL "#" APPEARS.

The above table illustrates the fact that the Video Generator P.C. Board used in the MCR II System has 8 jumper wires, the SUPER C.P.U. P.C. Board used in the MCR II System has 19 jumper wires, and the Sound I/O P.C. Board used in the MCR II System has 2 jumper wires.

All of the above Boards can be used with a variety of different **SETS of EPROM chips**. However, these EPROMS are not all made by the same manufacturer

and do have some internal differences. So, in order to make them function properly in their respective P.C. Boards, certain jumper wires on these Boards have to be cut.

The above table tells you which jumpers to cut (depending on which EPROM set you're going to use) by showing a "\*" under that jumper wire's number. If there is **NO** "\*" under a jumper wire's number, **THAT PARTICULAR JUMPER WIRE IS NOT TO BE CUT.**

## IV. Coin Door Maintenance

**SPECIAL NOTE:** If you have any questions about the coin acceptors in your game(s), please feel free to contact their manufacturers. Each manufacturer's name is **PROMINENTLY** imprinted on every acceptor mechanism.

Metal mechanisms only:

**COIN MECHANISMS, INC.**  
817 Industrial Drive  
Elmhurst, IL 60126  
Phone (312) 279-9150

Metal and Plastic mechanisms:

**COINCO COIN ACCEPTORS, INC.**  
860 Eagle Drive  
Bensenville, IL 60106  
Phone (312) 766-6781

### COIN DOOR MAINTENANCE

#### METAL COIN ACCEPTOR MECHANISMS

Periodically, the metal coin acceptor mechanism(s) must be removed from the coin door and cleaned.

1. Make sure the power to the game is off.
2. Unlock and open the coin door.

3. Remove the coin acceptor mechanism as shown in Figure 4-1.

- ☐ Push down on the two spring loaded latches.
- ☐ While holding the latches down, pull the top of the coin acceptor mechanism toward you.
- ☐ Release the latches and lift out the coin acceptor mechanism.

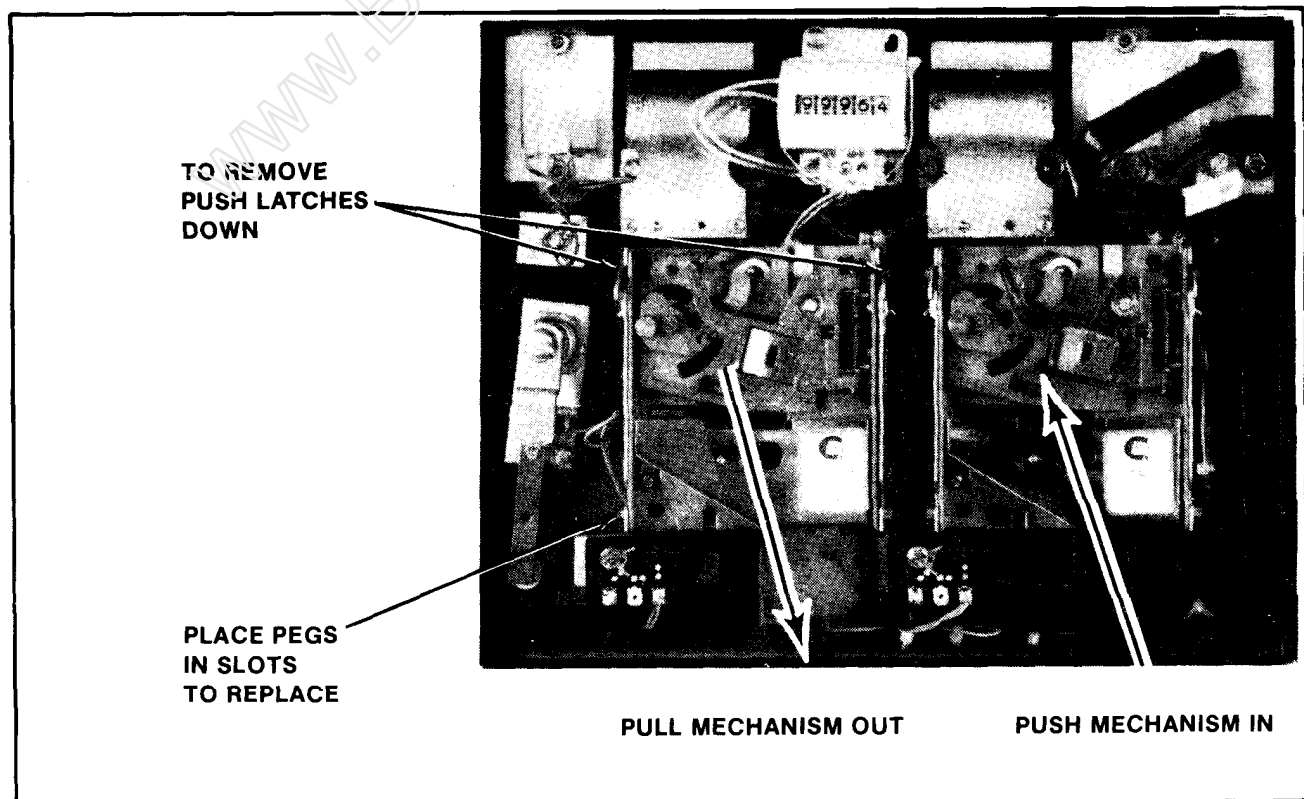


Figure 4-1 Removing and Replacing the Coin Acceptor

4. Clean the magnet of all foreign particles. See Figure 4-2.
  - ☐ This may be accomplished by swinging the gate open as shown in the above figure.
5. Remove the cradles and undersize levers and clean the bushings. (A pipe cleaner makes a good bushing cleaner.)
  - ☐ Also clean the pivot pin.
6. Whenever needed, the coin acceptor should be cleaned with hot water and cleanser in the following manner:
  - ☐ Place the coin acceptor in boiling water for about ten minutes.

**CAUTION: BE CAREFUL NOT TO BURN YOURSELF.**

- ☐ Next, use a brush and kitchen cleaner to remove all remaining foreign matter from the unit.
- ☐ Rinse the coin acceptor in clean boiling water.
- ☐ Dry the coin acceptor thoroughly by using filtered compressed air to blow it dry.

**NOTE:** The reason we recommend using boiling water is that it evaporates faster than cold water and speeds drying time.

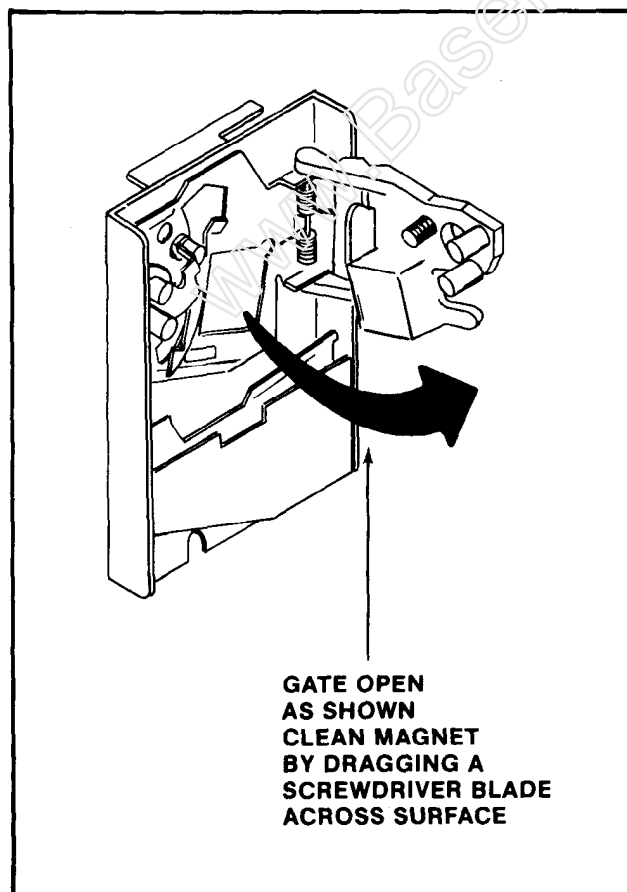


Figure 4-2 Cleaning the Metal Coin Acceptor

7. To lubricate the coin acceptor:

- ☐ Use **ONLY** powdered graphite and put it **ONLY** on the moving parts of the coin acceptor. These parts are called out in Figure 4-3.
- ☐ Be extremely careful to keep the powdered graphite away from paths that are traveled by the coins.

**— WARNING —  
DO NOT USE OIL  
TO LUBRICATE THE  
COIN ACCEPTOR.**

8. Check the coin chute for obstructions such as: paper, gum, etc.
9. Reinstall the coin acceptor to the coin door. See Figure 4-1.
  - ☐ Place the two pegs at the coin acceptor's base into their retaining slots.
  - ☐ Now push the top of the coin acceptor toward the coin door until it snaps in place and is held there by the two spring loaded latches.
10. Close and lock the coin door.


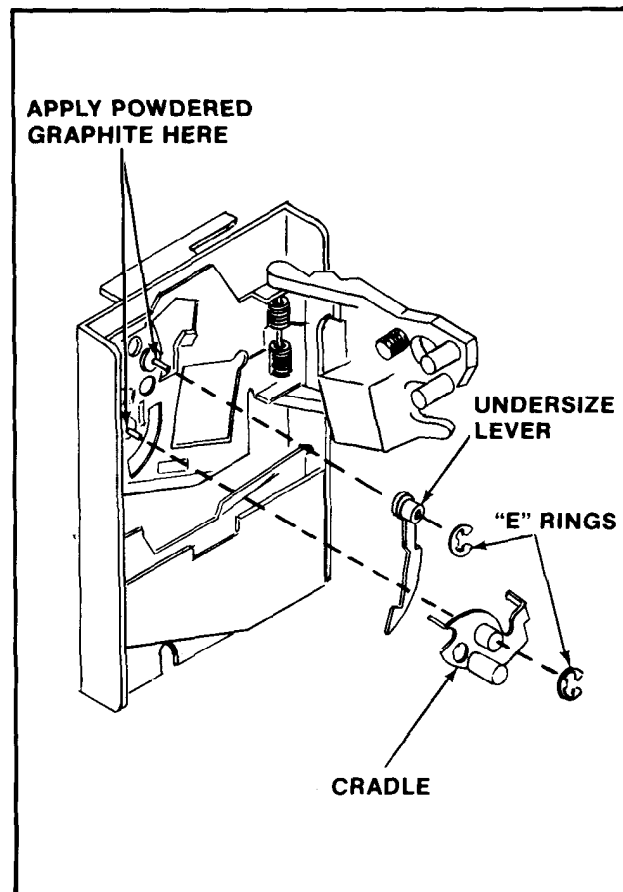


Figure 4-3 Lubricating the Metal Coin Acceptor

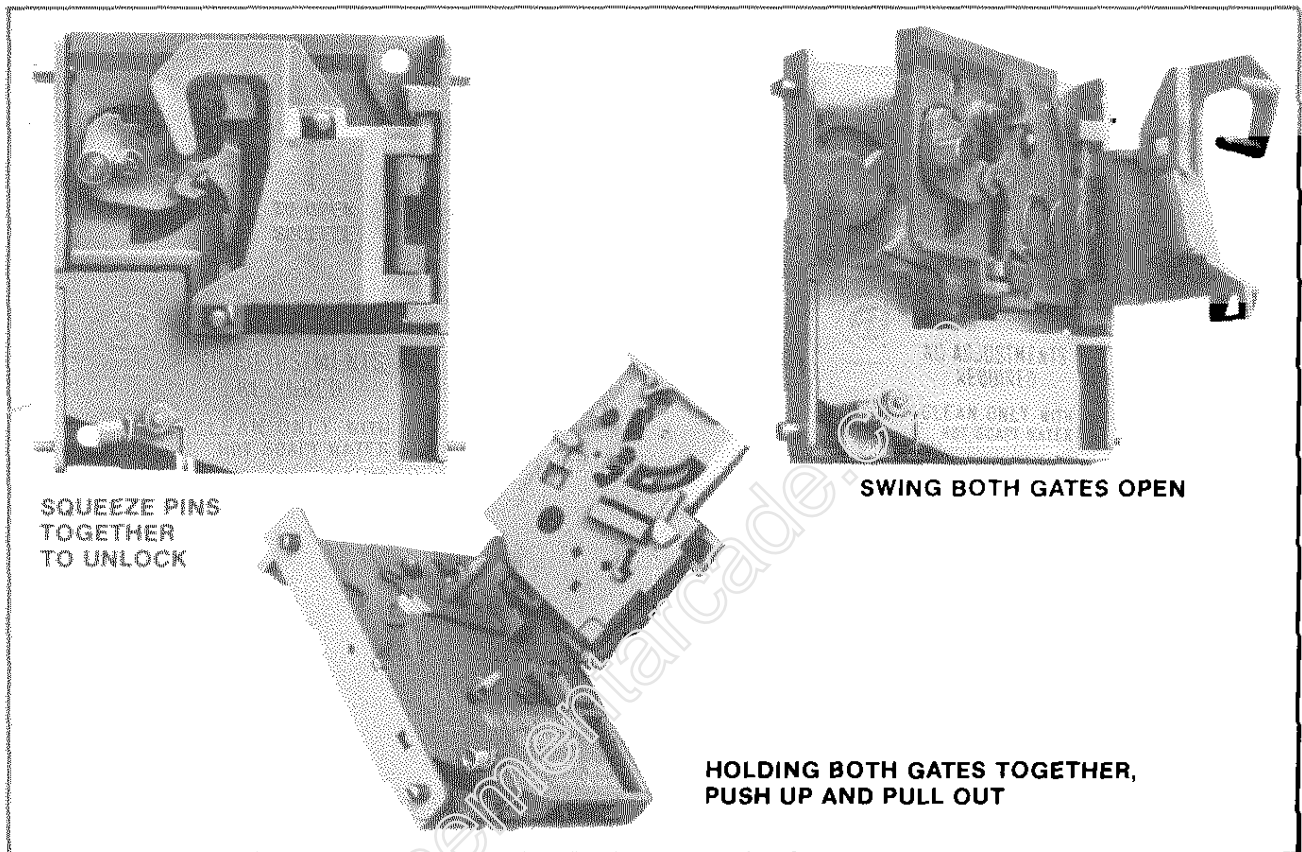

**Figure 4-4 Opening the Plastic Coin Acceptor**

#### **PLASTIC COIN ACCEPTOR MECHANISMS**

The plastic coin acceptor mechanism(s) must be removed periodically from the coin door and cleaned.

1. **Make sure the power to the game is off.**
2. Unlock and open the coin door.
3. Remove the coin acceptor mechanism(s) as shown in Figure 4-1.
  - ☐ Push down on the two spring loaded latches.
  - ☐ While holding the latches down, pull the top of the acceptor mechanism toward you.
  - ☐ Release the latches and lift out the mechanism
4. Squeeze the two pins indicated in Figure 4-4 together to open the mechanism and break it down into its three basic parts.
  - ☐ Clean the mechanism in hot soapy water. It never rusts.
  - ☐ Rinse the mechanism in clean hot water and allow it to dry.

☐ Reassemble the mechanism (it never needs lubrication).

5. Check the coin chute for obstructions such as: paper, gum, etc.
6. Reinstall the coin acceptor to the coin door. See Figure 4-5.
  - ☐ Place the two pegs at the coin acceptor's base into their retaining slots.
  - ☐ Now push the top of the coin acceptor toward the coin door until it snaps in place and is held there by the two spring loaded latches.
7. Close and lock the coin door.

**NOTE:** See Figure 4-6 for instructions on how to set the plastic coin acceptor mechanisms to either accept or reject Canadian quarters.

ACCEPTOR CAN BE SET TO ACCEPT U.S. QUARTERS ONLY OR BOTH U.S. AND CANADIAN QUARTERS.

MAGNET

SLIDE MAGNET TO EXTREME RIGHT (AS SHOWN) TO ACCEPT BOTH U.S. AND CANADIAN QUARTERS.

TO ACCEPT U.S. QUARTERS ONLY, SLIDE MAGNET TO EXTREME LEFT.

**Figure 4-5 Changing the Plastic Coin Acceptor to Accept American or Canadian Quarters.**



# V. T.V. Monitor Manual

## PLEASE NOTE:

THE INFORMATION CONTAINED IN THIS SECTION IS TOLD IN AN EASY TO UNDERSTAND MANNER AND IS INTENDED TO AID THOSE WITHOUT AN ELECTRONICS DEGREE IN TROUBLESHOOTING AND REPAIRING THEIR GAMES T.V. MONITOR.

IF YOU READ THROUGH THIS SECTION AND STILL HAVE QUESTIONS, PLEASE CONTACT YOUR DISTRIBUTOR OR MIDWAY MANUFACTURING COMPANY AT THE TOLL FREE NUMBER PROVIDED WITH YOUR GAMES PAPERS.

**OUR STAFF AND OUR DISTRIBUTORS STAND READY TO HELP YOU!**

**THANK YOU**

## Introduction: (How to use this section of your manual.)

This section has been designed to simply familiarize you with one of the more mystical components in your game — the T.V. monitor. If you are an electronics technician who is quite knowledgeable on the subject, you may decide to just go to the schematics and start troubleshooting the defective monitor. But if you are like most people, a monitor is a T.V. set, and that means a complex doo-dad that means big buck repairs. This isn't necessarily so. This section of the manual will acquaint you with the monitor and could just help you repair it if you feel adventurous enough to give it a try. If you have any knowledge of electronics, especially the use of a voltmeter, the repairs you can make are astonishing. Just keep in mind that **ELECTRICITY CAN BE VERY DANGEROUS, SO BE CAREFUL!!**

If you want to understand how a monitor works, just read the "THEORY OF OPERATION" subsection. If you wish, you can follow along with the schematics. The information is presented in a very basic manner but a more complete treatment of the subject can be found in the technical sections of bookstores.

If you want to attempt to repair your monitor, it would be a good idea to read this whole section beginning to end before starting. **Pay attention to all warnings**

**and take them seriously.** The more equipment you have the better, but a low cost Volt-Ohm-Milliameter can often do the trick. Here are the steps to take:

1. Find the symptom that matches the problems your monitor has in the "SYMPTOM — DIAGNOSIS" subsection. The diagnosis tells the circuit or area the problem may be in and possibly even the actual component causing it.
2. Once you have the circuit that is causing the trouble, read the "TROUBLESHOOTING" subsection to learn the procedure for finding the bad part.
3. Next, go to the schematic section and find the schematic that matches your monitor. It may be helpful to read the "DIFFERENCES BETWEEN MONITORS" subsection if you are unsure of which monitor you have. Use the schematic to see what parts are in the offending circuit.

That really is all there is to it. Just remember that there are some bizarre or rare symptoms not covered, or that a monitor may have two or more different problems that only a genius, the experienced, or an experienced genius can figure out. But be patient, follow safety precautions, and remember that there is also literature available from the monitor companies through your distributor or from Bally Midway Manufacturing Company on request. (There is a toll free number on the back side of the front cover of this manual.)

# Symptom Diagnosis

- 1. Insufficient width or height:**
  - A. Horizontal line (due to VERTICAL CIRCUIT DEFECT).
    - ☐ Bad yoke.
    - ☐ Bad vertical output section.
    - ☐ Open fusible resistor in vertical section.
    - ☐ Bad height control.
    - ☐ Bad flyback.
  - B. Vertical line (due to HORIZONTAL CIRCUIT DEFECT).
    - ☐ Bad yoke.
    - ☐ Open width coil.
    - ☐ Open part in horizontal output section.
- 2. Picture spread out too far or crushed in certain areas:**
  - A. Horizontal or vertical output transistor.
  - B. Bad Component in output circuitry.
  - C. Vertical linearity or damper control needs adjustment.
- 3. Line too close with black spacing:**
  - A. Problem in vertical section causing poor linearity.
- 4. Poor focus and convergence:**
  - A. Bad high voltage transformer ("flyback") or control.
  - B. Focus voltage wire not connected to neck-board terminal
- 5. Colors missing; check:**
  - A. Interface color transistors.
  - B. Color output transistors.
  - C. Cracked printed circuit board (neck Board).
  - D. Color circuits.
  - E. Video input jack.
  - F. Defective picture tube.
- 6. Picture not bright enough:**
  - A. Weak emission from picture tube.
- 7. Silvery effect in white areas; check:**
  - A. Beam current transistors.
  - B. Weak picture tube emission.
- 8. Too much brightness with retrace lines; check:**
  - A. Beam limiter transistors.
  - B. Brightness and/or color blanking control set too high.
- 9. Increasing brightness causes an increase in size and poor focus.**
  - A. Weak high voltage rectifier or regulation (high voltage unit).
  - B. Bad component in monitor's power supply.
- 10. Small picture and/or poor focus:**
  - A. Low B+ voltage (power supply trouble).
- 11. Vertical rolling:**
  - A. Vertical oscillator in the IC, vertical sync transistor, or circuit.
  - B. No sync from logic board.
  - C. Three pin sync. jack is loose or plugged in wrong.
- 12. Horizontal line across center:**
  - A. Vertical output circuit is dead (see symptom No. 1. A.).
  - B. Vertical oscillator is not putting out the right wave form.
- 13. Picture bends:**
  - A. Horizontal sync needs adjusting.
  - B. Magnetic or electromagnetic interference.
- 14. Flashing picture, visible retrace lines:**
  - A. Broken neck board.
  - B. Internal short circuit in the picture tube (arcing).
- 15. Unsymmetrical picture or sides of picture:**
  - A. Defective yoke.
- 16. No brightness, power supply operating — No high voltage for the picture tube; check:**
  - A. Horizontal oscillator.
  - B. Horizontal amplifier and output.
  - C. Flyback transformer (high voltage unit).
- 17. No brightness, high voltage present; check:**
  - A. Heater voltage to the tube at the neck board.
  - B. Screen-grid voltage for the tube.
  - C. Focus voltage.
  - D. Grid to cathode picture tube bias.
- 18. No high voltage; check:**
  - A. For AC input to the "flyback".
  - B. Horizontal deflection stages.
  - C. Flyback transformer.
  - D. Yoke.
  - E. Power supply
- 19. No horizontal and vertical hold; check:**
  - A. Sync transistors and circuit.
  - B. Wires and jack from logic board to the monitor.
- 20. Wavy picture — (power supply defect); check:**
  - A. Transistors, diodes, electrolytic capacitors in the power supply.

**21. Moving bars in picture:**

- A. Ground connector off between monitor and logic boards.
- B. Defect in the power supply (see wavy picture symptom).

**22. Washed out picture (see picture not bright enough):**

- A. Check video signal at the cathode pins with an oscilloscope. If there is about 80 volts peak to peak, the picture tube has weak emission.

**23. Monitor won't turn on:**

- A. Problem in the power supply: Check fuse, transistors, open fusible resistor.
- B. Shorted horizontal output transistor.

- C. Defective high voltage disabling circuit.

- D. Crack(s) somewhere on main chassis board.


**24. Can't adjust purity or convergence:**

- A. Use a degausser to demagnetize the picture tube carefully following your degausser's instructions.
- B. Picture tube defective.
- C. Nearby equipment is electromagnetically interfering.
- D. The poles of the earth are pulling off the purity — see "A" above.
- E. Poor focus or width of picture.
- F. Make sure you have the correct CRT number for that brand of monitor.


---

---

## Guide To Schematic Symbols

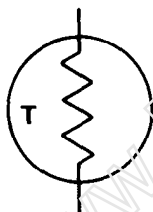

**THERMISTOR**  
(POLARITY DOESN'T MATTER)

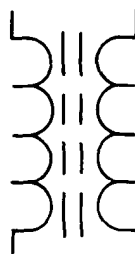

**IRON CORE TRANSFORMER**  
(SUCH AS A FLYBACK)



**INDUCTOR, COIL, CHOKE**  
(POLARITY DOESN'T MATTER)



**FUSE**  
(POLARITY DOESN'T MATTER)



(-) CATHODE

(+) ANODE


**ZENER DIODE**

CATHODE (-)




ANODE (+)

**DIODE**

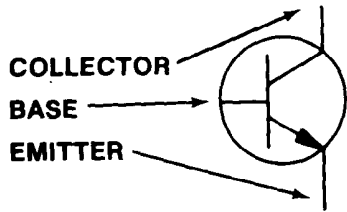

**NPN TRANSISTOR**

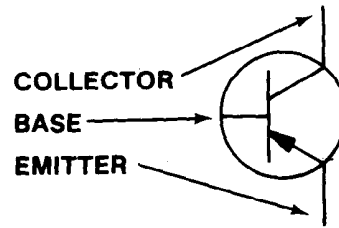


**PNP TRANSISTOR**




**VARIABLE RESISTOR, POT, CONTROL**  
(POLARITY DOESN'T MATTER)



**RESISTOR**  
(POLARITY DOESN'T MATTER)

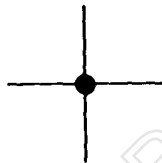


**LINES ARE CONNECTED**



**ELECTROLYTIC CAPACITOR**



**LINES ARE NOT CONNECTED**



**CAPACITOR**  
(POLARITY DOESN'T MATTER)



OR



**GROUND**

# Troubleshooting

Troubleshooting monitors requires experience, patience, **and luck**. The first step is to match the symptom the monitor displays to the diagnosis next to it in the "SYMPTOM-DIAGNOSIS" subsection. This will pinpoint the circuit the problem is probably in, and often the parts to check. Next, the circuit should be visually inspected to see if there are any parts broken, burned, or if something is there that shouldn't be, like a loose screw, etc. Some parts go bad before others and should be checked first. In fact, following is the general order in which parts usually go bad:

1. Semiconductors (like transistors, diodes, and integrated circuits).
2. Fusible resistors.
3. Electrolytic capacitors.
4. Resistors.
5. Capacitors and coils.

Always remember that a monitor can bite like a snake. Even when it is turned off, capacitors hold voltage and will discharge it to you should you be touching chassis ground. The picture tube or CRT, itself, is a giant capacitor, so avoid the flyback anode plug hole. With the monitor on, the power supply circuit and/or the flyback, which puts out at least 23,000 volts, **CAN BE KILLERS!!** Avoid handling power transistors (usually output transistors) or ICs, yoke terminals, and other high power components when the monitor is on.

## **WARNING: That picture tube is a bomb!**

When it breaks, first it implodes, then it explodes. Large pieces of glass have been known to fly in excess of 20 feet in all directions. **DO NOT** carry it by the long, thin neck. Discharge its voltage to ground by shorting the anode hole to ground. Use a plastic handled screwdriver, connect one end of a wire with an alligator clip at each end to chassis ground and the other end to the metal shaft of the screwdriver. Using **ONE HAND ONLY** (put the other in your pocket) and touching **ONLY** the plastic handle of the screwdriver (**DO NOT TOUCH THE METAL SHAFT**) stick the blade of the screwdriver into the anode hole.

**IMPORTANT!** The side brackets of the monitor are chassis ground as is the aquadag, the picture tube's dark conductive coating. **BUT**, on the ZENITH MONITOR there are metallic mounting parts which **ARE NOT** chassis ground. Discharging the CRT to these will damage the monitor!

Be prepared for a fairly loud pop and a flash. The longer the monitor has been turned off, the smaller the pop and dimmer the flash. But **BE CAREFUL**, picture tubes will hold a very healthy charge for at least **a week** if not longer. Even after you've discharged it once, it may still carry a residual charge. It's better to be too careful than dead, which is why electronic equipment always carries stickers referring servicing to qualified personnel. Handle the side with the viewing screen against your chest when changing it. **ALWAYS** wear safety goggles when handling the picture tube.

To maintain the safety and performance of the monitor, always use exact replacement parts. For instance, the wrong components in the power supply can cause a fire, or the wrong color transistor may give a funny color to the picture. Service your monitor on a nonconductive firm table like wood, **NOT METAL**, and take off all of your jewelry just in case. With all this in mind, you are ready to begin troubleshooting.

Observe the picture carefully. Try to vary the appropriate control that would most likely affect your particular symptom. For example, if there is poor brightness or no picture, try turning up the brightness or contrast control. If the controls have no effect at all, chances are there is trouble with the control itself, the circuit it controls, or a nearby circuit that may be upsetting voltages. Go to the list of symptoms and determine with the schematic where the bad circuit is.

## **CAUTION:**

**Keep in mind that capacitors hold a charge as can the picture tube (for at least a week and usually longer), and could shock you.**

First, check for obvious visual defects such as broken or frayed wires, solder where it is not supposed to be, missing components, burned components, or cracked printed circuit boards. If everything looks good up to this point, make sure that diodes, electrolytic capacitors, and transistors have their leads connected in the right polarity as shown on the schematic and the circuit board.

Turn on the power and measure the voltages at the leads of the active devices such as tubes, transistors, or integrated circuits. Any voltage that does not come within at least 10% to 15% of the voltage specified on the schematic indicates either a problem with that device or a component connected with it in the circuit. The next step is to use the ohmmeter to narrow down the field of possible offenders.

To test a transistor, one lead of the ohmmeter is placed on the base; and the other lead placed just on the emitter, then on the collector. A normal transistor will read either high resistance (infinite), or little resistance (400 to 900 ohms), depending on the polarity of this type transistor. Then the leads should be switched, one remaining on the base, and the other switched from the emitter to the collector. Now the opposite condition should result: the resistance should be infinite if it was lower when the other lead was on the base. Constantly infinite readings indicate an open, and a short is demonstrated by 0-30 ohms on most of these test readings. Finally, place one lead on the collector, then the other on the emitter. No matter which lead is used, there should be infinite resistance. Any lower reading, such as 50 ohms (which is typical on a bad transistor), indicates a short.

This all sounds pretty confusing, but a little experience on a good transistor will make you an expert in no time. Usually, the lowest ohmmeter setting is used for testing transistors. Once in a great while a transistor may check out good on this test, but may actually be "leaky" or break down only on higher voltages. If in doubt, change it. It is also wise to check the transistor out of the circuit just in case some component in the circuit is affecting the ohmmeter reading.

A diode is tested like a transistor except it only has two leads. Again, there should be high resistance one

way and little resistance the other. If it tests bad, take one lead out of the circuit in case some component is messing up the ohmmeter reading.

**NOTE: DO NOT** leave soldering equipment on the leads too long since all semiconductors, especially integrated circuits, are easily destroyed by heat.

Without special equipment, integrated circuits are checked by verifying the proper DC voltage on the pins and the correct AC wave form using an oscilloscope. **BE CAREFUL:** Shorting their pins can easily destroy them.

Resistors are checked with an ohmmeter and should usually be within ten percent of the value stated on them and on the schematic. You may have to desolder one lead from the printed circuit board. If you wreck the foil on the board, carefully solder a small wire over the break to reconnect the conductive foil.

Capacitors are tricky. Their resistance goes up when checked with an ohmmeter which shows a charging action. As they suck up current from the meter, the voltage goes up and so does the resistance. If you are sure a particular circuit is giving you a problem and everything else checks out O.K., Electrolytic capacitors are prime suspects. Substitute a new one and keep your fingers crossed.

---

## Theory of Operation

To understand what goes on inside the monitor, large general groups of circuits will be examined instead of laboriously analyzing the branches and small-circuits that make up these groups. This will help avoid confusion and aid in a basic, concrete, knowledge of what makes up a monitor.

### THE POWER SUPPLY —

The AC going to the monitor from the game transformer is just like the voltage and current from your wall outlet. It jumps up and down going positive and negative sixty times a second. But a monitor needs nice, smooth DC; direct current, not alternating. So diodes chop up the AC and a big electrolytic capacitor filters it out to make it even smoother. Since the monitor is a big piece of electronic equipment, with many circuits demanding a lot of power from the power supply, there are also zener diodes and transistors to help maintain a nice, constant, smooth voltage so that the monitor circuits don't jump around. And this is what happens when you see a wavy picture. There is AC creeping

through the power supply, so it must be malfunctioning. If the voltage from the power supply is too low, the other circuits will be starved for power and you may see a small, wavy picture, or none at all.

Some circuits receive voltages that are higher than what the power supply should put out. But they come from the flyback transformer which will be discussed later.

### THE INTERFACE SECTION OF THE CHASSIS —

The interface section of the chassis is fairly easy to identify. It is right by the place where the video jack(s) from the logic board(s) plug into. There are sets of transistors that receive the separate red, green, blue, and sync information from the cables that come from the logic boards. The circuits jack up the voltage and match impedances, or in other words, prepare the logic board outputs for the circuits that will really amplify them for the output devices such as the yoke in the case of the sync, or the picture tube that shows the colors.

An interesting aside is that our sync is composite negative sync. That means two things:

1. The sync is a negative going wave form.
2. There are two pulses going at different speeds over the same wire:
  - a. Vertical wave forms at 60 times per second (or Hertz) and
  - b. Horizontal wave forms at about 15,750 times per second (Hz).

The sync is amplified by a sync amplifier transistor and sent on its way to the oscillators. The sync or timing information will be explained along with the oscillator shortly.

The color information is sent via wires to the neck board where the main amplification occurs. This will also be discussed later.

## VERTICAL AND HORIZONTAL DEFLECTION—

After the sync signal is amplified by the sync amp, it goes to two different sections, the vertical and horizontal circuits. Basically, the sync signals are for timing so the picture doesn't mess up since it is assembled like an orderly jigsaw puzzle, but so fast that you can't see the electron beams for each color painting the picture on the screen. This will all become clear soon. For now, we will follow the 60 cycle component of the sync as it goes on its journey to the deflection yoke.

The 60 cycle pulse goes to the vertical oscillator to make sure this circuit goes back and forth (or oscillates) at 60 times a second. Without this pulse keeping the circuit at the correct speed, it may get lazy and oscillate at 55 cycles or lower, or get ambitious and oscillate at 62 cycles or higher. At the wrong speed, the picture will start to roll up or down.

A Wells Gardner 13" (K4806) or 19" (K4906, K4956) color monitor uses an integrated circuit for its sync section. An Electrohome 13" or 19" color monitor uses an integrated circuit IC501 for its sync section. The Zenith monitor (CD19MXRF06) also uses an IC for the sync processing. Wells Gardner uses HA11423, Electrohome uses HA11244, and Zenith uses 221-175 (their part number). **These ARE NOT interchangeable!** The idea is all the same. The output to the vertical amplifying transistors for all monitors must form a sawtooth wave form, sort of like a bunch of pyramids, racing through the yoke's vertical coils at 60 times a second.

Along the way to the output transistors, the 60 cycle pulse is shaped and amplified to do the job: the yoke magnetically pushes the electron beam to fill the screen out sideways looking at the screen with the greatest length going up and down. Or viewing the screen sitting like a home television set, the amplified vertical output fills the screen up and down. Watching a monitor like this, seeing only a horizontal line means a problem with the vertical coils of the yoke or

anything from the vertical output section on back to the oscillator.

The horizontal section is very similar with a few exceptions. The horizontal wave shape is more like a square and has a frequency of 15,750 cycles a second. Both Wells Gardner and Electrohome use the other side of their respective integrated circuits for the horizontal circuitry. If the oscillator isn't going at the correct speed, the picture may move sideways, start to slant, or tear up with slanted thin figures. With both the vertical and horizontal of all monitors, there are variable resistors that change the speed of the oscillators up and down. This way you have controls that can make the correct frequencies to keep the electronic jigsaw puzzle nicely locked in place. If you're driving in a car and next to you someone else is driving their car at exactly the same speed, it will appear that they are not moving. And this is why the sync frequency and the oscillator's frequency must match, so the picture doesn't appear to move.

The correct wave form is shaped and amplified in the circuitry just like in the vertical section. But the horizontal output transistor is a large power transistor and not only serves to give current to the horizontal yoke windings, it also feeds the flyback transformer.

## THE FLYBACK TRANSFORMER (OR HIGH VOLTAGE UNIT) —

The picture tube needs high voltage to light up, and the power supply can't meet this demand. The flyback transformer receives current alternating at about 15,750 times per second from the horizontal output transistor. The "flyback" jacks up its input voltage and puts out a higher voltage alternating at the same speed. But, in your "flyback" there are diodes that chop up the alternating voltage to make it a smooth DC output just like in the power supply. This is what goes through that thick red wire to your picture tube. **THIS AREA HAS ABOUT 24,000 VOLTS ON IT AND IT CAN KILL YOU!!**

The "flyback" may be dangerous, but it is also generous. It has extra output windings which give voltage to the heater pins of the picture tube, voltage for the vertical deflection circuits, and picture tube screen-grid voltage. So in a way, the high voltage "flyback" is like a second power supply.

## COLOR CIRCUITS —

The color circuits are pretty straight forward. The signals go into the interface section where some amplification and impedance matching occurs. These circuits are pretty sparse and simple. Each color just has two transistors and a diode with some resistors and capacitors. From here, the AC color signal is sent by wires to the neck board.

The color output circuits are on the neck board. The color signals going to the transistors are controlled by two variable resistors called drive controls. There are only two, one for the red and one for the green on

Wells Gardner and Electrohome monitors. Zenith monitors have all three: red, blue and green.

The Wells Gardner and Electrohome monitor have another variable resistor in their emitter part of their color output transistors. These "cutoff controls" vary the amount of A.C. signal that the transistor amplifies and sends to the cathodes of the picture tube. The Zenith monitor has its cutoff controls in the interface section to vary the amount of signal going to the output transistors. The more signal, the more color.

If you think this is confusing, here is another little hitch. The Electrohome and Zenith monitors both have the actual A.C. picture information signal going through the emitters of the color output transistors. The Wells Gardner has the A.C. signal going to the base of the transistors. The blanking and beam limiting signals which come from the blanking and beam limiting transistors in the interface section go into the color output transistor base in the Electrohome and Zenith monitors, but enters into the emitter of the Wells Gardner monitor's color output transistor. Should you feel adventurous enough to look at this signal on an oscilloscope, it should look like a square.

The beam limiter helps control the brightness level, and the blanking transistor rapidly turns the picture tube on and off so that retrace lines don't show up on the screen. By turning up the brightness on a good monitor, these four to six retrace lines can be seen slanting diagonally across the picture.

## PROTECTION CIRCUIT —

To protect the high voltage section against voltages that are too high coming from the power supply which could cause X-rays to be emitted from the "flyback", a circuit senses the higher power supply voltage and turns off the horizontal oscillator. Since the horizontal oscillator doesn't work, the horizontal output transistor has nothing to feed the "flyback" which in turn has nothing to feed the picture tube. The monitor will be silent, have no picture, and will appear to be off. **But don't be fooled.** There is still that excessive amount of voltage coming from the power supply. To find out, check at pin two of Wells Gardner's IC501 and emitter of X04 for the Electrohome monitor. Check the 95 volt test point (located near the "flyback") for the Zenith monitor. Here are the voltages you should receive:

|               |          |
|---------------|----------|
| Wells Gardner | = 130VDC |
| Electrohome   | = 120VDC |
| Zenith        | = 95VDC  |

The best place to measure this voltage on an Electrohome monitor is at a pin marked B1 on the chassis. This is because a 13 inch color Electrohome monitor, The G07-FB0 or G07-902, has an integrated circuit and very little else in the power supply. Still, there should be 120VDC at B1.

## THE PICTURE TUBE (OR CRT) —

**ATTENTION!** For information on picture tube replacement types, go to the last section, "PICTURE TUBE INTERCHANGEABILITY"

The picture tube or CRT is an output device. In other words, the end result of the circuit's work is displayed by this part. Actually, the output of other circuits is in the neck of the picture tube.

First, there is the heater. The heater boils off electrons from the cathodes so that they (the electrons) shoot up to the screen to excite the phosphors so that the three phosphors emit three colors of light.

The cathodes are next, and again they emit electrons to turn on the tube phosphors, making it glow. A defective cathode may cause the particular color it handles to be missing.

Next come the grids. The first grid is grounded. The following grid is the screen grid which receives about 300VDC depending on the brightness setting. The next grid closest to the picture tube screen is the focus grid which gets about one fifth the amount of voltage that is applied to the picture tube anode.

After jetting from the cathode through all these grids, the electrons speed through a mask, a sheet of material with tiny holes, and then excite the tiny dots of phosphor in the inside surface of the picture tube screen. The green electron gun (or cathode and circuitry) spits out electrons which head for the green phosphors only. The same goes for the red and blue guns. The way the phosphor light blends determines the color seen. Should these electron beams become too intense, they may burn the phosphor. With the monitor off, this can be seen as a dark permanent image of the video information on the tube screen.

---

## Differences Between Monitors

The easiest way to identify the brand of monitor you are working with is to find the manufacturer's name or model number printed on the chassis or chassis base. But what if the monitor was in a Texas dust storm or buried in volcanic ash and this information is no longer there? Fear not! Each monitor has its own peculiarities and the following should help to identify them:

The **ELECTROHOME** G07-904 (19") and G07-902 (13") have their horizontal and vertical processing IC hidden under a silver can. A shiny metal top behind the "VERTICAL HEIGHT" and "HORIZONTAL FREQUENCY" control prove this is an Electrohome monitor.



The **WELLS GARDNER** K4906 (19") and K4806 (13") have their horizontal and vertical processing IC out in the open directly behind the "VERTICAL HOLD" control.

The **ZENITH** C019MXRF06 (19") monitor has its horizontal and vertical processing IC way in back by the picture tube. The monitor also has large white cables going from the main board to the neck board.

**K4906 (1st TYPE)** — This monitor's identifying tags have **BLACK** ink printed on a white background. There is **NO** Vertical Damping Control. (This Control would be next to the Vertical Hold Control but this area is jumpered with a small wire instead.

**K4906 (2nd TYPE)** — This monitor's identifying tags have **RED** ink printed on a white background. There **IS** a Vertical Damping Control next to the Vertical Hold Control. The Damping Control provides a few more lines on the top of the monitor screen (monitor viewed as a normal T.V. would be) for any video game that may need these lines to fit the picture on the screen. Moving the Control may distort the top part of your picture (or the side, depending on the game and how the monitor is mounted) so go ahead and move it if you are having this type of problem. To accommodate this new feature, there are a few circuit changes.

ONE MAJOR DIFFERENCE BETWEEN THESE TWO VERSIONS OF THE K4906 IS THE YOKE. They look the same but notice the part numbers:

K4906 **WITHOUT** the Damper Control: 2021111201

K4906 **WITH** the Damper Control: 2021111258

Since the companies like to change part numbers at the drop of a hat, the best thing to do is to request whatever part number is written on your yoke. If you should get the wrong yoke, the results will be:

Picture distortion.

Excessive brightness.

Too much or too little vertical picture size.

## CONTROLS YOU MAY NOT TOUCH

Basically, on the Electrohome monitor, you can move any control you want **EXCEPT** for the B1 control. This sets the power supply voltage (ideally at 120 VDC) and is located right behind VERTICAL HOLD. The 13" Electrohome **DOES NOT** have this control. It may also be wise not to move the VERTICAL LINEARITY since this distorts the picture and is hard to reset perfectly. If you do move it, turn on the Cross Hatch Test Pattern of your game and try to get the squares to the point where they are equal in size by readjusting this Linearity Control.

On the Wells Gardner monitor, brightness is adjusted by the "BLACK LEVEL" Control which is right next to the Horizontal Frequency Control. Under the Focus Control is the "SCREEN" Control which you **DO NOT** touch. Yes, this control does adjust the brightness,

but it is used to set the CRT bias and is adjusted at the factory. When Wells Gardner sets it, they mark the position with a black mark on the knob. If you move it, be sure to realign the mark and **THEN** set the **BLACK LEVEL** Control to the brightness you desire. So, other than the **SCREEN** control, you may adjust any of the controls.

The Zenith monitor has a 95 volt adjustment control. It is green and located behind the jack labeled 3D3. To discourage you from moving it, Zenith has placed a little glue on top of this control.

---

## Parts Interchangeability

Some parts can be interchanged on all of the monitors. Here are the rules:

1. You **CAN** swap any resistor between monitors that has the same resistance, wattage rating, and tolerance.
2. You **CAN** swap any capacitor between monitors that has the same capacitance and voltage rating.
3. You **CAN** swap many of the parts between the 19" and the 13" versions of each manufacturer's monitor. **BUT**, be certain to compare the manufacturers' part numbers to be positive the parts you want to interchange are identical. **BE SURE** you have read the section **DIFFERENCES BETWEEN MONITORS** which was covered earlier.
4. You **MAY BE ABLE** to swap picture tubes between monitors. In the past you could swap any picture tube, but due to rampant engineering changes and new monitor models being introduced, you would need a computer to keep track of what could be swapped. For more information on this subject, go to "PICTURE TUBE INTERCHANGEABILITY".
5. You **CANNOT** change any part that is a **safety part**, one that is shaded in gray on the schematic; it **MUST** be **IDENTICAL** to the original. **To do otherwise IS DANGEROUS**. For instance, the 13 inch Electrohome (G07-902) monitor "flyback" looks identical to the 19 inch Electrohome (G07-904) monitor "flyback". In fact, there is even a 19 inch Electrohome (G07-905) monitor (which is an obsolete model) with a similar looking "flyback". **NONE OF THESE ARE INTERCHANGEABLE!!**
6. You **CAN** change any of the parts between the G07-904 and G07-907. They're essentially the same monitor except that the G07-907 has a vertically mounted picture tube.

If there is any doubt about what parts can be swapped between each manufacturer's 19 inch and 13 inch models, compare the manufacturer's part number between each one. If they match up, they are the same part.

---

# Picture Tube Interchangeability

## 13" MONITORS

There are currently two 13" monitors being used: the Wells Gardner K4806 and the Electrohome G07-902. The picture tubes used are NOT interchangeable. The pins on the neck of the CRT will not fit in the socket should you use the wrong CRT.

Here is a chart for all the 13" color monitors Bally Midway uses.

|               |         |   |          |
|---------------|---------|---|----------|
| ELECTROHOME   | G07-902 | — | 370ESB22 |
| WELLS GARDNER | K4806   | — | 370KSB22 |

The factory recommended CRT type could change in the future for one reason or another, but the listed picture tubes will work. As a matter of fact, you can call another picture tube company to see if they have a replacement number to recommend...but caveat emptor — let the buyer beware.

## 19" MONITORS

Here it gets a little tricky. All of the picture tubes will fit no matter which is used. But if you use the wrong one, you will have problems with purity and/or dynamic convergence.

Purity trouble means that the color won't be true. If you turn up the color control for one color, instead of seeing that solid color it will show blotches or blobs of other colors on the screen.

Trouble with dynamic convergence means that there will be color fringing around solid lines at the edges of the screen.

The only way to ensure that you avoid these problems is to get the right picture tube or the right substitute.

Here is a list of the 19" monitors and the **CORRECT** CRT numbers.

### ALL ELECTROHOME G07-904 —

19VMNP22 RCA  
19VMJP22 RAULAND  
510UJB22 HITACHI

### WELLS GARDNER K4906 —

19VLTP22 RCA  
19VMLP22 ZENITH  
19VMKP22 PHILLIPS

### ZENITH CD19MXRF06 —

19VMLP22 ZENITH  
19VLTP22 RCA  
19VMKP22 PHILLIPS


# 19" COLOR MONITOR MODELS 19K4901, 19K

Power Supply Voltage and Symbols

| Symbol | Voltage | Operating Circuit  |
|--------|---------|--|
|        | 15V     | Vert. Osc.<br>Sync<br>Blanking<br>CRT Cut-Off              |
|        | 130V    | Horiz. Osc.<br>Horz. Drive<br>Horz. Output<br>Vert. Output |
|        | 175V    | Video Output   |


## SERVICE TECHNICIAN WARNING X-RAY RADIATION PRECAUTION:

THIS PRODUCT CONTAINS CRITICAL ELECTRICAL AND MECHANICAL PARTS ESSENTIAL FOR X-RAY RADIATION PROTECTION.  
FOR REPLACEMENT PURPOSES, USE ONLY TYPE PARTS SHOWN IN THE PARTS LIST

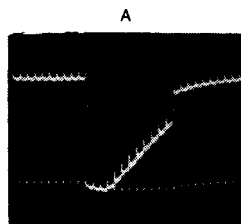

1V/DIV 200uSEC/DIV

TP-31 DC COUPLED  
BOTTOM LINE = 0 VDC

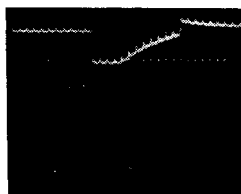


2V/DIV 200MSEC/DIV

I.C. 301, PIN 3




1V/DIV 5MSEC/DIV

TP-82

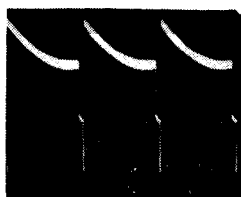


20V/DIV 5MSEC/DIV

I.C. 301, PIN 13

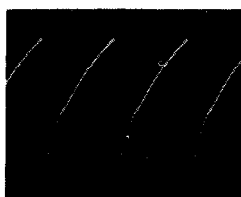

1VDIV 200uSEC/DIV

Q351 COLLECTOR

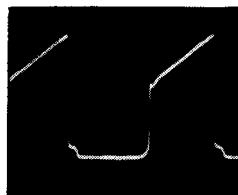


20V/DIV 10uSEC/DIV

J402-3




5V/DIV 20uSEC/DIV

F

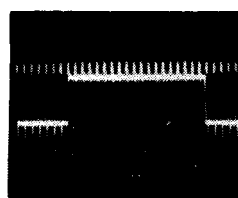


1V/DIV 20u SEC/DIV

TP-31, AC COUPLED

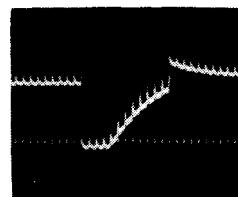


1V/DIV 200uSEC/DIV

NEGATIVE SIDE OF C303

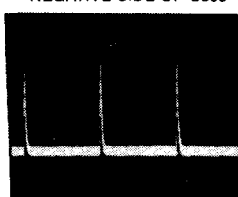


2V/DIV 5MSEC/DIV

TP-81

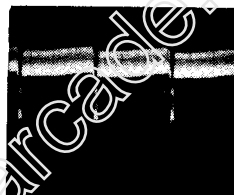

0.5/DIV 5MSEC/DIV

B

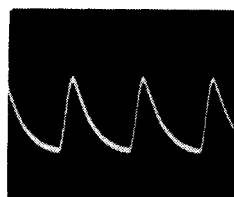


0.5/DIV 20u SEC/DIV

I.C. 301, PIN 15




1V/DIV 10uSEC/DIV

D

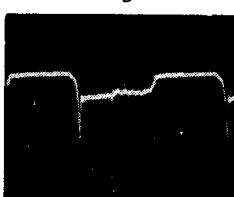


2V/DIV 10uSEC/DIV

F

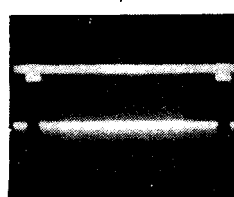

1VDIV 2MSEC/DIV

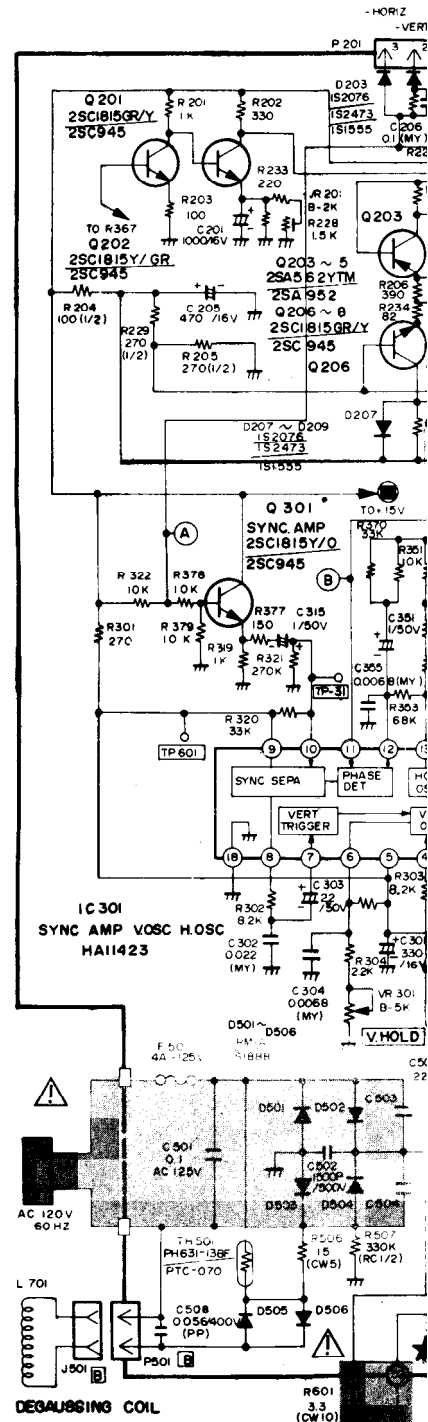

# MONITOR SCHEMATIC DIAGRAM


01, 19K4906, 19K4951, 19K4956

**CAUTION: FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.**  
**AVERTISSEMENT: POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL NE REMPLACER LES COMPOSANTS DONT LE FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDEES PAR LE FABRICANT.**

## OSCILLOSCOPE WAVEFORM PATTERN

The waveforms shown are as observed on the wide band oscilloscope with the monitor turned to a reasonably strong signal and a normal picture. The voltages shown on each waveform are the approximate peak amplitudes.

If the waveforms are observed on the oscilloscope with a poor high frequency response, the corner of the pulses will tend to be more rounded than those shown and the amplitude of any high frequency pulse will tend to be less.

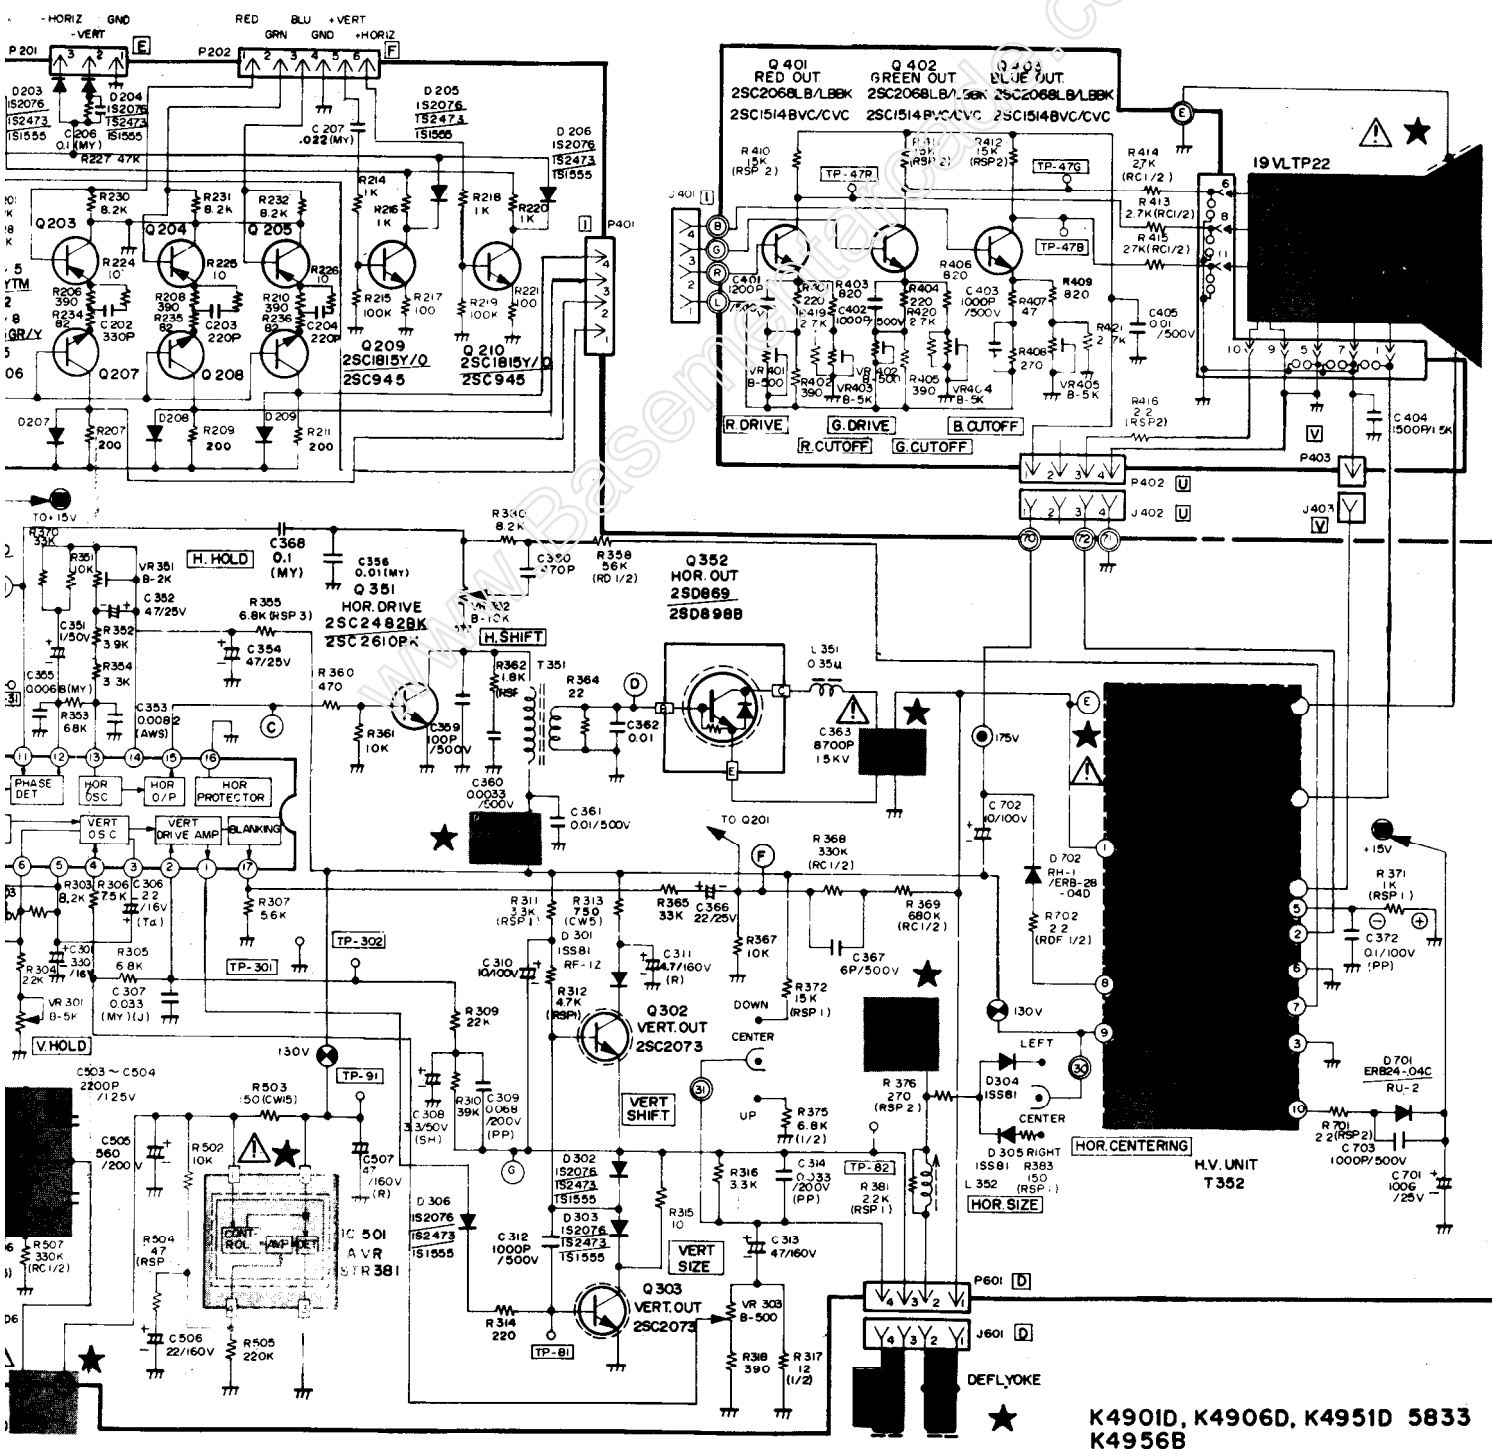

K4901D, K4906D, K4951D 5833  
 K4956B

## REPLACEMENT PARTS LIST

This monitor contains circuits and components included specifically for safety purposes.

For continued protection no changes should be made to the original design, and components shown in shaded areas of schematic, or  $\Delta$  ★ on parts list should be replaced with exact factory replacement parts.

The use of substitute parts may create a shock, fire, radiation or other hazard. Service should be performed by qualified personnel only.

### MAIN BOARD

| Ref. No.         | Part No.     | Description                  |
|------------------|--------------|------------------------------|
| <b>RESISTORS</b> |              |                              |
| R201             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R202             | 203X6500-523 | 30 Ohm, 5%, 1/4W Carbon      |
| R203             | 203X6500-405 | 100 Ohm, 5%, 1/4W Carbon     |
| R204             | 203X6700-327 | 100 Ohm, 5%, 1/2W Carbon     |
| R205             | 203X6700-421 | 270 Ohm, 5%, 1/2W Carbon     |
| R206             | 203X6500-540 | 390 Ohm, 5%, 1/4W Carbon     |
| R207             | 340X2201-934 | 200 Ohm, 5%, 1/4W Carbon     |
| R208             | 203X6500-540 | 390 Ohm, 5%, 1/4W Carbon     |
| R209             | 340X2201-934 | 200 Ohm, 5%, 1/4W Carbon     |
| R210             | 203X6500-540 | 390 Ohm, 5%, 1/4W Carbon     |
| R211             | 340X2201-934 | 200 Ohm, 5%, 1/4W Carbon     |
| R214             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R215             | 203X6501-126 | 100K Ohm, 5%, 1/4W Carbon    |
| R216             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R217             | 203X6500-405 | 100 Ohm, 5%, 1/4W Carbon     |
| R218             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R219             | 203X6501-126 | 100K Ohm, 5%, 1/4W Carbon    |
| R220             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R221             | 203X6500-405 | 100 Ohm, 5%, 1/4W Carbon     |
| R222             | 203X6500-762 | 3.3 Ohm, 5%, 1/4W Carbon     |
| R224             | 203X6500-169 | 10 Ohm, 5%, 1/4W Carbon      |
| R225             | 203X6500-169 | 10 Ohm, 5%, 1/4W Carbon      |
| R226             | 203X6500-169 | 10 Ohm, 5%, 1/4W Carbon      |
| R227             | 203X6501-044 | 47K Ohm, 5%, 1/4W Carbon     |
| R228             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R229             | 203X6700-421 | 270 Ohm, 5%, 1/2W Carbon     |
| R230             | 203X6500-863 | 8.2K Ohm, 5%, 1/2W Comp.     |
| R231             | 203X6500-863 | 8.2K Ohm, 5%, 1/2W Comp.     |
| R232             | 203X6500-863 | 8.2K Ohm, 5%, 1/2W Comp.     |
| R233             | 203X6500-468 | 180 Ohm, 5%, 1/4W Carbon     |
| R234             | 340X2820-934 | 32 Ohm, 5%, 1/4W Carbon      |
| R235             | 340X2820-934 | 82 Ohm, 5%, 1/4W Carbon      |
| R236             | 340X2820-934 | 82 Ohm, 5%, 1/4W Carbon      |
| R301             | 203X6500-508 | 270 Ohm, 5%, 1/4W Carbon     |
| R302             | 203X6500-863 | 8.2K Ohm, 5%, 1/4W Carbon    |
| R303             | 203X6500-863 | 8.2K Ohm, 5%, 1/4W Carbon    |
| R304             | 203X6500-724 | 2.2K Ohm, 5%, 1/4W Carbon    |
| R305             | 203X6500-842 | 6.8K Ohm, 5%, 1/4W Carbon    |
| R306             | 203X6003-201 | 7.5K Ohm, 2%, 1/4W Carbon    |
| R307             | 203X6500-825 | 5.6K Ohm, 5%, 1/4W Carbon    |
| R309             | 203X6500-965 | 22K Ohm, 5%, 1/4W Carbon     |
| R310             | 203X6500-988 | 39K Ohm, 5%, 1/4W Carbon     |
| R311             | 203X6500-762 | 3.3K Ohm, 5%, 1/4W Carbon    |
| R312             | 203X9014-741 | 4.7K Ohm, 5%, 1/4W Carbon    |
| R313             | 204X1450-537 | 1K Ohm, 5%, 5W Carbon        |
| R314             | 203X6500-481 | 220 Ohm, 5%, 1/4W Carbon     |
| R315             | 203X6500-169 | 10 Ohm, 5%, 1/4W Carbon      |
| R316             | 203X6500-762 | 3.3K Ohm, 5%, 1/4W Carbon    |
| R317             | 203X6700-107 | 12 Ohm, 5%, 1/2W Carbon      |
| R318             | 203X6500-540 | 390 Ohm, 5%, 1/4W Carbon     |
| R319             | 203X6500-645 | 1K Ohm, 5%, 1/4W Carbon      |
| R320             | 203X6501-002 | 33K Ohm, 5%, 1/4W Carbon     |
| R321             | 203X6501-224 | 270K Ohm, 5%, 1/2W Carbon    |
| R322             | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R351             | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R352             | 203X6500-785 | 3.9K Ohm, 5%, 1/4W Carbon    |
| R353             | 203X6501-086 | 68K Ohm, 5%, 1/4W Carbon     |
| R354             | 203X6500-762 | 3.3K Ohm, 5%, 1/4W Carbon    |
| R355             | 203X9205-143 | 6.8K Ohm, 5%, 3W Metal Oxide |
| R358             | 203X5601-878 | 56K Ohm, 5%, 1/2W Carbon     |
| R360             | 203X6500-561 | 470 Ohm, 5%, 1/4W Carbon     |
| R361             | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R362             | 203X9014-645 | 1.8K Ohm, 5%, 1W Metal Oxide |
| ★R363            | 204X1527-751 | 3.9K Ohm, 5%, 7W Metal Oxide |
| R364             | 203X6500-246 | 22 Ohm, 5%, 1/4W Carbon      |
| R365             | 203X6501-002 | 33K Ohm, 5%, 1/4W Carbon     |
| R367             | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R368             | 203X5602-185 | 330K Ohm, 5%, 1/2W Comp.     |

| Ref. No.                 | Part No.     | Description                  |
|--------------------------|--------------|------------------------------|
| <b>RESISTORS (CONT.)</b> |              |                              |
| R369                     | 203X5602-329 | 680K Ohm, 5%, 1/2W Comp.     |
| R370                     | 203X6501-002 | 33K Ohm, 5%, 1/4W Carbon     |
| R371                     | 203X9014-584 | 1K Ohm, 5%, 1W Metal Oxide   |
| R372                     | 203X9101-119 | 12K Ohm, 5%, 1W Metal Oxide  |
| R375                     | 203X6700-763 | 6.8K Ohm, 5%, 1/2W Carbon    |
| R376                     | 203X9104-404 | 270 Ohm, 5%, 2W Metal Oxide  |
| R377                     | 203X6500-447 | 150 Ohm, 5%, 1/4W Carbon     |
| R378                     | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R379                     | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R380                     | 203X6500-865 | 8.2K Ohm, 5%, 1/4W Carbon    |
| R381                     | 203X6500-724 | 2.2K Ohm, 5%, 1W Metal Oxide |
| R383                     | 203X9014-387 | 150 Ohm, 5%, 1W Metal Oxide  |
| R502                     | 203X6500-886 | 10K Ohm, 5%, 1/4W Carbon     |
| R503                     | 204X1700-535 | 150 Ohm, 5%, 15W Metal Oxide |
| R504                     | 203X9014-267 | 47 Ohm, 5%, 1W Metal Oxide   |
| R505                     | 203X6501-209 | 2.2K Ohm, 5%, 1/4W Carbon    |
| R506                     | 203X9104-105 | 15 Ohm, 5%, 2W Metal Oxide   |
| R507                     | 203X5602-185 | 330K Ohm, 5%, 1/2W Comp.     |
| ★R601                    | 204X1625-058 | 3.3 Ohm, 5%, 10W WW          |
| R701                     | 203X9105-141 | 2.2 Ohm, 5%, 2W Metal Oxide  |
| R702                     | 203X6206-441 | 2.2 Ohm, 5%, 1/2W Carbon     |
| VR201                    | 204X2070-072 | 2K Ohm-B Semi-Fixed          |
| VR301                    | 204X2070-084 | 5K Ohm-B Semi-Fixed          |
| VR303                    | 204X2070-055 | 500 Ohm-B Semi-Fixed         |
| VR351                    | 204X2070-072 | 2K Ohm-B Semi-Fixed          |
| VR352                    | 204X2070-072 | 2K Ohm-B Semi-Fixed          |

### CAPACITORS


|       |              |                            |
|-------|--------------|----------------------------|
| C201  | 203X0014-088 | 1000 uF, 16V, Electrolytic |
| C202  | 202X7200-064 | 330 pF, 500V, Ceramic      |
| C203  | 202X7200-043 | 220 pF, 500V, Ceramic      |
| C204  | 202X7200-043 | 220 pF, 500V, Ceramic      |
| C205  | 203X0014-076 | 470 uF, 16V, Electrolytic  |
| C206  | 203X1810-149 | 0.1 uF, 125V Mylar         |
| C207  | 349X2232-109 | .022 uF, 100V Mylar        |
| C301  | 203X0014-065 | 330 uF, 50V Electrolytic   |
| C302  | 203X1600-563 | 0.033 uF, 50V Mylar        |
| C303  | 203X0629-037 | 3.3 uF, 50V Electrolytic   |
| C304  | 203X1600-366 | 0.068 pF, 50V Mylar        |
| C306  | 203X0412-012 | 2.2 uF, 16V Tantal         |
| C307  | 203X1600-634 | 0.033 uF, 50V Mylar        |
| C308  | 203X0025-174 | 3.3 uF, 50V Electrolytic   |
| C309  | 203X1207-100 | 0.068 uF, 100V PP          |
| C310  | 203X0629-061 | 10 uF, 100V Electrolytic   |
| C311  | 203X0041-025 | 10 uF, 160V Electrolytic   |
| C312  | 202X7050-248 | 1000 pF, 500V Ceramic      |
| C313  | 203X0040-052 | 47 uF, 160V Electrolytic   |
| C314  | 203X1201-265 | 0.033 uF, 200V PP          |
| C315  | 203X0629-023 | 1 uF, 50V Electrolytic     |
| C351  | 203X0629-023 | 1 uF, 50V Electrolytic     |
| C352  | 203X0619-045 | 47 uF, 25V Electrolytic    |
| C353  | 203X1190-015 | 0.0082 pF, 50V Mylar-PP    |
| C354  | 203X0619-045 | 47 uF, 25V Electrolytic    |
| C355  | 203X1600-366 | 0.0068 pF, 50V Mylar       |
| C356  | 202X7050-483 | 0.01 uF, 500V Ceramic      |
| C359  | 202X8065-606 | 100 pF, 500V Ceramic       |
| C360  | 202X7050-366 | 0.0033 pF, 500V Ceramic    |
| C361  | 202X7050-483 | 0.01 uF, 500V Ceramic      |
| C362  | 202X7203-032 | 0.01 uF, 50V Ceramic       |
| ★C363 | 203X1270-911 | 8700 pF, 1.5 KV PP         |
| ★C365 | 203X1201-265 | 0.33 uF, 200V PP           |
| C366  | 203X0019-026 | 22 uF, 25V Electrolytic    |
| C367  | 202X8065-162 | 6 pF, 500V Ceramic         |
| C368  | 202X7203-032 | 0.01 uF, 50V Ceramic       |
| C372  | 203X1207-125 | 0.1 uF, 100V PP            |


## MAIN BOARD (CONT.)

| Ref. No.                  | Part No.     | Description                  | Ref. No.                        | Part No.                       | Description                   |
|---------------------------|--------------|------------------------------|---------------------------------|--------------------------------|-------------------------------|
| <b>CAPACITORS (CONT.)</b> |              |                              | <b>SEMICONDUCTORS (CONT.)</b>   |                                |                               |
| C380                      | 202X7200-087 | 470 uF, 500V Ceramic         | Q206                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| △ C501                    | 203X1810-149 | 0.1 uF, 125V Mylar           | Q207                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| △ C502                    | 202X7050-282 | 1500 pF, 500V Ceramic        | Q208                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| △ C503                    | 202X7810-214 | 2200 pF, 125V Ceramic        | Q209                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| △ C504                    | 202X7810-214 | 2200 pF, 125V Ceramic        | Q210                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| C505                      | 203X0220-075 | 560 uF, 200V Electrolytic    | Q301                            | 200X3181-523                   | Transistor (NPN) 2SC1815GR    |
| C506                      | 203X0040-034 | 22 uF, 160V Electrolytic     | Q302                            | 200X3207-306                   | Transistor (NPN) 2SC2073LBGL2 |
| C507                      | 203X0041-057 | 47 uF, 160V Electrolytic     | Q303                            | 200X3207-306                   | Transistor (NPN) 2SC2073LBGL2 |
| C701                      | 203X0019-092 | 1000 uF, 25V Electrolytic    | Q351                            | 200X3248-217                   | Transistor (NPN) 2SC2482BK    |
| C702                      | 203X0634-061 | 10 uF, 100V Electrolytic     | Q352                            | 200X4589-802                   | Transistor (NPN) 2SD898B      |
| C703                      | 202X7050-248 | 1000 pF, 500V Ceramic        | IC301                           | 200X2300-033                   | IC HA11423                    |
| <b>SEMICONDUCTORS</b>     |              |                              | △ ★ IC501                       | 200X2600-183                   | IC STR381                     |
| D203                      | 201X2010-159 | Diode, IS2076-27             | <b>TRANSFORMERS &amp; COILS</b> |                                |                               |
| D204                      | 201X2010-159 | Diode, IS2076-27             | L351                            | 201X4710-134                   | Coll, (RF Choke)              |
| D205                      | 201X2010-159 | Diode, IS2076-27             | L352                            | 201X5000-083                   | Coll, Horiz. Size             |
| D206                      | 201X2010-159 | Diode, IS2076-27             | L701                            | 611X0004-007                   | Coll, Adg.                    |
| D207                      | 201X2010-159 | Diode, IS2076-27             | T351                            | 202X1300-080                   | Transformer, Hor. Drive       |
| D208                      | 201X2010-159 | Diode, IS2076-27             | △ ★ T352                        | 200X9720-301                   | HV-Unit M-11                  |
| D209                      | 201X2010-159 | Diode, IS2076-27             | <b>MISCELLANEOUS</b>            |                                |                               |
| D301                      | 201X2010-185 | Diode, ISS81                 | △ F501                          | 204X7120-073                   | Fuse, 4 Amp. 125V             |
| D302                      | 201X2010-159 | Diode, IS2076-27             | J402                            | 206X5008-832                   | Recep W Wire 3P-M-BG          |
| D303                      | 201X2010-159 | Diode, IS2076-27             | P201                            | 204X9600-466                   | Plug, PWB 3P-J                |
| D304                      | 201X2120-009 | Diode, RH-IV                 | P202                            | 204X9601-477                   | Plug, PWB 6P-Q                |
| D305                      | 201X2120-009 | Diode, RH-IV                 | P401                            | 204X9600-298                   | Plug, PWB 4P-B                |
| D306                      | 201X2010-159 | Diode, IS2076-27             | P501                            | 204X9600-249                   | Plug, PWB 2P-B                |
| △ D501                    | 201X3120-216 | Diode, RM-1AV                | P601                            | 204X9600-304                   | Plug, PWB 4P-C                |
| △ D502                    | 201X3120-216 | Diode, RM-1AV                | TH501                           | 201X0100-112                   | Thermistor                    |
| △ D503                    | 201X3120-216 | Diode, RM-1AV                | <b>FINAL ASSEMBLY PARTS</b>     |                                |                               |
| △ D504                    | 201X3120-216 | Diode, RM-1AV                | △ ★ 88X0138-506                 | 19VLT22 Pix Tube               |                               |
| D505                      | 201X3120-216 | Diode, RM-1AV                | 205X9800-158                    | Lateral/Purity Assembly        |                               |
| D506                      | 201X3120-216 | Diode, RM-1AV                | △ ★ 202X1111-201                | Yoke Deflection                |                               |
| D701                      | 201X2130-234 | Diode, RU-2V                 | 204X9301-255                    | CRT Socket                     |                               |
| D702                      | 201X2120-009 | Diode, RH-1V                 | 291X5004-262                    | Automatic Degaussing Coll Unit |                               |
| Q201                      | 200X3181-523 | Transistor (NPN) 2SC1815GR   |                                 |                                |                               |
| Q202                      | 200X3181-523 | Transistor (NPN) 2SC1815GR   |                                 |                                |                               |
| Q203                      | 200X4056-260 | Transistor (PNP) 2SA562-Y-TM |                                 |                                |                               |
| Q204                      | 200X4056-260 | Transistor (PNP) 2SA562-Y-TM |                                 |                                |                               |
| Q205                      | 200X4056-260 | Transistor (PNP) 2SA562-Y-TM |                                 |                                |                               |

## NECK BOARD

|                  |              |                             |                       |              |                            |
|------------------|--------------|-----------------------------|-----------------------|--------------|----------------------------|
| <b>RESISTORS</b> |              |                             | <b>CAPACITORS</b>     |              |                            |
| R401             | 203X6000-729 | 220 Ohm, 5% 1/4W Carbon     | C401                  | 202X7050-269 | 1200 pF, 500V Ceramic      |
| R402             | 203X6500-540 | 390 Ohm, 5% 1/4W Carbon     | C402                  | 202X7050-248 | 1000 pF, 500V Ceramic      |
| R403             | 203X6000-661 | 820 Ohm, 5% 1/4W Carbon     | C403                  | 202X7050-248 | 1000 pF, 500V Ceramic      |
| R404             | 203X6000-729 | 220 Ohm, 5% 1/4W Carbon     | C404                  | 202X7050-282 | 1500 pF, 1.5KV Ceramic     |
| R405             | 203X6500-540 | 390 Ohm, 5% 1/4W Carbon     | C405                  | 202X7050-483 | 0.01 uF, 500V Ceramic      |
| R406             | 203X6000-661 | 820 Ohm, 5% 1/4W Carbon     | <b>SEMICONDUCTORS</b> |              |                            |
| R407             | 203X6000-729 | 470 Ohm, 5% 1/4W Carbon     | Q401                  | 200X3206-800 | Transistor (NPN) 2SC2068LB |
| R408             | 203X6000-998 | 270 Ohm, 5% 1/4W Carbon     | Q402                  | 200X3206-800 | Transistor (NPN) 2SC2068LB |
| R409             | 203X6000-661 | 820 Ohm, 5% 1/4W Carbon     | Q403                  | 200X3206-800 | Transistor (NPN) 2SC2068LB |
| R410             | 203X9104-824 | 15K Ohm, 5% 2W M.O. Forming | <b>MISCELLANEOUS</b>  |              |                            |
| R411             | 203X9104-824 | 15K Ohm, 5% 2W M.O. Forming | J401                  | 206X5009-296 | RECEP W Wire 4P-E          |
| R412             | 203X9104-824 | 15K Ohm, 5% 2W M.O. Forming | P402                  | 204X9600-254 | Plug, PWB 3P-A             |
| R413             | 203X6000-998 | 2.7K Ohm, 5% 1/2W Comp.     | P403                  | 204X9600-981 | Plug, Pin 1P-D             |
| R414             | 203X6000-998 | 2.7K Ohm, 5% 1/2W Comp.     | P701                  | 204X9601-020 | Plug, PWB 4P-E             |
| R415             | 203X6000-998 | 2.7K Ohm, 5% 1/2W Comp.     |                       |              |                            |
| R416             | 203X9105-154 | 2.2 Ohm, 5% 2W Metal Oxide  |                       |              |                            |
| R419             | 203X6500-741 | 2.7K Ohm, 5% 1/4W Carbon    |                       |              |                            |
| R420             | 203X6500-741 | 2.7K Ohm, 5% 1/4W Carbon    |                       |              |                            |
| R421             | 203X6500-741 | 2.7K Ohm, 5% 1/4W Carbon    |                       |              |                            |
| VR401            | 204X2115-014 | 500 Ohm, -B Semi-Fixed      |                       |              |                            |
| VR402            | 204X2115-014 | 500 Ohm, -B Semi-Fixed      |                       |              |                            |
| VR403            | 204X2115-006 | 5K Ohm, -B Semi-Fixed       |                       |              |                            |
| VR404            | 204X2115-006 | 5K Ohm, -B Semi-Fixed       |                       |              |                            |
| VR405            | 204X2115-006 | 5K Ohm, -B Semi-Fixed       |                       |              |                            |

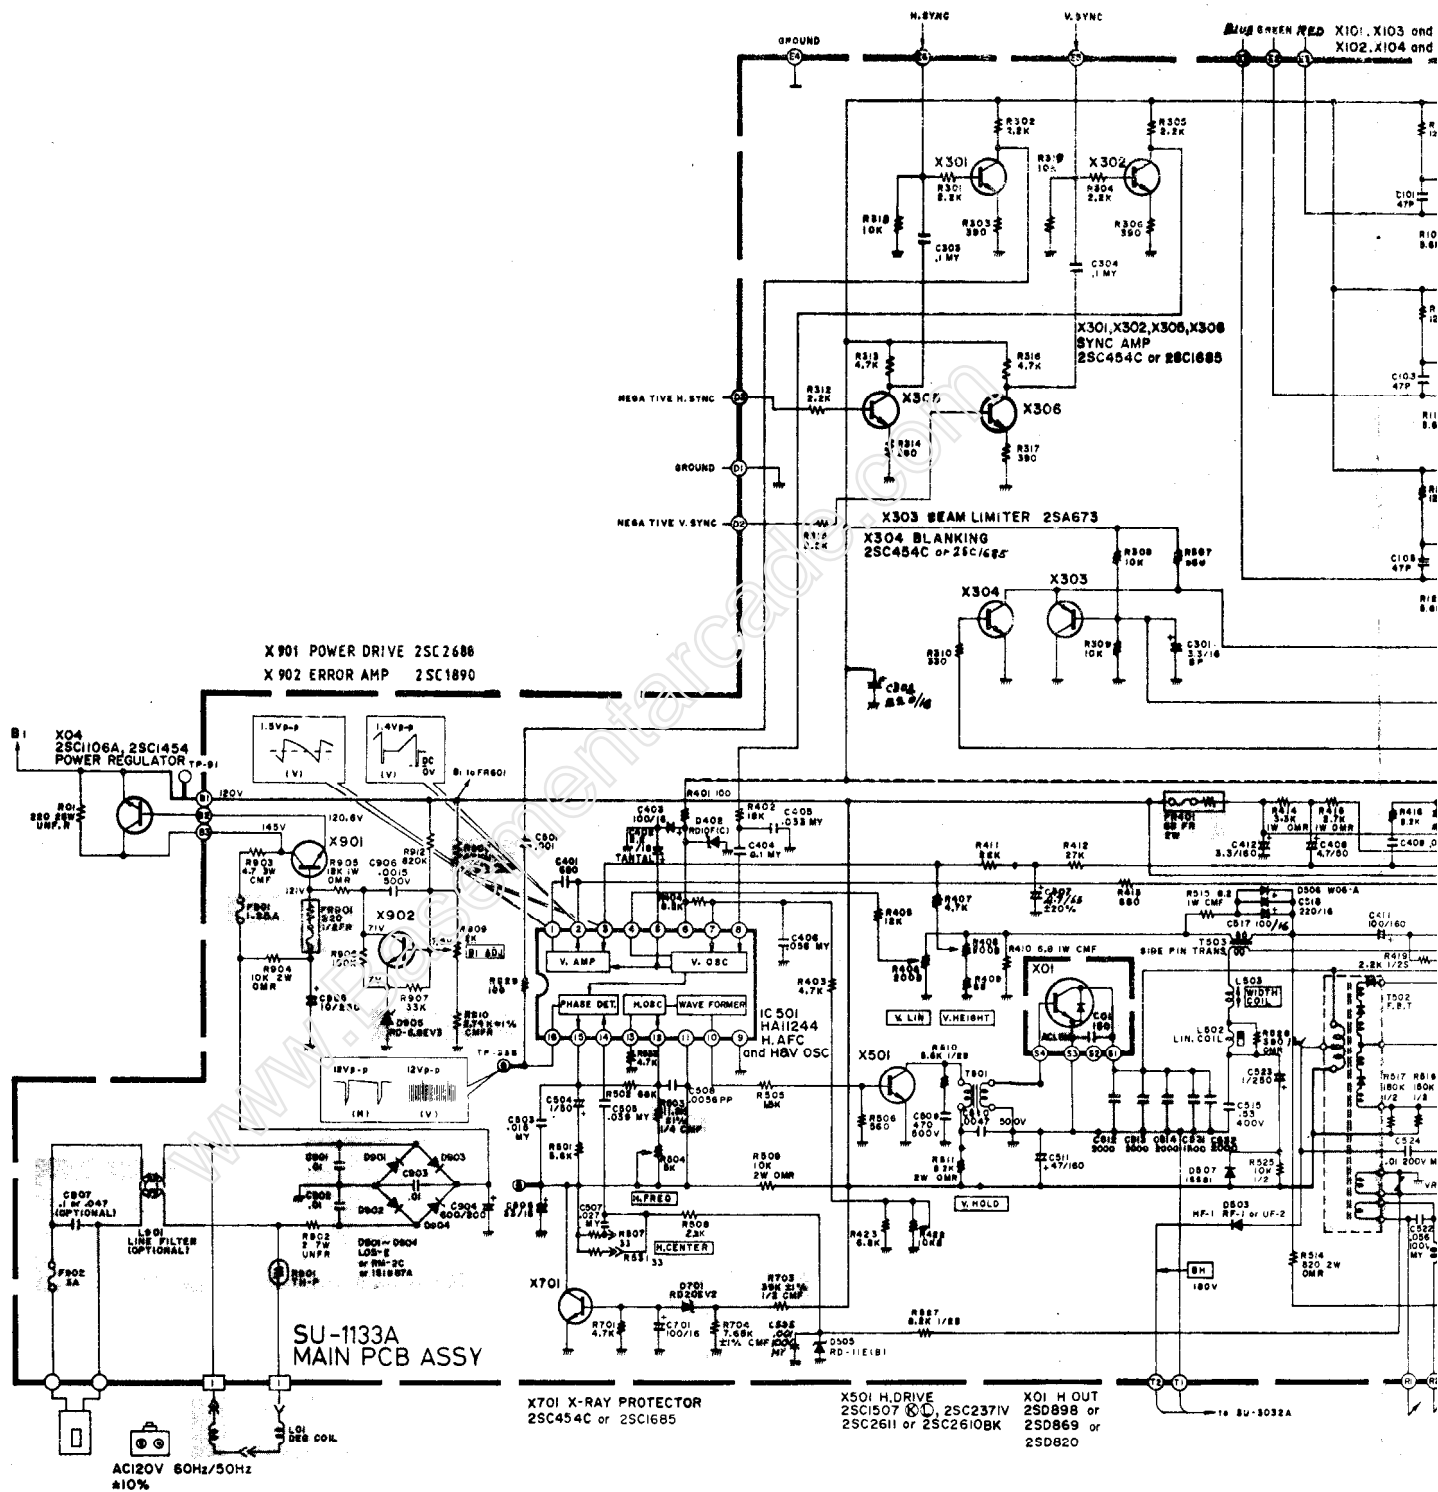

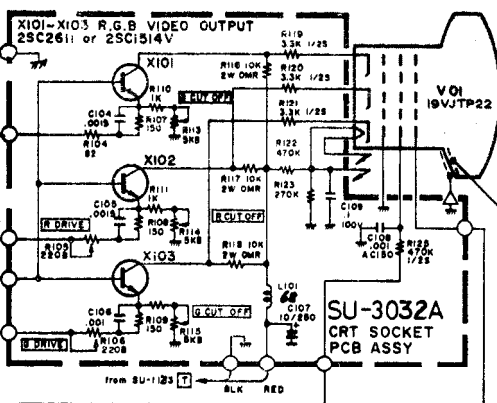

Unless otherwise specified

Inductance: ( $\mu$ H)  
Electrolytic Cap: Capacitance Value ( $\mu$ F)/working voltage (V),  
NP  $\rightarrow$  non-polar (or bipolar) electrolytic cap.  
Refer to the parts list for additional component information.

For **safety** purposes (and continuing reliability)  
 ⚠ replace all components marked with safety symbol with identical type.  
 NOTE: FR → fusible resistor (—FR—)

**Parts identification on circuit boards:**  
e.g. SU1126A (R107 = R1107)  
SU3030A (R113 = R3113)

00-4147-04  
G07-CB0



# REPLACEMENT PARTS LIST—ELECTROHOME 19" MONITOR

Components identified by the  $\Delta$  symbol in the PARTS LIST and on the Schematic have special characteristics important to safety.

DO NOT degrade the safety of the set through improper servicing.

## Abbreviations for Resistors and Capacitors

### Resistor

|         |   |                             |
|---------|---|-----------------------------|
| C R     | : | Carbon Resistor             |
| Comp. R | : | Composition Resistor        |
| OM R    | : | Oxide Metal Film Resistor   |
| V R     | : | Variable Resistor           |
| MF R    | : | Metal Film Resistor         |
| CMF R   | : | Coating Metal Film Resistor |
| UNF R   | : | Nonflammable Resistor       |
| F R     | : | Fusible Resistor            |

### Capacitor

|           |   |   |
|-----------|---|---|
| C Cap.    | : | Ceramic Capacitor   |
| M Cap.    | : | Mylar Capacitor   |
| E Cap.    | : | Electrolytic Capacitor                                      |
| BP E Cap. | : | B <sup>+</sup> -Polar (or Non-Polar) Electrolytic Capacitor |
| MM Cap.   | : | Metalized Mylar Capacitor                                   |
| PP Cap.   | : | Polypropylene Capacitor                                     |
| MPP Cap.  | : | Metalized PP Capacitor                                      |
| PS Cap.   | : | Polystyrol Capacitor  |
| Tan. Cap. | : | Tantal Capacitor  |

NOTE: When ordering replacement parts please specify the part number as shown in this list including part name, and model number. Complete information will help expedite the order.

Use of substitute replacement parts which do not have the same safety characteristics as specified, may create shock, fire or other hazards. For maximum reliability and performance, all parts should be replaced by those having identical specifications.

## SERVICE REPLACEMENT PARTS LIST

| Symbol | Description             | Part Number  |
|--------|-------------------------|--------------|
|        | Main P.C.B. Ass'y       | SU-1133A     |
|        | CRT Socket P.C.B. Ass'y | SU-3032A     |
|        | Purity Shield Ass'y     | 07-220083-03 |

### Outside of the P.C.B. Ass'y

| Symbol   | Description   | Part Number        |
|----------|---|--------------------|
|          | Picture Tube 19"                                      | 17-7198-03         |
| $\Delta$ | $\Delta$ Deflection Yoke                              | A29779-D=21-141-01 |
|          | PC Magnet   | A75034-B=29-32-01  |
| $\Delta$ | $\Delta$ Flyback Transf.                              | A29951-B           |
| $\Delta$ | $\Delta$ HVR  | A46600-A           |
| R05      | UNF Resistor 220 $\Omega$ , 25W K                     | QRF258K-221        |
| C04      | C Capacitor 150pF, AC1.5KV                            | QCZ0101-005        |
| X01      | Si. Transistor  | 2SD870             |
| X02      | Si. Transistor  | 2SC1106A           |
| SC       | Screw #8- $\frac{3}{4}$                               | 31-610818-06       |
| SC       | Screw $\frac{1}{4}$ x $\frac{3}{4}$ Pix Tube Mtg. (4) | 31-601418-12       |
| WA       | Pyramidal Lock Washer (4)                             | 33-255-01          |
|          | Nut Retainer, Pix Tube Mtg. (4)                       | 33-494-01          |
|          | Clip—P.C.B. Support                                   | 33-629-02          |
|          | Standoff  | 33-670-010R-02     |
|          | Wire Terminal (Gnd. Strap)                            | 34-228-03          |
|          | Terminal Lug (Gnd.)                                   | 34-33-04           |
|          | Groundstrap Assy.                                     | 34-574-02          |
|          | Grounding Spring                                      | 35-212-03          |
|          | Wire Hook (Gnd. Strap)                                | 35-3053-02         |
|          | Purity Shield Holddown Clamp                          | 35-2348-01         |
|          | Support Brkt. RH                                      | 35-3890-01         |
|          | Support Brkt. LH                                      | 35-3890-02         |
|          | Chassis Base  | 38-449-02          |
|          | Yoke Wedge (3)  | 39-1233-01         |

## Purity Shield Ass'y. Parts List

| Symbol | Description                          | Part Number  |
|--------|--------------------------------------|--------------|
|        | Degaussing Coil                      | 21-1007-30   |
| D911,  |                                      |              |
| D912   | Rectifier 1 Amp 600V (2)             | 28-22-27     |
|        | Pin Terminal (2)                     | 34-708-01    |
|        | Pin Terminal Housing                 | 34-709-01    |
|        | Purity Shield (2 pcs.)               | 35-3847-01   |
|        | Purity Shield (2 pcs.)               | 35-3847-02   |
| C911   | Capacitor 100nF 10% 400V             | 48-171544-62 |
| R921   | Resistor, Wirewound 33 $\Omega$ , 4W | 42-113301-03 |
|        | Fire Retardant Term. Strip 4 Lug     | 34-492-09    |

## CRT Socket P.C.B. Ass'y (SU-3032A) Parts List

### Resistors

| Symbol | Description                             | Part Number |
|--------|---|-------------|
| R3105  | V R 200                                 | QVZ3234-022 |
| R3106  | V R 200                                 | QVZ3234-022 |
| R3113  | V R 5K                                  | QVZ3234-053 |
| R3114  | V R 5K                                  | QVZ3234-053 |
| R3115  | V R 5K                                  | QVZ3234-053 |
| R3116  | OM R 10K $\Omega$ 2W J                  | QRG029J-103 |
| R3117  | OM R 10K $\Omega$ 2W J                  | QRG029J-103 |
| R3118  | OM R 10K $\Omega$ 2W J                  | QRG029J-103 |
| R3119  | Comp. R 3.3K $\Omega$ $\frac{1}{2}$ W K | QRZ0039-332 |
| R3120  | Comp. R 3.3K $\Omega$ $\frac{1}{2}$ W K | QRZ0039-332 |
| R3121  | Comp. R 3.3K $\Omega$ $\frac{1}{2}$ W K | QRZ0039-332 |

### Capacitors

| Symbol | Description             | Part Number  |
|--------|-------------------------|--------------|
| C3107  | E Cap. 10uF 250V A      | QEW53EA-106  |
| C3108  | C Cap. 1000pF DC1400V P | QCZ9001-102M |

**CRT Socket P.C.B. Ass'y (SU-3032A) Parts List (Cont.)**

|                        |                    |                    |
|------------------------|--------------------|--------------------|
| <b>Coils</b>           |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| L3101                  | Peaking Coil       | QQL043K-101        |
| <b>Semi-conductors</b> |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| X3101                  | Si. Transistor     | 2SC1514VC          |
| X3102                  | Si. Transistor     | 2SC1514VC          |
| X3103                  | Si. Transistor     | 2SC1514VC          |
| <b>Miscellaneous</b>   |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| △                      | △CRT Socket        | A76068             |

**Main PCB Ass'y (SU-1133A) Parts List**
**Resistors**

|               |                    |                    |
|---------------|--------------------|--------------------|
| <b>Symbol</b> | <b>Description</b> | <b>Part Number</b> |
| R1406         | V R 200Ω           | QVZ3230-002        |
| R1408         | V R 200Ω           | QVZ3230-002        |
| R1410         | CMF R 6.8KΩ1W J    | QRX019J-6R8        |
| R1414         | OM R 3.3KΩ1W J     | QRG019J-332        |
| R1415         | OM R 2.7KΩ1W J     | QRG019J-272        |
| R1421         | OM R 12KΩ2W J      | QRG026J-123Z       |
| R1422         | V R 10KΩ           | QVZ3230-014        |
| △FR1401       | △F R 68Ω2W K       | QRH024K-680M       |
| △R1503        | △CMF R 11.8KΩ¼W+1% | QVR142F-1182       |
| R1504         | V R 5KΩ            | QVZ3230-053        |
| R1509         | OM R 10KΩ2W J      | QRG026J-103Z       |
| R1512         | OM R 8.2KΩ2W J     | QRG026J-822Z       |
| R1514         | OM R 820Ω2W J      | QRG026J-821Z       |
| R1515         | CMF R 8.2Ω1W J     | QRX019J-8R2        |
| R1522         | CMF R 4.7Ω1W J     | QRX019J-4R7        |
| R1523         | OM R 68Ω2W J       | QRG026J-680Z       |
| R1528         | OM R 390Ω1W J      | QRG019J-391        |
| R1534         | ZN R               | ERZ-C05ZK471       |
| VR1501        | ZN R               | ERZ-C05ZK271       |
| △R1703        | △CMF R 39Ω¼W+1%    | QVR122F-3902       |
| △R1704        | △CMF R 7.68KΩ¼W+1% | QVR142F-7681       |
| △R1901        | △Posistor          | A75414             |
| R1902         | UNF R 207W K       | QRF076K-2R0        |
| R1903         | CMF R 4.7Ω3W J     | QRX039J-4R7        |
| R1904         | OM R 10KΩ2W J      | QRG026J-103Z       |
| R1905         | OM R 18KΩ1W J      | QRG019J-183        |
| △Q1908        | △CMF R 47Ω¼W+1%    | QRV122F-470Z       |
| △R1909        | V R 2KΩ            | QVP5A0B-023E       |
| R1910         | △CMF R 2.74KΩ¼W+1% | QVR142F-274I       |
| △FR1901       | △F R 220Ω½W K      | QRH124K-221M       |

**Capacitors**

|               |                           |                    |
|---------------|---------------------------|--------------------|
| <b>Symbol</b> | <b>Description</b>        | <b>Part Number</b> |
| C1301         | BPE Cap. 3.3uF 50V A      | QEN61HA-335Z       |
| C1402         | Tan Cap. 2.2uF 16V K      | QEE51CK-225B       |
| C1407         | E Cap. 4.7uF 6.3V A       | QEW51JA-475        |
| C1411         | E Cap. 100uF 160V A       | QEW52CA-107        |
| C1412         | E Cap. 3.3uF 160V A       | QEW52CA-335        |
| C1508         | PP Cap. 5600uF 50V J      | QFP31HJ-562        |
| △C1512        | △PP Cap. 2000pF DC1500V J | QFZ0082-202        |
| △C1513        | △PP Cap. 2000pF DC1500V J | QFZ0082-202        |
| △C1514        | △PP Cap. 2000pF DC1500V J | QFZ0082-202        |
| C1515         | PP Cap. 0.53uF DC1200V J  | QFZ0067-534        |
| C1520         | BPE Cap. 3.3uF 50V A      | QEN61HA-335Z       |
| C1523         | E Cap. 1uF 160V A         | QEW62CA-105Z       |
| C1524         | M Cap. 0.1uF 200V K       | QFM720K-104M       |
| △C1531        | △PP Cap. 2000pF DC1500V J | QFZ0082-202        |
| △C1532        | △PP Cap. 1500pF DC1500V J | QFZ0082-152        |
| C1904         | E Cap.                    | QEY0034-001        |
| C1905         | E Cap. 10uF 250V A        | QEW52EA-106        |

**Main PCB Ass'y (SU-1133A) Parts List (Cont.)**


|                        |                    |                    |
|------------------------|--------------------|--------------------|
| <b>Coils</b>           |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| L1502                  | Linearity Coil     | A39835             |
| L1503                  | Width Coil         | C30380-A           |
| L1504                  | Heater Choke       | C30445-A           |
| <b>Transformers</b>    |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| T1501                  | Hor. Drive Transf. | A46022-BM          |
| T1503                  | Side Pin Transf.   | C39050-A           |
| <b>Semi-conductors</b> |                    |                    |
| <b>Symbol</b>          | <b>Description</b> | <b>Part Number</b> |
| IC1501                 | IC                 | HA11244            |
| X1101                  | Si. Transistor     | 2SC1685(R)         |
| X1102                  | Si. Transistor     | 2SA673(C)          |
| X1103                  | Si. Transistor     | 2SC1685(R)         |
| X1104                  | Si. Transistor     | 2SA673(C)          |
| X1105                  | Si. Transistor     | 2SC1685(R)         |
| X1106                  | Si. Transistor     | 2SA673(C)          |
| X1301                  | Si. Transistor     | 2SC1685(R)         |
| X1302                  | Si. Transistor     | 2SC1685(R)         |
| X1303                  | Si. Transistor     | 2SA673(C)          |
| X1304                  | Si. Transistor     | 2SC1685(R)         |
| X1305                  | Si. Transistor     | 2SC1685(R)         |
| X1401                  | Si. Transistor     | 2SD478             |
| X1402                  | Si. Transistor     | 2SD478             |
| X1501                  | Si. Transistor     | 2SC2610BK          |
| X1901                  | Si. Transistor     | 2SC2688 (K.L.M.)   |
| X1902                  | Si. Transistor     | 2SC1890A (E.F.)    |
| D1101                  | Si. Diode          | W06A               |
| D1102                  | Si. Diode          | W06A               |
| D1103                  | Si. Diode          | W06A               |
| D1301                  | Si. Diode          | 1SZ473H            |
| D1401                  | Si. Diode          | 1SZ473H            |
| D1402                  | Zener Diode        | RD10F(C)           |
| D1503                  | Si. Diode          | HF-1               |
| D1504                  | Si. Diode          | V09E               |
| D1505                  | Zener Diode        | RD11E(B)           |
| D1506                  | Si. Diode          | W06A               |
| D1507                  | Si. Diode          | 1SS81              |
| D1508                  | Si. Diode          | 1SZ473H            |
| △D1701                 | △Zener Diode       | RD20EV2            |
| △D1901                 | △Si. Diode         | 1S1887A            |
| △D1902                 | △Si. Diode         | 1S1887A            |
| △D1903                 | △Si. Diode         | 1S1887A            |
| △D1904                 | △Si. Diode         | 1S1887A            |
| △D1905                 | △Zener Diode       | RD6.8EV3           |

**Miscellaneous**

|               |                    |                    |
|---------------|--------------------|--------------------|
| <b>Symbol</b> | <b>Description</b> | <b>Part Number</b> |
| △F1901        | △Fuse 1.25A        | QMF53U1-1R25S      |
| △F1902        | △UL Fuse 3A        | QMF66U1-3R0S       |



X101, X103 and X105 VIDEO AMP, 2SC454C or 2SC1683  
 X102, X104 and X106 VIDEO AMP 2SA673C

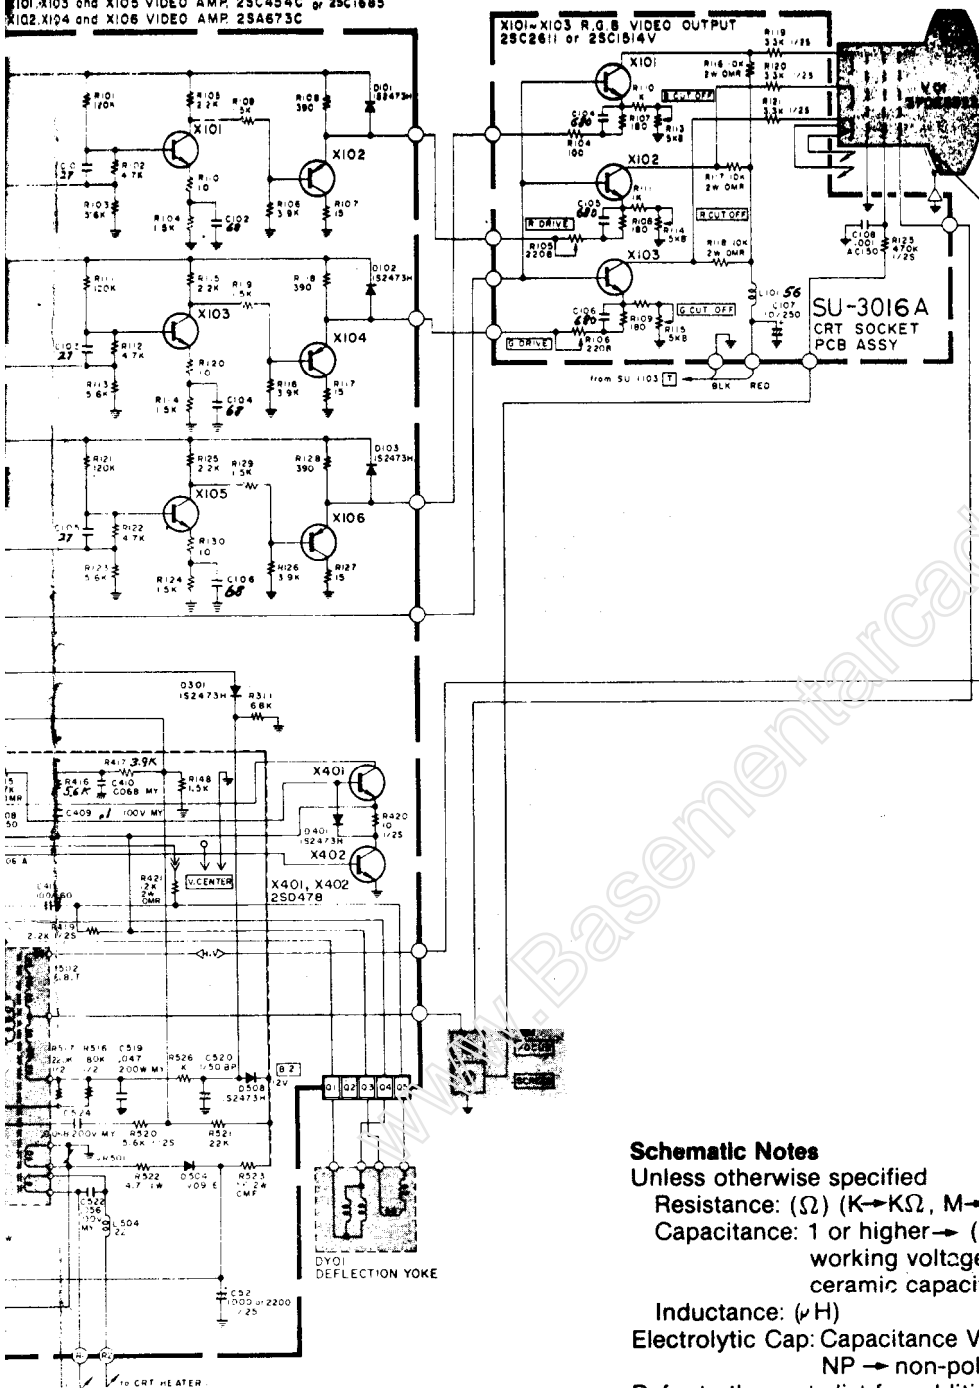

#### Schematic Notes

Unless otherwise specified

Resistance: ( $\Omega$ ) (K $\rightarrow$ K $\Omega$ , M $\rightarrow$ M $\Omega$ ), 1/4 (W) carbon resistor

Capacitance: 1 or higher  $\rightarrow$  (pF), less than 1  $\rightarrow$  ( $\mu$ F)

working voltage  $\rightarrow$  50 (V)

ceramic capacitor

Inductance: ( $\mu$ H)

Electrolytic Cap: Capacitance Value ( $\mu$ F)/working voltage (V),

NP  $\rightarrow$  non-polar (or bipolar) electrolytic cap.

Refer to the parts list for additional component information.

$\odot$  indicates test point connection

$\text{---}$  indicates chassis ground unless otherwise specified

Hz indicates cycles per second

For **safety** purposes (and continuing reliability)

$\triangle$  replace all components marked with safety symbol with identical type.

NOTE: FR  $\rightarrow$  fusible resistor ( $\text{---}$ )

G07-FBO

00-4147-03

Parts identification on circuit boards:

e.g. SU1126A (R107 = R1107)

SU3030A (R113 = R3113)

## REPLACEMENT PARTS LIST—ELECTROHOME 13" MONITOR

Components identified by the  $\Delta$  symbol in the PARTS LIST and on the Schematic have special characteristics important to safety.

DO NOT degrade the safety of the set through improper servicing.

### Abbreviations for Resistors and Capacitors

#### Resistor

|         |   |                             |
|---------|---|-----------------------------|
| C R     | : | Carbon Resistor             |
| Comp. R | : | Composition Resistor        |
| OM R    | : | Oxide Metal Film Resistor   |
| V R     | : | Variable Resistor           |
| MF R    | : | Metal Film Resistor         |
| CMF R   | : | Coating Metal Film Resistor |
| UNF R   | : | Nonflammable Resistor       |
| F R     | : | Fusible Resistor            |

#### Capacitor

|           |   |  |
|-----------|---|--|
| C Cap.    | : | Ceramic Capacitor                              |
| M Cap.    | : | Mylar Capacitor                                |
| E Cap.    | : | Electrolytic Capacitor                         |
| BP E Cap. | : | Bi-Polar (or Non-Polar) Electrolytic Capacitor |
| MM Cap.   | : | Metalized Mylar Capacitor                      |
| PP Cap.   | : | Polypropylene Capacitor                        |
| MPP Cap.  | : | Metalized PP Capacitor                         |
| PS Cap.   | : | Polystyrol Capacitor                           |
| Tan. Cap. | : | Tantal Capacitor                               |

NOTE: When ordering replacement parts please specify the part number as shown in this list including part name, and model number. Complete information will help expedite the order.

Use of substitute replacement parts which do not have the same safety characteristics as specified, may create shock, fire or other hazards. For maximum reliability and performance, all parts should be replaced by those having identical specifications.

### SERVICE REPLACEMENT PARTS LIST

| Symbol                             | Description                               | Part Number  |
|------------------------------------|---|--------------|
|                                    | Main P.C.B. Ass'y                         | SU-1103A     |
|                                    | CRT Socket P.C.B. Ass'y                   | SU-3016A     |
| <b>Outside of the P.C.B. Ass'y</b> |   |              |
| Symbol                             | Description                               | Part Number  |
| $\Delta$ V01                       | $\Delta$ Picture Tube 13"                 | 370ESB22(E)  |
| $\Delta$ DY01                      | $\Delta$ Deflection Yoke                  | C29123-V     |
|                                    | PC Magnet                                 | A76366-A     |
|                                    | Wedge                                     | C30006       |
|                                    | $\Delta$ Flyback Transf.                  | A19183-A     |
| $\Delta$ R11                       | $\Delta$ Focus V R                        | A46606-A     |
| $\Delta$ R05                       | UNF Resistor 220 $\Omega$ ,25W. K         | QRF258K-221  |
| $\Delta$ C04                       | $\Delta$ C Capacitor 150pF, A C1.5KV      | QCZ0101-005  |
| X01                                | Si. Transistor                            | 2SD869       |
| IC01                               | IC Regulator                              | STR383       |
| L01                                | Degaussing Coil                           | 21-1007-31   |
|                                    | Degaussing Coil Pin Terminal (2)          | 34-708-01    |
|                                    | Degaussing Coil Pin Terminal Housing      | 34-709-01    |
|                                    | Groundstrap Ass'y                         | 34-697-04    |
|                                    | Groundstrap Wire Terminal                 | 34-228-03    |
|                                    | Groundstrap Spring (2)                    | 35-3560-01   |
| BR                                 | Support Bracket RH                        | 35-3919-01   |
| BR                                 | Support Bracket LH                        | 35-3919-02   |
| SC                                 | SCREW 10- $\frac{1}{2}$ Pix Tube Mtg. (4) | 31-631018-08 |
| WA                                 | Pyramidal Lockwasher (4)                  | 33-255-01    |
|                                    | Clip P.C.B. Support (2)                   | 33-629-02    |
|                                    | Ground Lug                                | 34-33-04     |
| CH                                 | Chassis Base                              | 38-452-01    |

### Main P.C.B. Ass'y (SU-1103A) Parts List

| <b>Resistors</b> |   |              |                 |   |              |
|------------------|---|--------------|-----------------|---|--------------|
| Symbol           | Description                                       | Part Number  | Symbol          | Description                                       | Part Number  |
| R1406            | V R 200 $\Omega$                                  | QVZ3230-022  | R1406           | V R 200 $\Omega$                                  | QVZ3230-022  |
| R1408            | V R 200 $\Omega$                                  | QVZ3230-022  | R1410           | CMF R 6.8 $\Omega$ 1W J                           | QRX019J-6R8  |
| R1410            | CMF R 6.8 $\Omega$ 1W J                           | QRX019J-6R8  | R1414           | OM R 3.3K $\Omega$ 1W J                           | QRG019J-332  |
| R1415            | OM R 2.7K $\Omega$ 1W J                           | QRG019J-272  | R1421           | OM R 12K $\Omega$ 2W J                            | QRG029J-123  |
| R1421            | OM R 12K $\Omega$ 2W J                            | QRG029J-123  | R1422           | V R 10K $\Omega$                                  | QVZ3224-014H |
| $\Delta$ FR1401  | $\Delta$ F R 68 $\Omega$ 2W K                     | QRH024K-680M | $\Delta$ FR1401 | $\Delta$ F R 68 $\Omega$ 2W K                     | QRH024K-680M |
| $\Delta$ R1503   | $\Delta$ CMF R 11.8 $\Omega$ $\frac{1}{2}$ W +1%  | QRV142F-1182 | $\Delta$ R1503  | $\Delta$ CMF R 11.8 $\Omega$ $\frac{1}{2}$ W +1%  | QRV142F-1182 |
| R1504            | V R 5K $\Omega$                                   | QVZ3230-053  | R1504           | V R 5K $\Omega$                                   | QVZ3230-053  |
| R1509            | OM R 10K $\Omega$ 2W J                            | QRG029J-103  | R1509           | OM R 10K $\Omega$ 2W J                            | QRG029J-103  |
| R1511            | OM R 5.6K $\Omega$ 2W J                           | QRG029J-562  | R1511           | OM R 5.6K $\Omega$ 2W J                           | QRG029J-562  |
| R1514            | OM R 680 $\Omega$ 2W J                            | QRG029J-681  | R1514           | OM R 680 $\Omega$ 2W J                            | QRG029J-681  |
| R1515            | CMF R 8.2 $\Omega$ 1W J                           | QRX019J-8R2  | R1515           | CMF R 8.2 $\Omega$ 1W J                           | QRX019J-8R2  |
| R1522            | CMF R 4.7 $\Omega$ 1W J                           | QRX019J-4R7  | R1522           | CMF R 4.7 $\Omega$ 1W J                           | QRX019J-4R7  |
| R1523            | OM R 56 $\Omega$ 2W J                             | ORG029J-560  | R1523           | OM R 56 $\Omega$ 2W J                             | ORG029J-560  |
| R1528            | OM R 390 $\Omega$ 1W J                            | ORG019J-391  | R1528           | OM R 390 $\Omega$ 1W J                            | ORG019J-391  |
| R1534            | ZN R  | ERZ-C05ZK471 | R1534           | ZN R  | ERZ-C05ZK471 |
| VR1501           | ZN R  | ERZ-C05DK271 | VR1501          | ZN R  | ERZ-C05DK271 |
| $\Delta$ R1703   | $\Delta$ CMF R 39K $\Omega$ $\frac{1}{2}$ W +1%   | QRV122F-3902 | $\Delta$ R1703  | $\Delta$ CMF R 39K $\Omega$ $\frac{1}{2}$ W +1%   | QRV122F-3902 |
| $\Delta$ R1704   | $\Delta$ CMF R 7.68K $\Omega$ $\frac{1}{2}$ W +1% | QRV142F-7681 | $\Delta$ R1704  | $\Delta$ CMF R 7.68K $\Omega$ $\frac{1}{2}$ W +1% | QRV142F-7681 |
| $\Delta$ R1901   | $\Delta$ Posistor                                 | A75414       | $\Delta$ R1901  | $\Delta$ Posistor                                 | A75414       |
| R1902            | UNF R 2 $\Omega$ 7W K                             | QRF076K-2R0  | R1902           | UNF R 2 $\Omega$ 7W K                             | QRF076K-2R0  |
| R1903            | CMF R 5.6 $\Omega$ 3W J                           | QRX039J-5R6  | R1903           | CMF R 5.6 $\Omega$ 3W J                           | QRX039J-5R6  |
| R1904            | OM R 10K $\Omega$ 2W J                            | QRG026J-103Z | R1904           | OM R 10K $\Omega$ 2W J                            | QRG026J-103Z |
| $\Delta$ FR1901  | $\Delta$ F R 220 $\Omega$ $\frac{1}{2}$ W K       | QRH124K-221M | $\Delta$ FR1901 | $\Delta$ F R 220 $\Omega$ $\frac{1}{2}$ W K       | QRH124K-221M |

# Main P.C.B. Ass'y (SU-1103A) Parts List

| Capacitors |                           |              |
|------------|---------------------------|--------------|
| Symbol     | Description               | Part Number  |
| C1402      | Tan. Cap. 2.2uF 16V K     | QEE51CK-225B |
| C1411      | E Cap. 100uF 160V A       | QEW52CA-107  |
| C1412      | E Cap. 3.3uF 160V A       | QEW52CA-335  |
| C1508      | PP Cap. 5600pF 50V J      | QFP31HJ-562  |
| C1511      | E Cap. 47uF 160V A        | QEW52CA-476S |
| △C1512     | △PP Cap. 2000pF DC1500V J | QFZ0082-202  |
| △C1513     | △PP Cap. 2000pF DC1500V J | QFZ0082-202  |
| △C1514     | △PP Cap. 2500pF DC1500V J | QFZ0082-252  |
| C1515      | PP Cap. 0.53uF DC1200V K  | QFZ0067-534  |
| C1520      | BPE Cap. 1uF 50V A        | QEN61HA-105Z |
| C1524      | M Cap. 0.1uF 200V K       | QFM72DK-682M |
| C1904      | E Cap.                    | QEY0034-001  |
| C1905      | E Cap. 10uF 250V A        | QEW52EA-106  |
| △C1907     | △MM Cap. 0.1uF AC150V Z   | QFZ9008-104  |

| Coils  |              |             |
|--------|--------------|-------------|
| Symbol | Description  | Part Number |
| L1501  | Peaking Coil | A75360-6    |
| L1502  | Linarty Coil | A39934      |
| L1503  | Width Coil   | C30380-A    |
| L1504  | Heater Choke | C30333-A    |
| L1901  | Line Filter  | A39475-J    |

| Transformers |                    |             |
|--------------|--------------------|-------------|
| Symbol       | Description        | Part Number |
| T1501        | Hor. Drive Transf. | A46022-BM   |
| T1503        | Side Pin Transf.   | C39050-A    |

| Semi-conductors |                |              |
|-----------------|----------------|--------------|
| Symbol          | Description    | Part Number  |
| IC1501          | I.C.           | HA11244      |
| X1101           | Si. Transistor | 2SC1685(R)   |
| X1102           | Si. Transistor | 2SA673(C)    |
| X1103           | Si. Transistor | 2SC1685(R)   |
| X1104           | Si. Transistor | 2SA673(C)    |
| X1105           | Si. Transistor | 2SC1685(R)   |
| X1106           | Si. Transistor | 2SA673(C)    |
| X1301           | Si. Transistor | 2SC1685(R)   |
| X1302           | Si. Transistor | 2SC1685(R)   |
| X1303           | Si. Transistor | 2SA673(C)    |
| X1304           | Si. Transistor | 2SC1685(R)   |
| X1305           | Si. Transistor | 2SC1685(R)   |
| X1401           | Si. Transistor | 2SD478       |
| X1402           | Si. Transistor | 2SD478       |
| X1501           | Si. Transistor | 2SC2610BK    |
| X1701           | Si. Transistor | 2SC1685(P-S) |
| D1101           | Si. Diode      | W06A         |
| D1102           | Si. Diode      | W06A         |
| D1103           | Si. Diode      | W06A         |
| D1301           | Si. Diode      | 1S2473H      |
| D1401           | Si. Diode      | 1S2473H      |
| D1402           | Zener Diode    | RD10F(C)     |
| D1503           | Si. Diode      | HF-1         |
| D1504           | Si. Diode      | V09E         |
| D1505           | Zener Diode    | RD11E(B)     |
| D1506           | Si. Diode      | W06A         |
| D1507           | Si. Diode      | 1SS81        |
| D1508           | Si. Diode      | 1S2473H      |
| △D1701          | △Zener Diode   | D20EV2       |
| △D1901          | △Si. Diode     | 1S1887A      |
| △D1902          | △Si. Diode     | 1S1887A      |
| △D1903          | △Si. Diode     | 1S1887A      |
| △D1904          | △Si. Diode     | 1S1887A      |

| Miscellaneous |             |              |
|---------------|-------------|--------------|
| Symbol        | Description | Part Number  |
| △F1901        | △Fuse 1A    | QMF53U1-1R0S |
| △F1902        | △UL Fuse 3A | QMF66U1-3R0S |

# CRT Socket P.C.B. Ass'y (SU-3016A) Parts List


| Resistors |                   |             |
|-----------|-------------------|-------------|
| Symbol    | Description       | Part Number |
| R3105     | V R 200Ω          | QVZ3234-022 |
| R3106     | V R 200Ω          | QVZ3234-022 |
| R3113     | V R 5KΩ           | QVZ3234-053 |
| R3114     | V R 5KΩ           | QVZ3234-053 |
| R3115     | V R 5KΩ           | QVZ3234-053 |
| R3116     | OM R 10KΩ2W J     | QRG029J-103 |
| R3117     | OM R 10KΩ2W J     | QRG029J-103 |
| R3118     | OM R 10KΩ2W J     | QRG029J-103 |
| R3119     | Comp. R 3.3KΩ½W K | QRZ0039-332 |
| R3120     | Comp. R 3.3KΩ½W K | QRZ0039-332 |
| R3121     | Comp. R 3.3KΩ½W K | QRZ0039-332 |



| Capacitors |                         |              |
|------------|-------------------------|--------------|
| Symbol     | Description             | Part Number  |
| C3107      | E Cap. 10uF 250V A      | QEW52EA-106  |
| C3108      | C Cap. 1000pF DC1400V P | QCZ9001-102M |

| Coils  |              |             |
|--------|--------------|-------------|
| Symbol | Description  | Part Number |
| L3101  | Peaking coil | QQL043K-101 |

| Semiconductors |                |             |
|----------------|----------------|-------------|
| Symbol         | Description    | Part Number |
| X3101          | Si. Transistor | 2SC2611     |
| X3102          | Si. Transistor | 2SC2611     |
| X3103          | Si. Transistor | 2SC2611     |

| Miscellaneous |             |             |
|---------------|-------------|-------------|
| Symbol        | Description | Part Number |
| △             | CRT Socket  | A75522      |

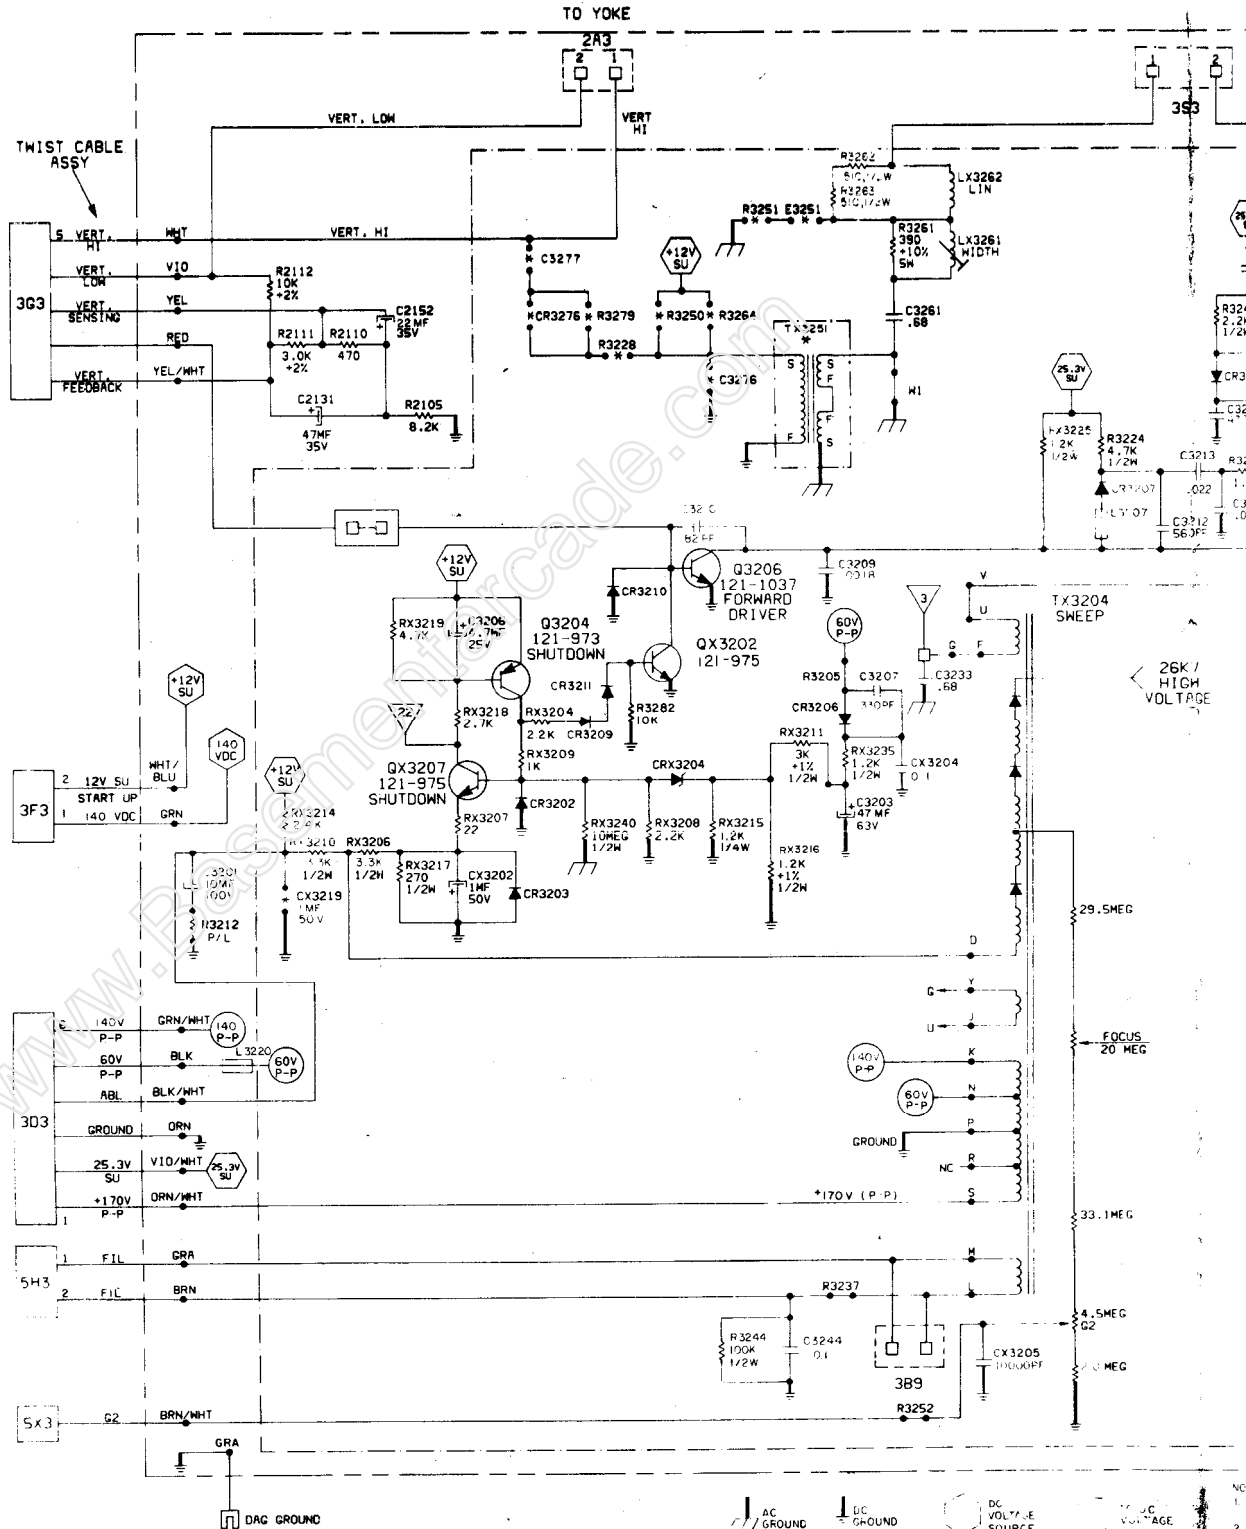

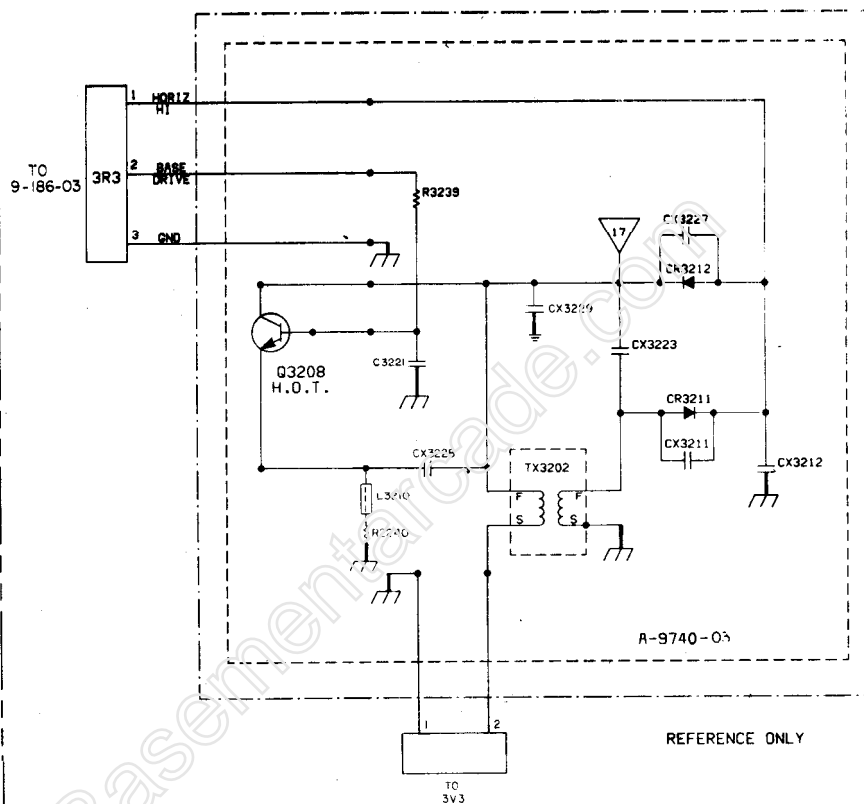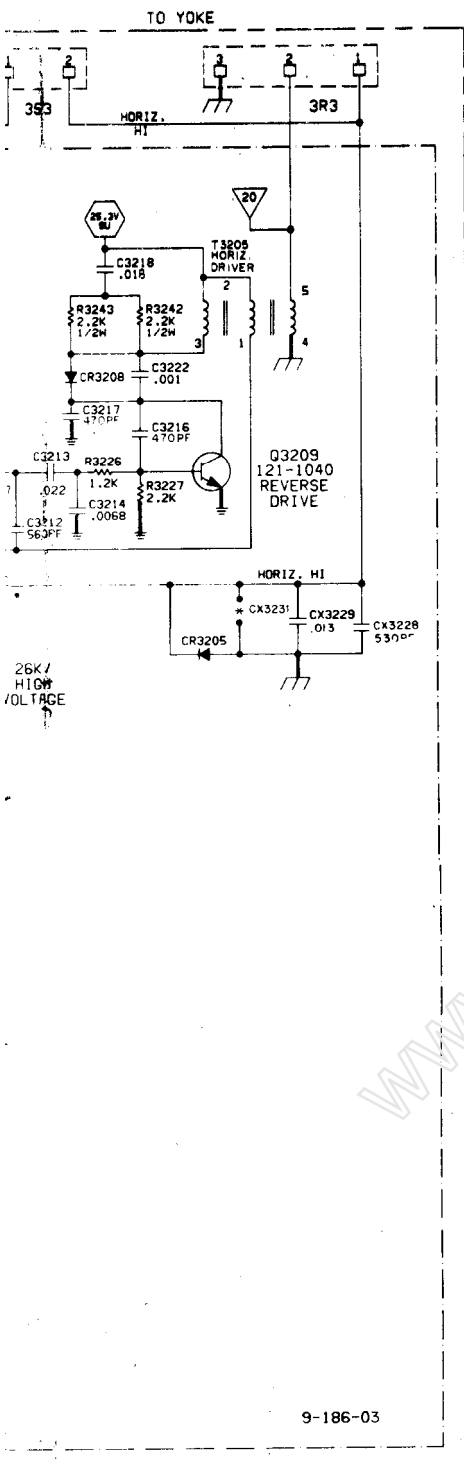

SCHEMATIC FOR  
9-186-03  
SWEEP BOARD  
RGB COLOR MONITOR

ZENITH  
RADIO CORP..  
CHICAGO, ILL.

## ISSUE

B

9-186

M051-00087-A021

- NOTES:
1. ALL RESISTORS ARE 1/4 WATT FILM 5% TOLERANCE UNLESS OTHERWISE SPECIFIED.
  2. ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.

- NOTES: (USED WITH CIRCUIT REFERENCE DESIGNATORS)  
A. P/L = SEE PARTS LIST FOR APPLICABLE USAGE.  
B. —●—●— JUMPER WIRE USED INSTEAD.  
C. —●\*—●— PROVISION ON PRINTED CIRCUIT BOARD.



## SWEEP BOARD (9-186-03)

| Ref. No.              | Part No.    | Description                               | Ref. No.                        | Part No.    | Description                            |
|-----------------------|-------------|---|---------------------------------|-------------|--|
| <b>CAPACITORS</b>     |             |   | <b>TRANSFORMERS &amp; COILS</b> |             |  |
| C2131                 | 22-7508     | 47 MF, 35V, $\pm 20\%$ Electrolytic       | L3207                           | 149-454     | Core, Ferrite Bead                     |
| C2152                 | 22-7508-01C | 22 MF, 35V, $\pm 20\%$ Electrolytic       | L3220                           | F-13834     | Core & Sleeve Assy. (149-509-01)       |
| C3201                 | 22-7410-05  | 10 MF, 100V, $\pm 20\%$ Electrolytic      | LX3261                          | 20-3976     | Coil Width                             |
| CX3202                | 22-7710-01C | 1 MF, 50V, $+50\%-10\%$ Electrolytic      | LX3262                          | 20-3975     | Coil, Linearity, with 205-271 Hot Melt |
| C3203                 | 22-7711-08C | 47 MF, 63V, $+50\%-10\%$ Electrolytic     | T3205                           | 95-3344     | Transformer, Horizontal Driver         |
| CX3204                | 22-7773-24A | 0.1 MF, 100V, $\pm 5\%$ Polyester         | TX3204                          | 95-3581-01  | Transformer, Sweep                     |
| CX3205                | 22-7523-01  | 0.01 MF, 2KV, $\pm 20\%$ Disc             |                                 |             |  |
| C3206                 | 22-7708-04C | 4.7 MF, 25V, $+50\%-10\%$ Electrolytic    |                                 |             |  |
| C3207                 | 22-5665     | 330 PF, 1000V, $\pm 10\%$ Disc            |                                 |             |  |
| C3209                 | 22-7242     | 0.0018 MF, 200V, $\pm 10\%$ Disc          | R2105                           | 63-9921-94  | 8.2K Ohm, $\pm 5\%$ 1/4W Film          |
| C3211                 | 22-7777-20B | 0.047 MF, 200V, $\pm 10\%$ Polyester      | R2110                           | 63-9921-64  | 470K Ohm, $\pm 5\%$ 1/4W Film          |
| C3212                 | 22-7234     | 560 PF, 500V, $\pm 10\%$ Disc             | R2111                           | 63-9919-83  | 3K Ohm, $\pm 2\%$ 1/4W Film            |
| C3213                 | 22-7775-16A | 0.022 MF, 100V, $\pm 20\%$ Polyester      | R2112                           | 63-9919-96  | 10K Ohm, $\pm 2\%$ 1/4W Film           |
| C3214                 | 22-7775-10A | 0.0068 MF, 100V, $\pm 20\%$ Polyester     | RX3204                          | 63-9921-80  | 2.2K Ohm, $\pm 5\%$ 1/4W Film          |
| C3216                 | 22-5684     | 470 PF, 500V, $\pm 20\%$ Disc             | RX3205                          | 63-7805     | 3.3K Ohm, $\pm 5\%$ 1/2W Carbon        |
| C3217                 | 22-5684     | 470 PF, 500V, $\pm 20\%$ Disc             | RX3207                          | 63-9921-32  | 22 Ohm, $\pm 5\%$ 1/4W Film            |
| C3218                 | 22-7774-15C | 0.018 MF, 100V, $\pm 10\%$ Polyester      | RX3208                          | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ 1/4W Film          |
| C3222                 | 22-7742-10  | 0.001 MF, 50V, $\pm 10\%$ Axial           | RX3209                          | 63-10235-72 | 1K Ohm, $\pm 5\%$ 1/4W Film            |
| CX3228                | 22-6466     | 530 PF, 3KV, $\pm 10\%$ Disc              | RX3210                          | 63-7805     | 3.3K Ohm, $\pm 5\%$ 1/2W Carbon        |
| CX3229                | 22-7672-07  | 0.013 MF, 1.6KV, $\pm 5\%$ Polypropylene  | RX3211                          | 63-10810-07 | 3K Ohm, $\pm 1\%$ 1/2W Film            |
| C3233                 | 22-7728     | 0.68 MF, 200V, $\pm 10\%$ Polyester       | RX3214                          | 63-10233-81 | 2.4K Ohm, $\pm 2\%$ 1/4W Film          |
| C3244                 | 22-7566-24  | 0.1 MF, 250V, $\pm 10\%$ Polyester        | RX3216                          | 63-10810-06 | 1.2K Ohm, $\pm 1\%$ 1/2W Film          |
| C3261                 | 22-7683-01  | 0.68 MF, 200V, $\pm 5\%$ Polypropylene    | RX3217                          | 63-7760     | 270 Ohm, $\pm 5\%$ 1/2W Carbon         |
|                       |             |   | RX3215                          | 63-10235-98 | 12K Ohm, $\pm 5\%$ 1/4W Film           |
|                       |             |   | RX3218                          | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ 1/4W Film          |
|                       |             |   | RX3219                          | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ 1/4W Film          |
|                       |             |   | R3224                           | 63-9946-88  | 4.7K Ohm, $\pm 5\%$ 1/2W Film          |
|                       |             |   | R3225                           | 63-10836-68 | 680 Ohm, $\pm 5\%$ 2W Wire Wound       |
|                       |             |   | R3226                           | 63-10235-74 | 1.2K Ohm, $\pm 5\%$ 1/4W Film          |
|                       |             |   | R3227                           | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ 1/4W Film          |
|                       |             |   | RX3235                          | 63-10810-06 | 1.2K Ohm, $\pm 1\%$ 1/2W Film          |
|                       |             |   | RX3240                          | 53-10657-04 | 10 Meg Ohm, $\pm 20\%$ 1/2W Carbon     |
|                       |             |   | R3242                           | 63-10243-80 | 2.2K Ohm, $\pm 5\%$ 1/2W Film          |
|                       |             |   | R3243                           | 63-10243-80 | 2.2K Ohm, $\pm 5\%$ 1/2W Film          |
|                       |             |   | R3244                           | 63-7868     | 100K Ohm, $\pm 5\%$ 1/2W Carbon        |
|                       |             |   | R3261                           | 63-10444-86 | 390 Ohm, $\pm 10\%$ 5W Wire Wound      |
|                       |             |   | R3262                           | 63-10565-65 | 510 Ohm, $\pm 10\%$ 1/2W Film          |
|                       |             |   | R3263                           | 63-10565-65 | 510 Ohm, $\pm 10\%$ 1/2W Film          |
|                       |             |   | R3282                           | 63-10235-96 | 10K Ohm, $\pm 5\%$ 1/4W Film           |
| <b>SEMICONDUCTORS</b> |             |   |                                 |             |  |
| CR3202                | 103-142-01  | Diode, Low Voltage                        |                                 |             |  |
| CR3203                | 103-330A    | Diode, Low Voltage                        |                                 |             |  |
| CRX3204               | 103-308A    | Diode, Zener                              |                                 |             |  |
| CR3205                | 103-305     | Diode, Damper                             |                                 |             |  |
| CR3206                | 103-284A    | Diode, Low Voltage                        |                                 |             |  |
| CR3207                | 103-295-01A | Diode, Low Voltage<br>(used with 149-454) |                                 |             |  |
| CR3208                | 103-295-01A | Diode, Low Voltage                        |                                 |             |  |
| CR3209                | 103-142-01  | Diode, Low Voltage                        |                                 |             |  |
| CR3210                | 103-142-01  | Diode, Low Voltage                        |                                 |             |  |
| CR3211                | 103-142-01  | Diode, Low Voltage                        |                                 |             |  |
| QX3202                | 121-975     | Transistor, NPN                           |                                 |             |  |
| QX3204                | 121-973     | Transistor, PNP, Shutdown                 |                                 |             |  |
| Q3206                 | 121-1037    | Transistor, NPN, Forward Driver           |                                 |             |  |
| QX3207                | 121-975     | Transistor, NPN, Shutdown                 |                                 |             |  |
| Q3209                 | 121-1040    | Transistor, NPN, Reverse Driver           |                                 |             |  |

**ZENITH MONITOR — SWEEP BOARD  
REPLACEMENT PARTS LIST**

[www.Basementarcade.com](http://www.Basementarcade.com)





# ZENITH MONITOR — MAIN BOARD REPLACEMENT PARTS LIST

| Board<br>9-227   |   | Ref. No. | Part No.    | Description                                    |
|------------------|---|----------|-------------|--|
| <b>RESISTORS</b> |   |          |             |  |
| X                | X | RX2101   | 63-10565-32 | 22 Ohm, $\pm 5\%$ , 1/2W Film                  |
| X                | X | R2102    | 63-10243-56 | 220 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                | X | R2103    | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ , 1/2W Film                |
| X                | X | RX2104   | 63-10243-11 | 3 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | RX2105   | 63-10243-11 | 3 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | R2106    | 63-10235-72 | 1K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                | X | R2107    | 63-10235-66 | 560 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                | X | R2108    | 63-10235-66 | 560 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                | X | R2109    | 63-10565    | 1 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | R2110    | 63-10565    | 1 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | R2111    | 63-10565    | 1 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | R2112    | 63-10565    | 1 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                | X | R2113    | 63-10243-60 | 330 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                | X | R2114    | 63-10235-72 | 1K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                | X | R2115    | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                | X | R2116    | 63-10235-60 | 330 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                | X | R2117    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                | X | R2118    | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                | X | R2119    | 63-10235-54 | 180 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                | X | R2120    | 63-10565-08 | 2.2 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                | X | R2121    | 63-10243-52 | 150 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                | X | R2122    | 63-10243-52 | 150 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                | X | R2125    | 63-9023-02  | 550 Ohm, $\pm 20\%$ , Control-Rotary Single-GR |
|                  | X | R2126    | 63-10243-66 | 560 Ohm, $\pm 5\%$ , 1/2W Film                 |
| X                |   | R2126    | 63-10243-53 | 160 Ohm, $\pm 5\%$ , 1/2W Film                 |
|                  | X | R2127    | 63-10243-69 | 750 Ohm, $\pm 5\%$ , 1W Carbon                 |
| X                |   | R2128    | 63-10243-66 | 560 Ohm, $\pm 5\%$ , 1/2W Film                 |
|                  | X | R2128    | 63-6058     | 510 Ohm, $\pm 5\%$ , 1W Carbon                 |
|                  | X | R2129    | 63-10243-65 | 510 Ohm, $\pm 5\%$ , 1/2W Carbon               |
| X                |   | R2501    | 63-10236-28 | 220K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2501    | 63-10236-52 | 2.2 Meg Ohm, $\pm 5\%$ , 1/4W Film             |
| X                | X | R2502    | 63-10235-90 | 5.6K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                |   | R2503    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                 |
|                  | X | R2503    | 63-10235-58 | 270 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2504    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2504    | 63-10235-69 | 750 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2505    | 63-10857-11 | 5K Ohm, Control-Rotary Single-RED              |
|                  | X | R2505    | 63-10857-27 | 800 Ohm, Control-Rotary Single-Red Cut-Off     |
| X                |   | R2506    | 63-10857-30 | 1K Ohm, Control-Rotary Single-Yellow           |
|                  | X | R2506    | 63-10857-27 | 800 Ohm, Control-Rotary Single-Red Drive       |
| X                |   | R2507    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2507    | 63-10235-75 | 1.3K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2508    | 63-10235-93 | 7.5K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                |   | R2508    | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                |   | R2509    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                |   | R2510    | 63-10235-50 | 120 Ohm, $\pm 5\%$ , 1/4W Film                 |
|                  | X | R2510    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2511    | 63-10235-74 | 1.2K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2511    | 63-10235-67 | 620 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2512    | 63-10236-28 | 220K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  | X | R2512    | 63-10236-52 | 2.2 Meg Ohm, $\pm 5\%$ , 1/4W Film             |
| X                | X | R2513    | 63-10235-90 | 5.6K Ohm, $\pm 5\%$ , 1/4W Film                |
| X                |   | R2514    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                 |
|                  | X | R2514    | 63-10235-58 | 270 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2515    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                |
|                  |   | R2515    | 63-10235-71 | 910 Ohm, $\pm 5\%$ , 1/4W Film                 |
| X                |   | R2516    | 63-10857-32 | 5K Ohm, Control-Rotary Single-Green            |
|                  | X | R2516    | 63-10857-25 | 800 Ohm, Control-Rotary Single-Green Cut-Off   |
| X                |   | R2517    | 63-10857-30 | 1K Ohm, Control-Rotary Single-Yellow           |
|                  | X | R2517    | 63-10857-25 | 800 Ohm, Control-Rotary Single-Green Drive     |
| X                |   | R2518    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                |

| Board<br>9-227               |   | Ref. No. | Part No.    | Description                                      |
|------------------------------|---|----------|-------------|--|
| <b>RESISTORS (Continued)</b> |   |          |             |  |
| X                            | X | R2518    | 63-10235-73 | 1.1K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              | X | R2519    | 63-10235-93 | 7.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              | X | R2519    | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2520    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2521    | 63-10235-50 | 120 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2521    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2522    | 63-10235-74 | 1.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2523    | 63-10236-28 | 220K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              | X | R2523    | 63-10236-52 | 2.2 Meg Ohm, $\pm 5\%$ , 1/4W Film               |
| X                            | X | R2524    | 63-10235-90 | 5.6K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2525    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2525    | 63-10235-58 | 270 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2526    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            | X | R2526    | 63-10235-69 | 750 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              |   | R2527    | 63-10857-31 | 5K Ohm, Control-Rotary Single-Blue               |
|                              | X | R2527    | 63-10857-26 | 800 Ohm, Control-Rotary Single-Blue Cut-Off      |
| X                            |   | R2528    | 63-10857-30 | 1K Ohm, Control-Rotary Single-Yellow             |
|                              | X | R2528    | 63-10857-26 | 800 Ohm, Control-Rotary Single-Blue Drive        |
| X                            |   | R2529    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              | X | R2529    | 63-10235-75 | 1.3K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              | X | R2530    | 63-10235-93 | 7.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2530    | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2531    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R2532    | 63-10235-50 | 120 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2532    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2533    | 63-10235-74 | 1.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                              |   | R2534    | 63-10235-52 | 150 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2535    | 63-10235-52 | 150 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2536    | 63-10235-52 | 150 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2537    | 63-10235-52 | 150 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2538    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2538    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2539    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2539    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2540    | 63-10235-56 | 220 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2540    | 63-10235-48 | 100 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2541    | 63-10235-54 | 180 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2542    | 63-10235-53 | 160 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2543    | 63-10235-54 | 180 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2544    | 63-10235-54 | 180 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R2545    | 63-10235-54 | 180 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2546    | 63-10235-53 | 160 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2548    | 63-10235-67 | 620 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2549    | 63-10235-67 | 620 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            |   | R2550    | 63-10235-32 | 22 Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                            |   | R2552    | 63-10235-32 | 22 Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                            |   | R2554    | 63-10235-32 | 22 Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                            | X | R3201    | 63-10235-59 | 300 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                              | X | R3202    | 63-10235-44 | 68 Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                            | X | R3203    | 63-10235-52 | 150 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                            | X | R3205    | 63-7781     | 820 Ohm, $\pm 5\%$ , 1/2W Carbon                 |
| X                            |   | R3206    | F-11851     | 12 Ohm, $\pm 10\%$ , 10W Resistor & Splice Assy. |
|                              | X | R3206    | 63-10460-50 | 12 Ohm, $\pm 10\%$ , 10W Wirewound               |
| X                            | X | R3210    | 63-10420-31 | 2 Ohm, $\pm 5\%$ , 2W Wirewound                  |
| X                            | X | R3212    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R3213    | 63-10235-83 | 3K Ohm, $\pm 5\%$ , 1/4W Film                    |
|                              | X | R3213    | 63-10235-86 | 3.9K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            | X | R3214    | 63-10235-74 | 1.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            |   | R3215    | 63-10244-38 | 560K Ohm, $\pm 5\%$ , 1/2W Film                  |
|                              | X | R3215    | 63-10244-40 | 680K Ohm, $\pm 5\%$ , 1/2W Film                  |
| X                            | X | R3216    | 63-10244-25 | 160K Ohm, $\pm 5\%$ , 1/2W Film                  |
| X                            | X | R3217    | 63-10244-33 | 360K Ohm, $\pm 5\%$ , 1/2W Film                  |
| X                            | X | R3218    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                            | X | R3219    | 63-10244-38 | 560K Ohm, $\pm 5\%$ , 1/2W Film                  |

# MAIN BOARD (Continued)

| Board                 |       | Ref. No. | Part No.    | Description                                      |
|-----------------------|-------|----------|-------------|--|
| 9-227                 | 9-227 |          |             |  |
| -01                   | -01   |          |             |  |
| RESISTORS (Continued) |       |          |             |  |
| X                     | X     | R3222    | 63-10235-40 | 47 Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                     | X     | R3231    | 63-9982     | 1 Ohm, $\pm 10\%$ , 2W Wirewound                 |
| X                     | X     | R3233    | 63-10565-14 | 3.9 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                     | X     | R3234    | 63-10565-14 | 3.9 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                     | X     | R3239    | 63-10244-20 | 100K Ohm, $\pm 5\%$ , 1/2W Film                  |
| X                     | X     | R3241    | 63-8246     | 4 Ohm, 10W Wirewound                             |
| X                     | X     | R3244    | 63-10840-40 | 47 Ohm, $\pm 5\%$ , 3W Film, Tin Oxide           |
| X                     | X     | R3245    | 63-10710A   | Thermistor                                       |
| X                     | X     | RX3246   | 63-10657-03 | 1.2 Meg Ohm, $\pm 20\%$ , 1/2W Carbon            |
|                       | X     | R3260    | 63-10243-96 | 10K Ohm, $\pm 5\%$ , 1/2W Film                   |
|                       | X     | R3261    | 63-10244-24 | 150K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                       | X     | R3262    | 63-10235-68 | 680 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3401    | 63-10236-46 | 1.2 Meg Ohm, $\pm 5\%$ , 1/4W Film               |
| X                     | X     | R3402    | 63-10236-22 | 120K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3403    | 63-10235-86 | 3.9K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3404    | 63-10235-86 | 3.9K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3405    | 63-10236-08 | 33K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3406    | 63-10235-68 | 680 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3407    | 63-10236-18 | 82K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3408    | 63-10236-04 | 22K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3409    | 63-10857-17 | 100K Ohm, Control-Rotary Single-Green            |
| X                     | X     | R3410    | 63-10236-31 | 300K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3411    | 63-10236-03 | 20K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3412    | 63-10236-13 | 51K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3413    | 63-10236-07 | 30K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3414    | 63-10235-98 | 12K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3415    | 63-10236-02 | 18K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3417    | 63-10243-60 | 330 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                     | X     | R3418    | 63-10857-08 | 2K Ohm, Control-Rotary Single-Yellow             |
| X                     | X     | R3419    | 63-10235-84 | 3.3K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3420    | 63-10236-10 | 35K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3421    | 63-10235-73 | 1.1K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3422    | 63-10243-60 | 330 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                     | X     | R3423    | 63-10243-60 | 330 Ohm, $\pm 5\%$ , 1/2W Film                   |
| X                     | X     | R3424    | 63-10235-72 | 1K Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                     | X     | R3425    | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3428    | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3429    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3431    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     |       | R3432    | 63-10235-55 | 200 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                       | X     | R3432    | 63-10235-79 | 2K Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                     | X     | R3433    | 63-10236-20 | 100K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3434    | 63-10236-22 | 120K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3435    | 63-10235-63 | 430 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3436    | 63-10235-72 | 1K Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                     | X     | R3439    | 63-10243-79 | 2K Ohm, $\pm 5\%$ , 1/2W Film                    |
| X                     | X     | R3440    | 63-10235-86 | 3.9K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     |       | R3441    | 63-10857    | 100 Ohm, Control-Rotary Single-Horizontal Center |
|                       | X     | R3441    | 63-10857-02 | 250 Ohm, Control-Rotary Single-Horizontal Center |
| X                     | X     | R3442    | 63-10235-86 | 3.9K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     |       | R3443    | 63-10235-65 | 510 Ohm, $\pm 5\%$ , 1/4W Film                   |
|                       | X     | R3443    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3444    | 63-10235-60 | 330 Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3445    | 63-10235-80 | 2.2K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                       | X     | R3446    | 63-10235-72 | 1K Ohm, $\pm 5\%$ , 1/4W Film                    |
| X                     |       | R3449    | 63-10235-76 | 1.5K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     |       | R3451    | 63-10235-82 | 2.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                       | X     | R3451    | 63-10235-88 | 4.7K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3452    | 63-10235-92 | 6.8K Ohm, $\pm 5\%$ , 1/4W Film                  |
|                       | X     | R3453    | 63-10235-75 | 1.3K Ohm, $\pm 5\%$ , 1/4W Film                  |
| X                     | X     | R3461    | 63-10236    | 15K Ohm, $\pm 5\%$ , 1/4W Film                   |
| X                     | X     | R3462    | 63-10236-13 | 51K Ohm, $\pm 5\%$ , 1/4W Film                   |

| Ref. No.        | Part No.    | Description                                |
|-----------------|-------------|--|
| CAPACITORS      |             |  |
| C2101           | 22-7775-10A | 0.0068 MF, 100V $\pm 20\%$ Polyester       |
| C2102           | 22-7775-24A | 0.1 MF, 100V $\pm 20\%$ Polyester          |
| C2103           | 22-7709-09C | 100 MF, 35V $\pm 50\%$ -10% Electrolytic   |
| C2104           | 22-7613-24D | 0.01 MF, 50V $\pm 10\%$ Disc               |
| C2105           | 22-7390-02  | 0.47 MF, 50V $\pm 20\%$ Electrolytic       |
| C2106           | 22-7710-07C | 33 MF, 50V $\pm 50\%$ -10% Electrolytic    |
| C2107           | 22-7615-03D | 0.0033 MF, 50V $\pm 80\%$ -10% Disc        |
| C2110           | 22-7742-10  | 0.001 MF, 50V $\pm 10\%$ Polyester         |
| C2111           | 22-7774-17A | 0.027 MF, 100V $\pm 10\%$ Polyester        |
| C2176           | 22-7725     | 680 MF, 50V $\pm 100\%$ -10% Electrolytic  |
| C2501           | 22-7621-42C | 220 PF, 50V $\pm 5\%$ Disc                 |
| C2502           | 22-7621-42C | 220 PF, 50V $\pm 5\%$ Disc                 |
| C2503           | 22-7621-42C | 220 PF, 50V $\pm 5\%$ Disc                 |
| C3201           | 22-7775-24A | 0.1 MF, 100V $\pm 20\%$ Polyester          |
| C3204           | 22-7603     | 4.7 MF, 315V $\pm 100\%$ -10% Electrolytic |
| C3205           | 22-3512     | 0.01 MF, 1KV $\pm 40\%$ -20% Disc          |
| C3206           | 22-7603-01A | 10 MF, 315V $\pm 100\%$ -10% Electrolytic  |
| C3207           | 22-7742-10  | 0.001 MF, 50V $\pm 10\%$ Axial             |
| C3208           | 22-7742-10  | 0.001 MF, 50V $\pm 10\%$ Axial             |
| C3209           | 22-7395     | 470 PF, 500V $\pm 5\%$ Disc                |
| C3234           | 22-7395     | 470 PF, 500V $\pm 5\%$ Disc                |
| C3236           | 22-7861-14  | 2200 MF, 35V $\pm 20\%$ Electrolytic       |
| C3246           | 22-7603-01A | 10 MF, 315V $\pm 100\%$ -10% Electrolytic  |
| C3247           | 22-7860-12  | 470 MF, 25V $\pm 20\%$ Electrolytic        |
| C3249           | 22-7431-06  | 0.0047 MF, $\pm 20\%$ Disc                 |
| CX3250          | 22-7431-06  | 0.0047 MF, $\pm 20\%$ Disc                 |
| C3251           | 22-7811     | 0.001 MF, 1KV $\pm 10\%$ Disc              |
| C3252           | 22-7811     | 0.001 MF, 1KV $\pm 10\%$ Disc              |
| C3253           | 22-7811     | 0.001 MF, 1KV $\pm 10\%$ Disc              |
| C3254           | 22-7404-06  | 22 MF, 16V $\pm 20\%$ Electrolytic         |
| C3256           | 22-7508-05B | 2200 MF, 35V $\pm 50\%$ -10% Electrolytic  |
| C3257           | 22-7395     | 470 PF, 500V $\pm 5\%$ Disc                |
| C3401           | 22-7613-24D | 0.01 MF, 50V $\pm 10\%$ Disc               |
| C3402           | 22-7406-01  | 1.0 MF, 35V $\pm 20\%$ Electrolytic        |
| C3403           | 22-7773-18A | 0.033 MF, 100V $\pm 5\%$ Polyester         |
| C3404           | 22-7773-17A | 0.027 MF, 100V $\pm 5\%$ Polyester         |
| C3405           | 22-7775-10A | 0.0068 MF, 100V $\pm 20\%$ Polyester       |
| C3407           | 22-7710-01A | 1.0 MF, 50V $\pm 50\%$ -10% Electrolytic   |
| C3409           | 22-7709-09C | 100 MF, 35V $\pm 100\%$ -10% Electrolytic  |
| C3410           | 22-7404-06A | 22 MF, 16V $\pm 20\%$ Electrolytic NP      |
| C3411           | 22-7708-09  | 100 MF, 25V $\pm 50\%$ -10% Electrolytic   |
| C3412           | 22-7710-01C | 1.0 MF, 50V $\pm 50\%$ -10% Electrolytic   |
| C3413           | 22-7562-32  | 0.47 MF, 100V $\pm 5\%$ Polyester          |
| C3414           | 22-7774-16A | 0.022 MF, 100V $\pm 10\%$ Polyester        |
| C3419           | 22-7751-39  | 180 PF, 50V $\pm 5\%$ Axial                |
| C3420           | 22-7710-01C | 1.0 MF, 50V $\pm 50\%$ -10% Electrolytic   |
| C3421           | 22-7773-18B | 0.033 MF, 100V $\pm 5\%$ Polyester         |
| C3422           | 22-7613-24D | 0.01 MF, 50V $\pm 10\%$ Disc               |
| C3423           | 22-7613-08D | 470 PF, 50V $\pm 10\%$ Disc                |
| C3424           | 22-7742-05  | 390 PF, 50V $\pm 10\%$ Axial               |
| C3425           | 22-7742-10  | 0.001 MF, 50V $\pm 10\%$ Axial             |
| C3426           | 22-7742-10  | 0.01 MF, 50V $\pm 10\%$ Axial              |
| C3427           | 22-7647-35C | 150 PF, $\pm 10\%$ Axial                   |
| C3428           | 22-7774-12  | 0.01 MF, 100V $\pm 10\%$ Polyester         |
| C3428           | 22-7774-20A | 0.047 MF, 100V $\pm 10\%$ Polyester        |
| (on-01 version) |             |  |
| C3429           | 22-7405-04  | 4.7 MF, 25V $\pm 20\%$ Electrolytic NP     |
| C3429           | 22-7406     | 0.47 MF, 35V $\pm 20\%$ Electrolytic NP    |
| (on-01 version) |             |  |
| C3430           | 22-7613-24D | 0.01 MF, 50V $\pm 10\%$ Disc               |
| C3431           | 22-7774-16A | 0.022 MF, 100V $\pm 10\%$ Polyester        |
| C3434           | 22-7742-06  | 470 PF, 50V $\pm 10\%$ Axial               |
| C3436           | 22-7613-24C | 0.01 MF, 100V $\pm 10\%$ Disc              |
| C3450           | 22-7739-29A | 0.27 MF, 100V $\pm 10\%$ Polyester         |
| C3450           | 22-7619-41C | 200 PF, 50V $\pm 5\%$ Disc                 |
| (on-01 version) |             |  |
| C3461           | 22-7710-01C | 1.0 MF, 50V $\pm 50\%$ -10% Electrolytic   |
| C3462           | 22-7710-01C | 1.0 MF, 50V $\pm 50\%$ -10% Electrolytic   |
| C3462           | 22-7739-09  | 0.0056 MF, 100V $\pm 10\%$ Polyester       |
| (on-01 version) |             |  |
| C3463           | 22-7508     | 47 MF, 35V $\pm 20\%$ Electrolytic         |

## MAIN BOARD (Continued)

| Ref. No.                        | Part No.    | Description                      |
|---------------------------------|-------------|----------------------------------|
| <b>SEMICONDUCTORS</b>           |             |                                  |
| CR2104                          | 103-142-01  | Diode, Low Voltage               |
| CR2105                          | 103-254-01  | Diode, Low Voltage               |
| CR2106                          | 103-254-01  | Diode, Low Voltage               |
| CR2107                          | 103-254-01  | Diode, Low Voltage               |
| CR2501                          | 103-142-01  | Diode, Low Voltage               |
| CR2502                          | 103-142-01  | Diode, Low Voltage               |
| CR2503                          | 103-142-01  | Diode, Low Voltage               |
| CR3202                          | 103-330A    | Diode, Low Voltage               |
| CR3205                          | 103-309-01  | Diode, Zener 10V 1W              |
| CR3206                          | 103-254-01  | Diode, Low Voltage               |
| CR3208                          | 103-326A    | Diode, Low Voltage               |
| CR3210                          | 103-254-01  | Diode, Low Voltage               |
| CR3211                          | 103-254-01  | Diode, Low Voltage               |
| CR3214                          | 103-284-A   | Diode, Low Voltage               |
| CR3217                          | 103-326A    | Diode, Low Voltage               |
| CR3219                          | 103-330A    | Diode, Low Voltage               |
| CR3223                          | 103-330A    | Diode, Low Voltage               |
| CR3224                          | 103-330A    | Diode, Low Voltage               |
| CR3231                          | 103-315-06A | Diode                            |
| CR3232                          | 103-315-06A | Diode                            |
| CR3233                          | 103-315-06A | Diode                            |
| CR3234                          | 103-315-06A | Diode                            |
| CR3235                          | 103-284A    | Diode, Low Voltage               |
| CR3401                          | 103-142-01  | Diode, Low Voltage               |
| CR3404                          | 103-143-01  | Diode, Low Voltage               |
| CR3405                          | 103-142-01  | Diode, Low Voltage               |
| CR3406                          | 103-142-01  | Diode, Low Voltage               |
| CR3408                          | 103-279-14  | Diode, Zener 6.8V 1/2W           |
| Q2101                           | F-10896     | Transistor & Heat Sink Assy.     |
| Q2102                           | F-10896     | Transistor & Heat Sink Assy.     |
| Q2103                           | 121-975     | Transistor NPN                   |
| Q2104                           | 121-1064    | Transistor PNP                   |
| Q2501                           | 121-1019    | Transistor PNP                   |
| Q2502                           | 121-895     | Transistor NPN                   |
| Q2502                           | 121-551     | Transistor NPN                   |
| (on-01 version)                 |             |                                  |
| Q2503                           | 121-1019    | Transistor PNP                   |
| Q2504                           | 121-895     | Transistor NPN                   |
| Q2504                           | 121-551     | Transistor NPN                   |
| (on-01 version)                 |             |                                  |
| Q2505                           | 121-1019    | Transistor PNP                   |
| Q2506                           | 121-895     | Transistor NPN                   |
| Q2506                           | 121-551     | Transistor NPN                   |
| (on-01 version)                 |             |                                  |
| Q2507                           | 121-1019    | Transistor                       |
| Q2508                           | 121-1019    | Transistor                       |
| Q2509                           | 121-1019    | Transistor                       |
| Q3200                           | F-12737     | Transistor & Heat Sink Assy.     |
| Q3201                           | 121-499-01  | Transistor NPN Regular Feed Back |
| Q3202                           | 121-1034    | Transistor NPN                   |
| Q3203                           | 121-1059    | Transistor PNP                   |
| Q3401                           | 121-895     | Transistor NPN                   |
| Q3402                           | 121-986     | Transistor PNP                   |
| Q3403                           | 121-985     | Transistor NPN                   |
| Q3404                           | 121-895     | Transistor NPN                   |
| Q3405                           | 121-895     | Transistor NPN                   |
| <b>TRANSFORMERS &amp; COILS</b> |             |                                  |
| L2502                           | 20-3887-01  | Coil Peaking 1.2 UH              |
| L2503                           | 20-3887-01  | Coil Peaking 1.2 UH              |
| L2504                           | 20-3887-01  | Coil Peaking 1.2 UH              |
| L3201                           | 20-2021     | Coil Peaking 100 UH              |
| LX3202                          | 95-3501-01  | Transformer Choke 60 UH          |
| L3401                           | 20-3831     | Coil Peaking 663 UH              |
| L3402                           | 20-3998     | Coil Peaking 39 UH               |
| L3402                           | 20-4026     | Coil Turnable 39 UH              |
| (on-01 version)                 |             |                                  |


# ZENITH MONITOR — CRT SOCKET BOARD

## REPLACEMENT PARTS LIST

### CRT SOCKET (9-155-10)

| Ref. No.                        | Part No.    | Description                       |
|---------------------------------|-------------|-----------------------------------|
| <b>CAPACITORS</b>               |             |                                   |
| C5101                           | 22-4671     | 0.01 MF, 1.5KV, +80%–20% Disc     |
| C5102                           | 22-3512     | 0.01 MF, 1KV, +40%–10% Disc       |
| <b>TRANSFORMERS &amp; COILS</b> |             |                                   |
| L5102                           | 20-3887-28E | 220 MH Peaking                    |
| L5103                           | 20-3887-28E | 220 MH Peaking                    |
| L5104                           | 20-3887-28E | 220 MH Peaking                    |
| <b>SEMICONDUCTORS</b>           |             |                                   |
| Q5101                           | F7510       | Transistor, NPN, Video Out, Blue  |
| Q5102                           | F7510       | Transistor, NPN, Video Out, Red   |
| Q5103                           | F7510       | Transistor, NPN, Video Out, Green |
| <b>RESISTORS</b>                |             |                                   |
| R5101                           | 63-10840-88 | 4.7K Ohm, ±5%, 3W Film            |
| R5102                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5103                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5104                           | 63-10235-54 | 180 Ohm, ±5%, 1/4W Film           |
| R5105                           | 63-10235-48 | 100 Ohm, ±5%, 1/4W Film           |
| R5106                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5107                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5108                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5109                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5110                           | 63-7785     | 1K Ohm, ±10%, 1/2W Carbon         |
| R5111                           | 63-7799     | 2.2K Ohm, ±10%, 1/2W Carbon       |
| R5112                           | 63-10840-88 | 4.7K Ohm, ±5%, 3W Carbon          |
| R5113                           | 63-10840-88 | 4.7K Ohm, ±5%, 3W Carbon          |
| R5114                           | 63-10235-54 | 180 Ohm, ±5%, 1/4W Film           |
| R5115                           | 63-10235-54 | 180 Ohm, ±5%, 1/4W Film           |
| <b>MISCELLANEOUS</b>            |             |                                   |
| 5A2                             | 86-799      | Stake Connector 4/.156            |
| 5C2                             | 86-799      | Stake Connector 4/.156            |
| 5H3                             | 86-799      | Stake Connector 2/.156            |
| 5X7                             | 86-799      | Stake Connector 1/.312            |
|                                 | A-10008     | CRT Socket                        |



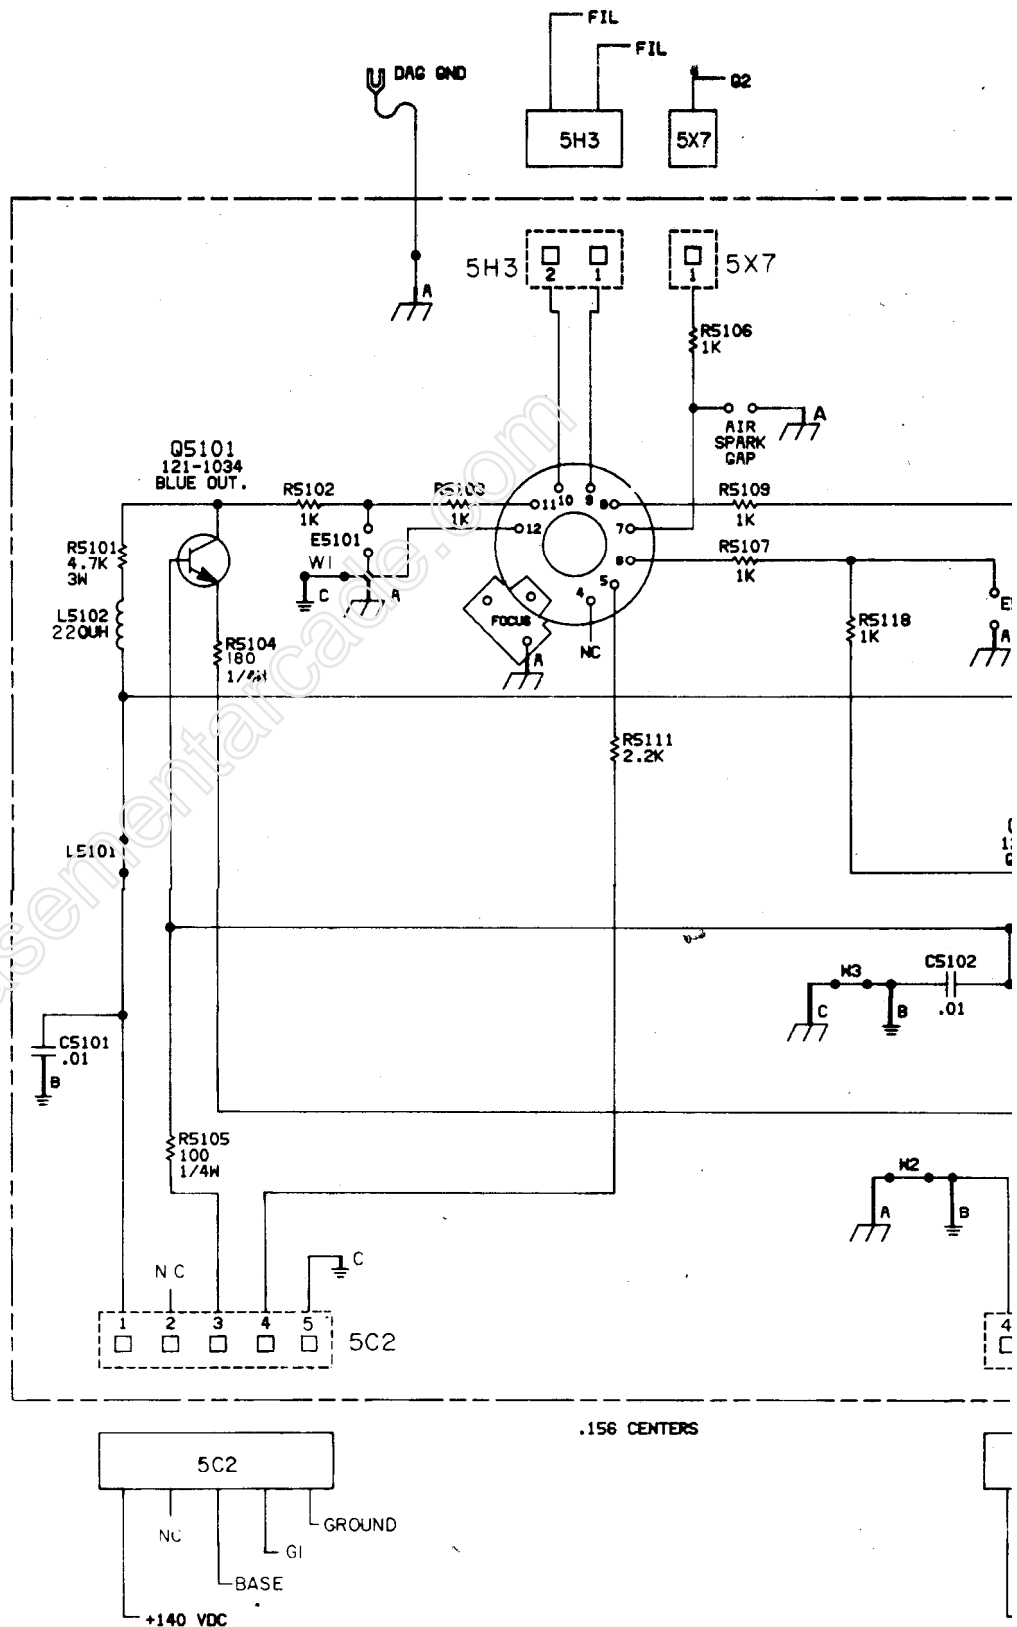


NOTE:  
1. ALL RESISTORS ARE 1/2WATT UNLESS OTHERWISE SPECIFIED.

NOTES: (USED WITH CIRCUIT REFERENCE DESIGNATORS)  
A. P/L = SEE PARTS LIST FOR APPLICABLE USAGE.  
B. —●— = JUMPER WIRE USED INSTEAD.  
C. —●— = PROVISION ON PRINTED CIRCUIT BOARD.


⏏  
DAG  
GROUND

⏏  
SIGNAL  
GROUND

ZE  
RAD.  
CHI

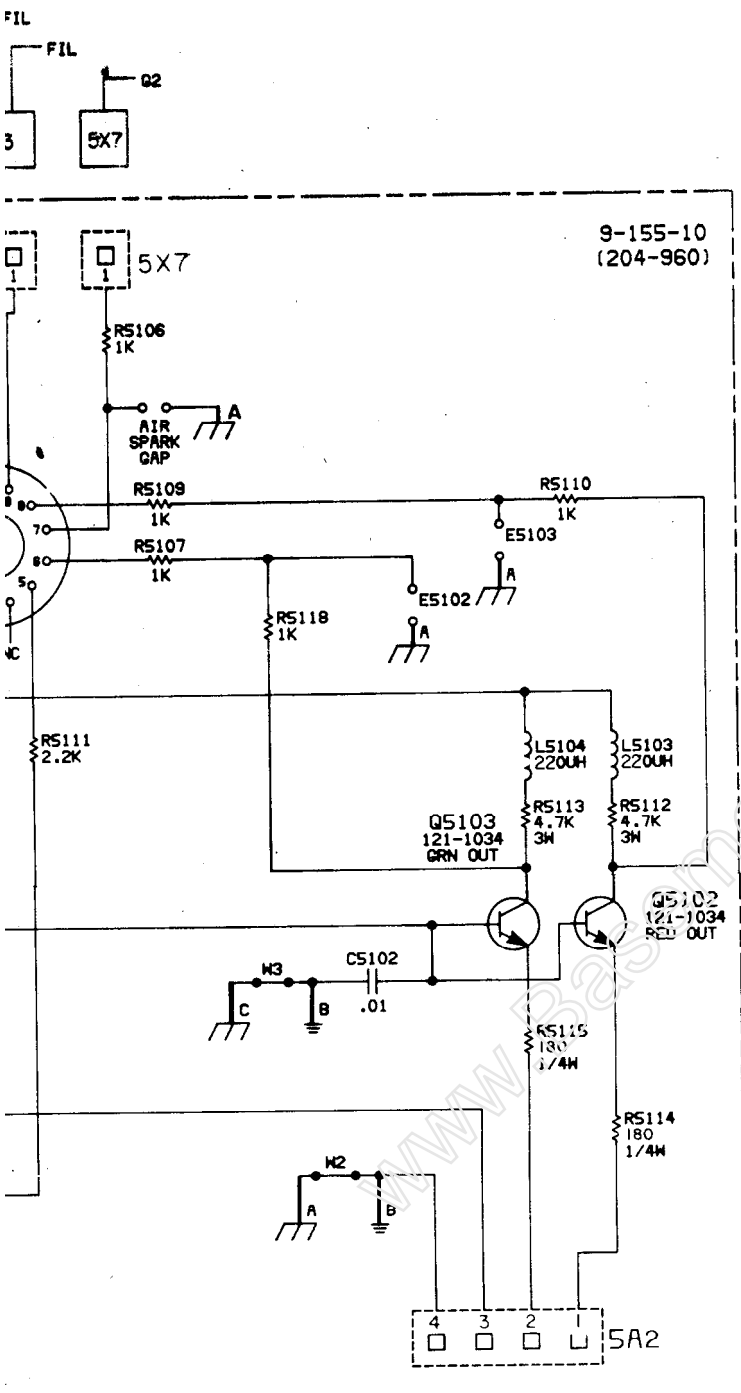

.156 CENTERS

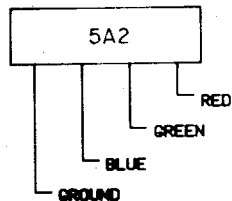


5 ARE 1/2WATT UNLESS OTHERWISE

M051-00087-A022

WITH CIRCUIT REFERENCE DESIGNATORS)  
PARTS LIST FOR APPLICABLE USAGE.  
JUMPER WIRE USED INSTEAD.  
PROVISION ON PRINTED CIRCUIT BOARD.

| SCHEMATIC FOR     |        |  |
|-------------------|--------|--|
| 9-155-10          |        |  |
| RGB COLOR MONITOR |        |  |
| CRT SOCKET BOARD  |        |  |
| ZENITH            | ISS IF |  |
| RADIO CORP.       |        |  |
| CHICAGO, ILL.     |        |  |

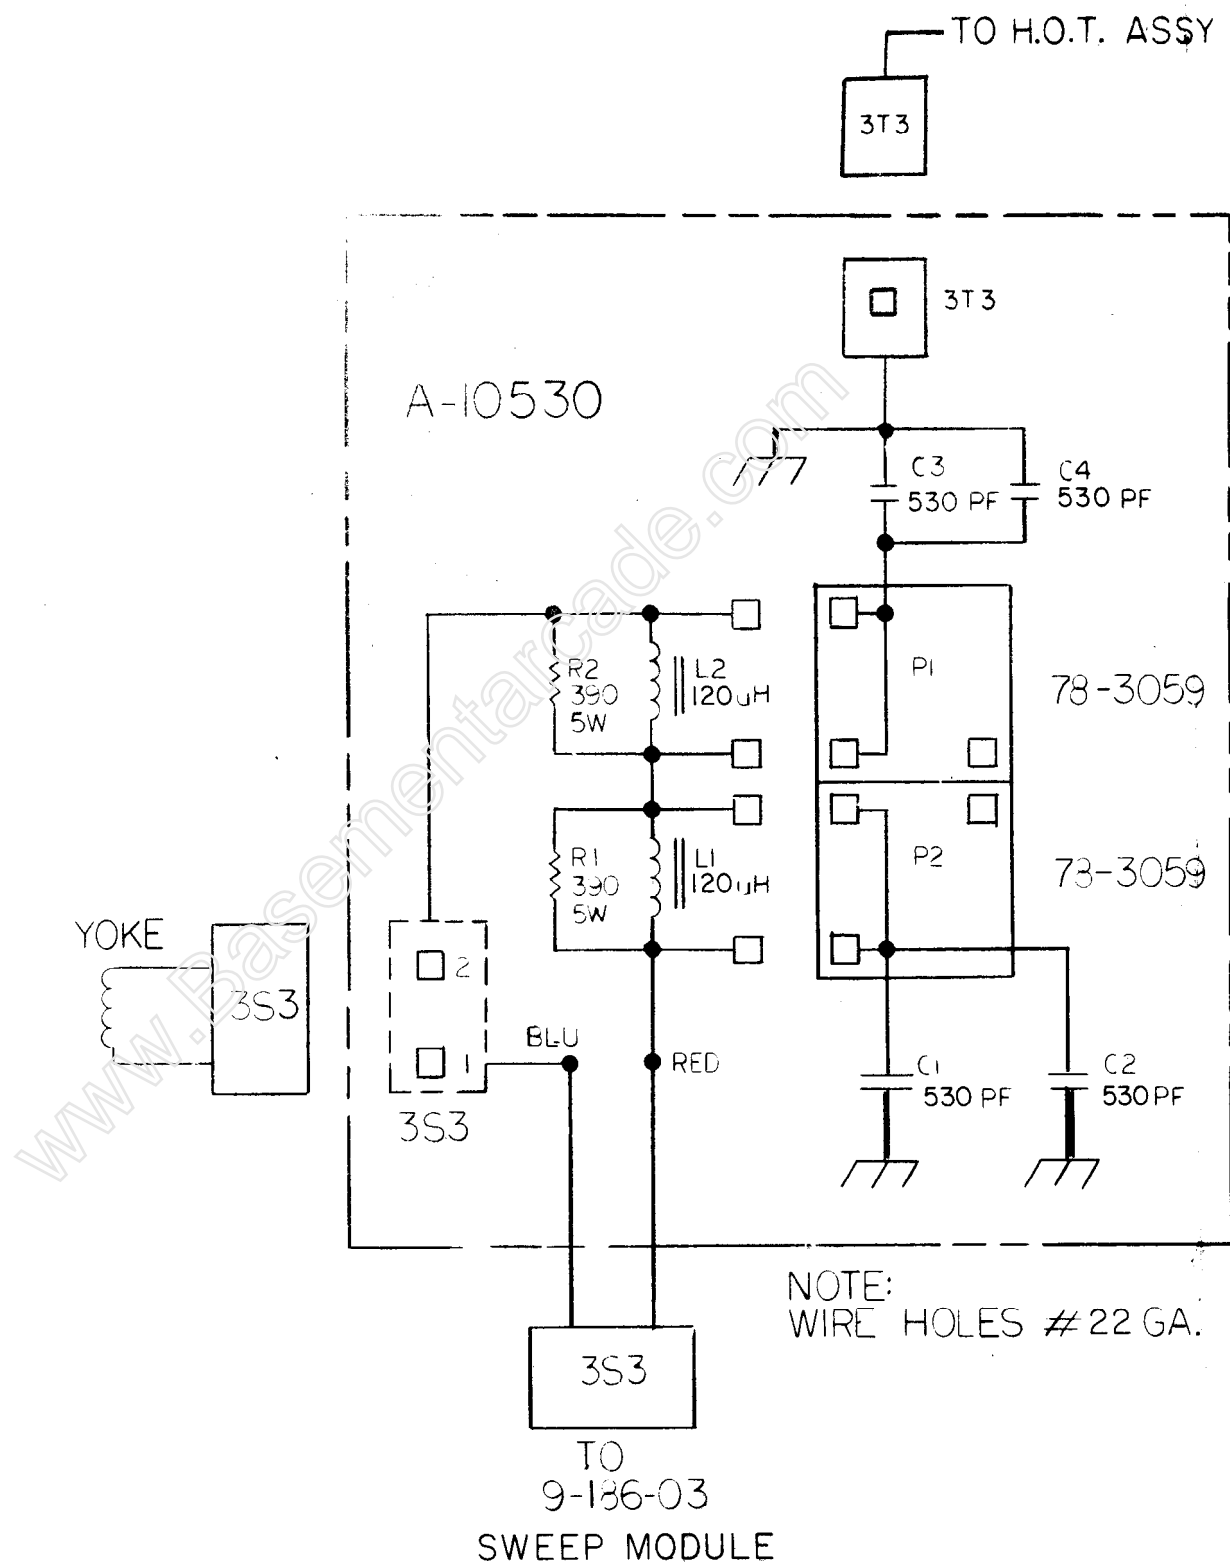

ASSY

059

059

DPF

GA.


M051-00087-A023



SCHEMATIC  
FOR A-10530  
WIDTH STEP ASSY.

ZENITH  
RADIO CORP.  
CHICAGO, ILL.

ISSUE  
B

A-10530

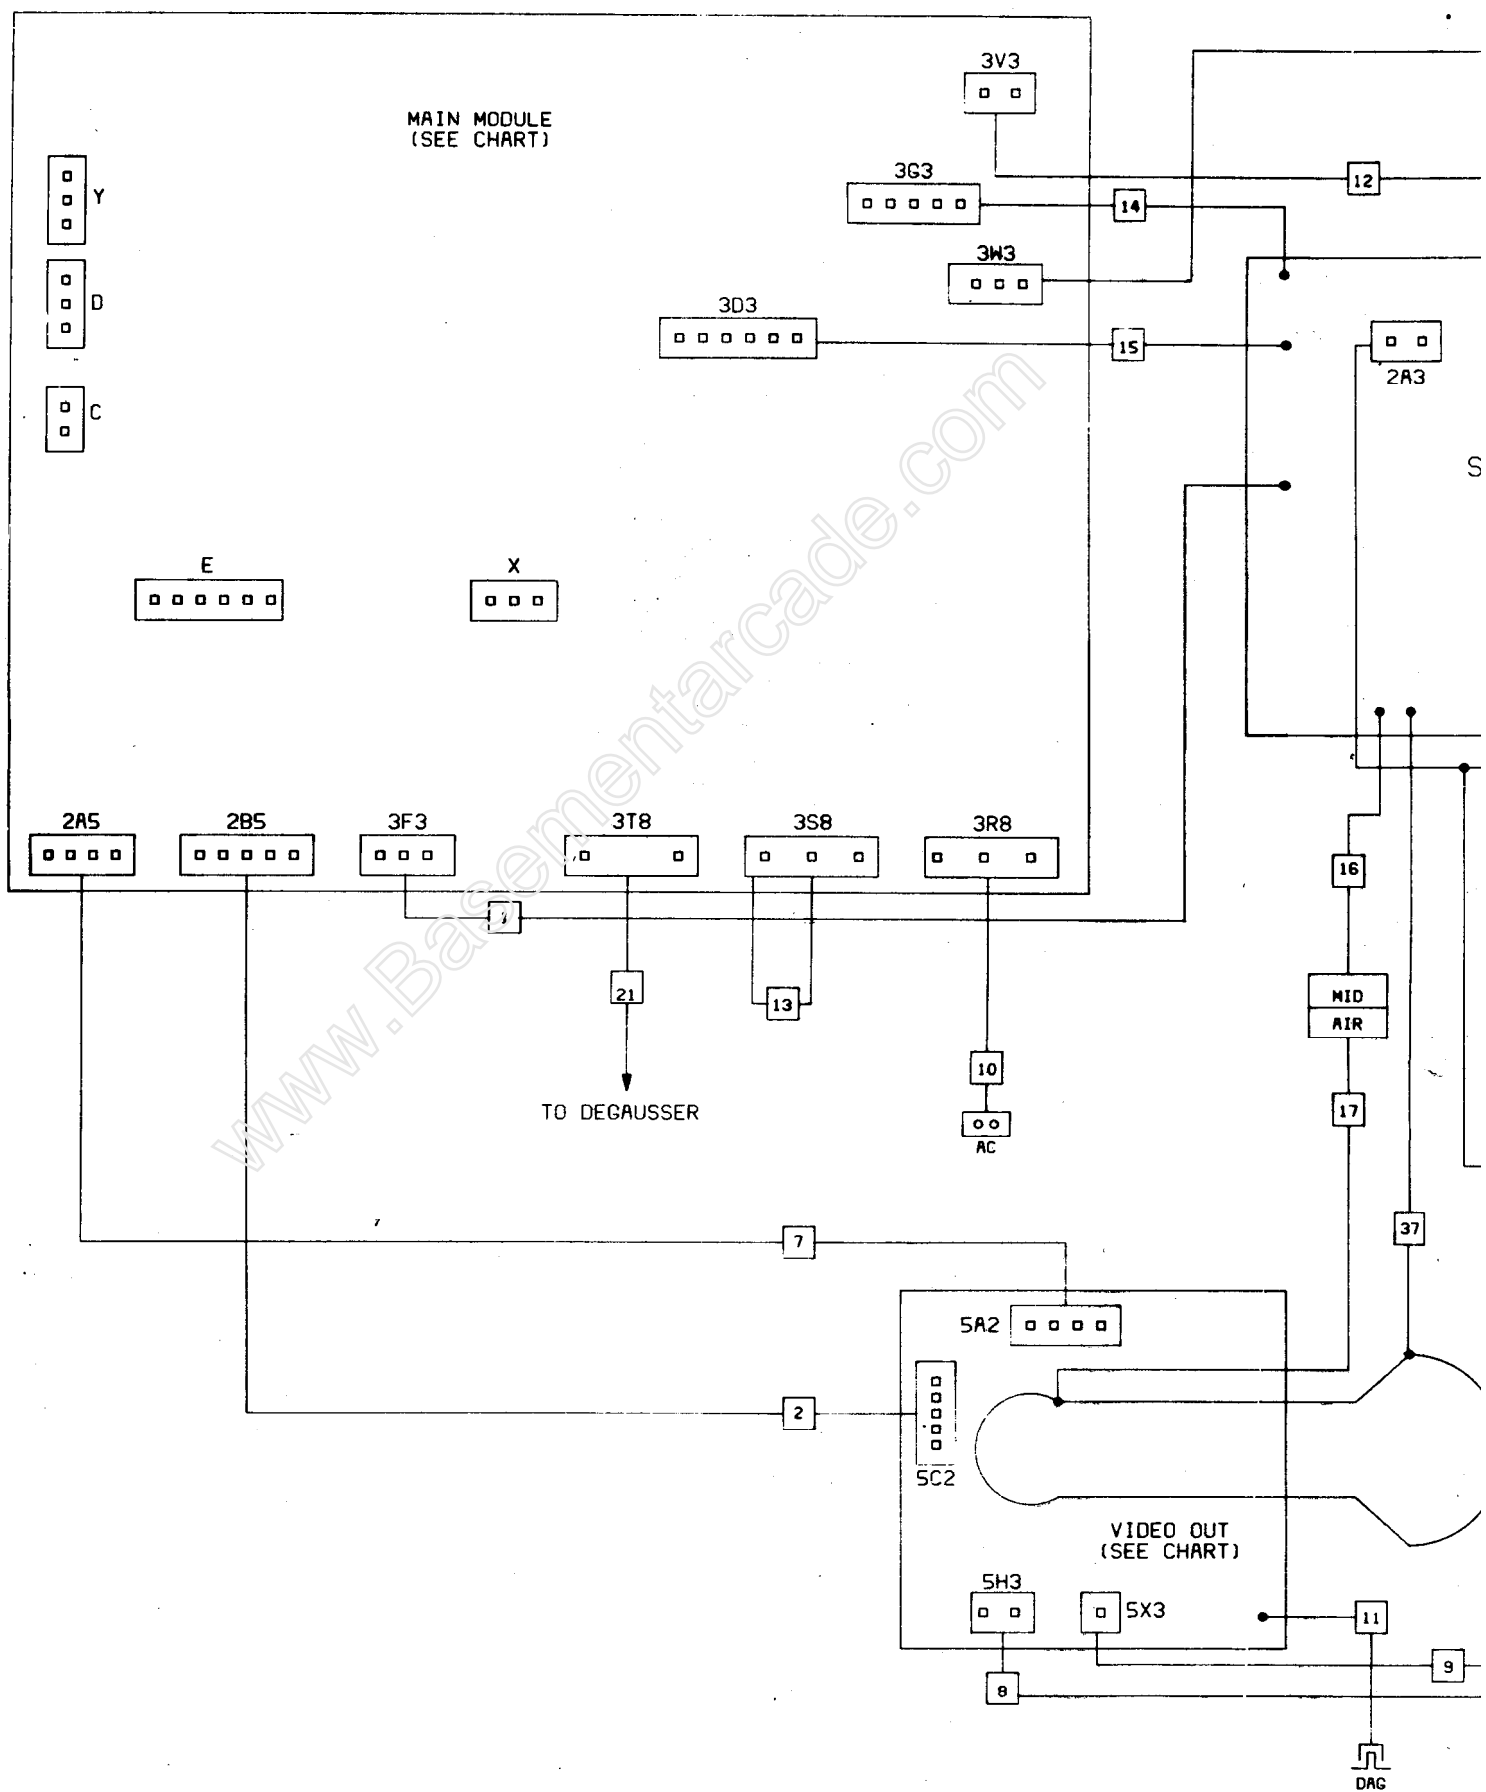

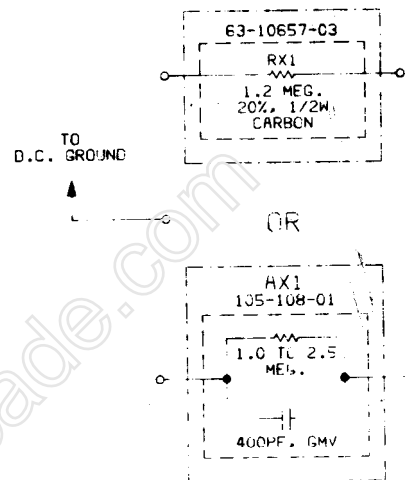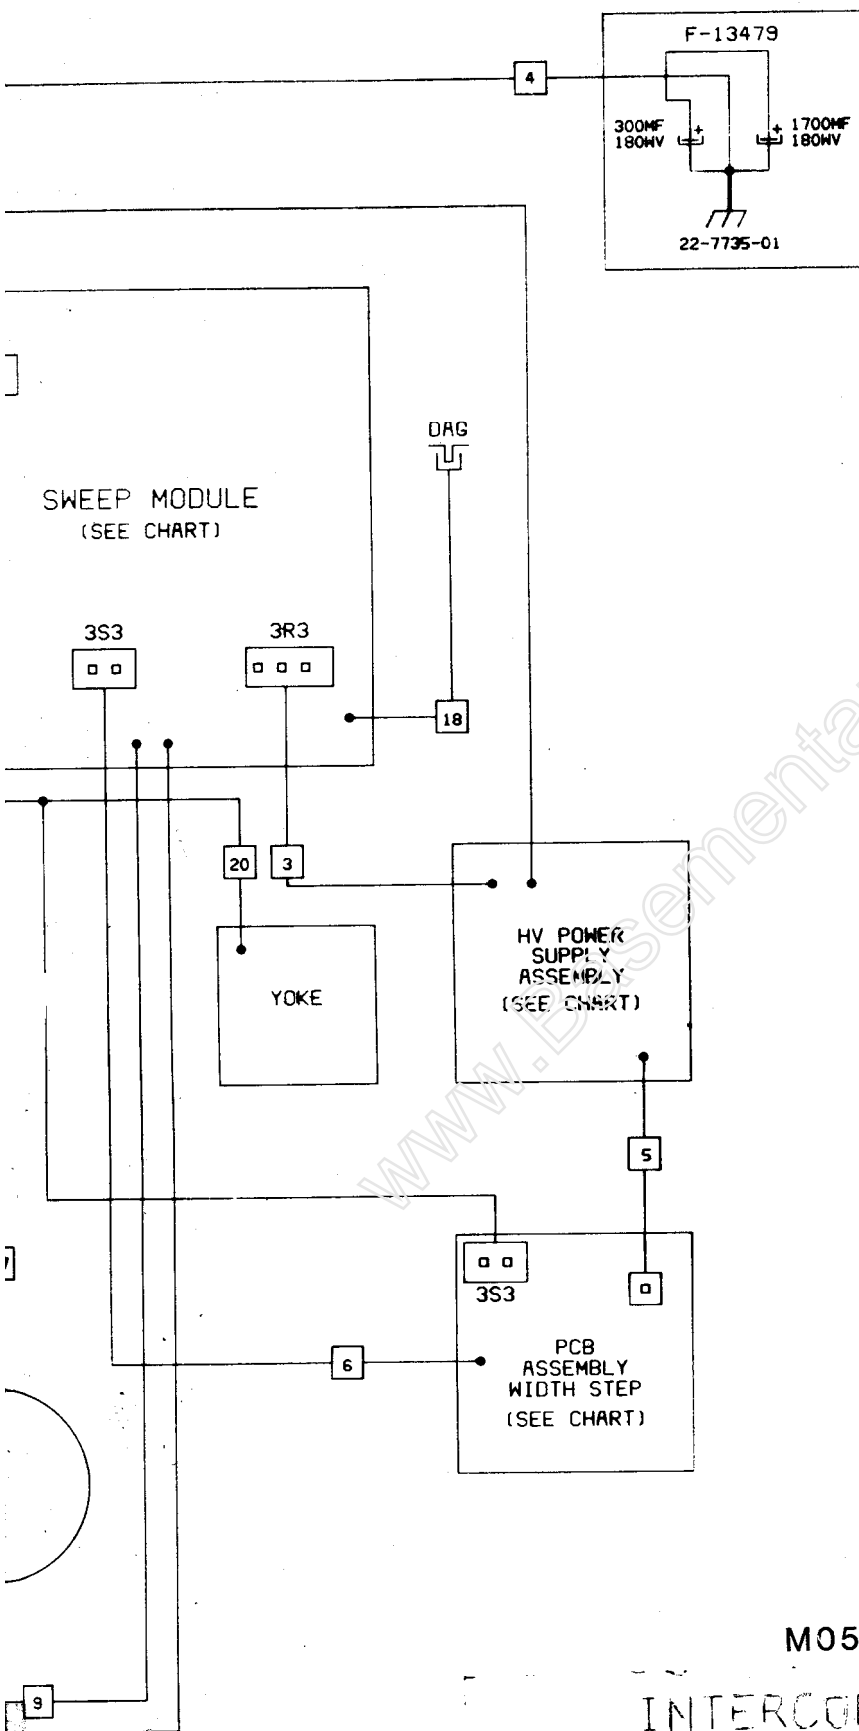

#### IMPORTANT SAFETY NOTICE

WHEN SERVICING THIS CHASSIS, UNDER NO CIRCUMSTANCES SHOULD THE ORIGINAL DESIGN BE MODIFIED OR ALTERED WITHOUT PERMISSION FROM THE ZENITH RADIO CORPORATION. ALL COMPONENTS SHOULD BE REPLACED ONLY WITH TYPES IDENTICAL TO THOSE IN THE ORIGINAL CIRCUIT, AND THEIR PHYSICAL LOCATION, WIRING AND LEAD DRESS MUST CONFORM TO ORIGINAL LAYOUT UPON COMPLETION OF REPAIRS.

SPECIAL CIRCUITS ARE ALSO USED TO PREVENT SHOCK AND FIRE HAZARD. THESE AREAS ARE SHADED ON THE SCHEMATIC FOR EASY IDENTIFICATION. THE LETTER "X" INCLUDED IN THE ITEM NUMBER DESIGNATES SPECIAL FAULTSAFE COMPONENTS IN THESE AREAS WHICH ARE REQUIRED TO MAINTAIN SAFE PERFORMANCE. NO DEVIATIONS ARE ALLOWED WITHOUT PRIOR APPROVAL BY THE PRODUCT SAFETY ENGINEERING DEPARTMENT.


THIS CIRCUIT DIAGRAM MAY OCCASIONALLY DIFFER FROM THE ACTUAL CIRCUIT USED. THIS WAY, IMPLEMENTATION OF THE LATEST SAFETY AND PERFORMANCE IMPROVEMENT CHANGES INTO THE SET IS NOT DELAYED UNTIL THE NEW SERVICE LITERATURE IS PRINTED.


M051-00087-A025

INTERCONNECT FOR  
VIDEO GAME MONITOR

ZENITH  
RADIO CORP.  
CHICAGO, ILL.

ISSUE

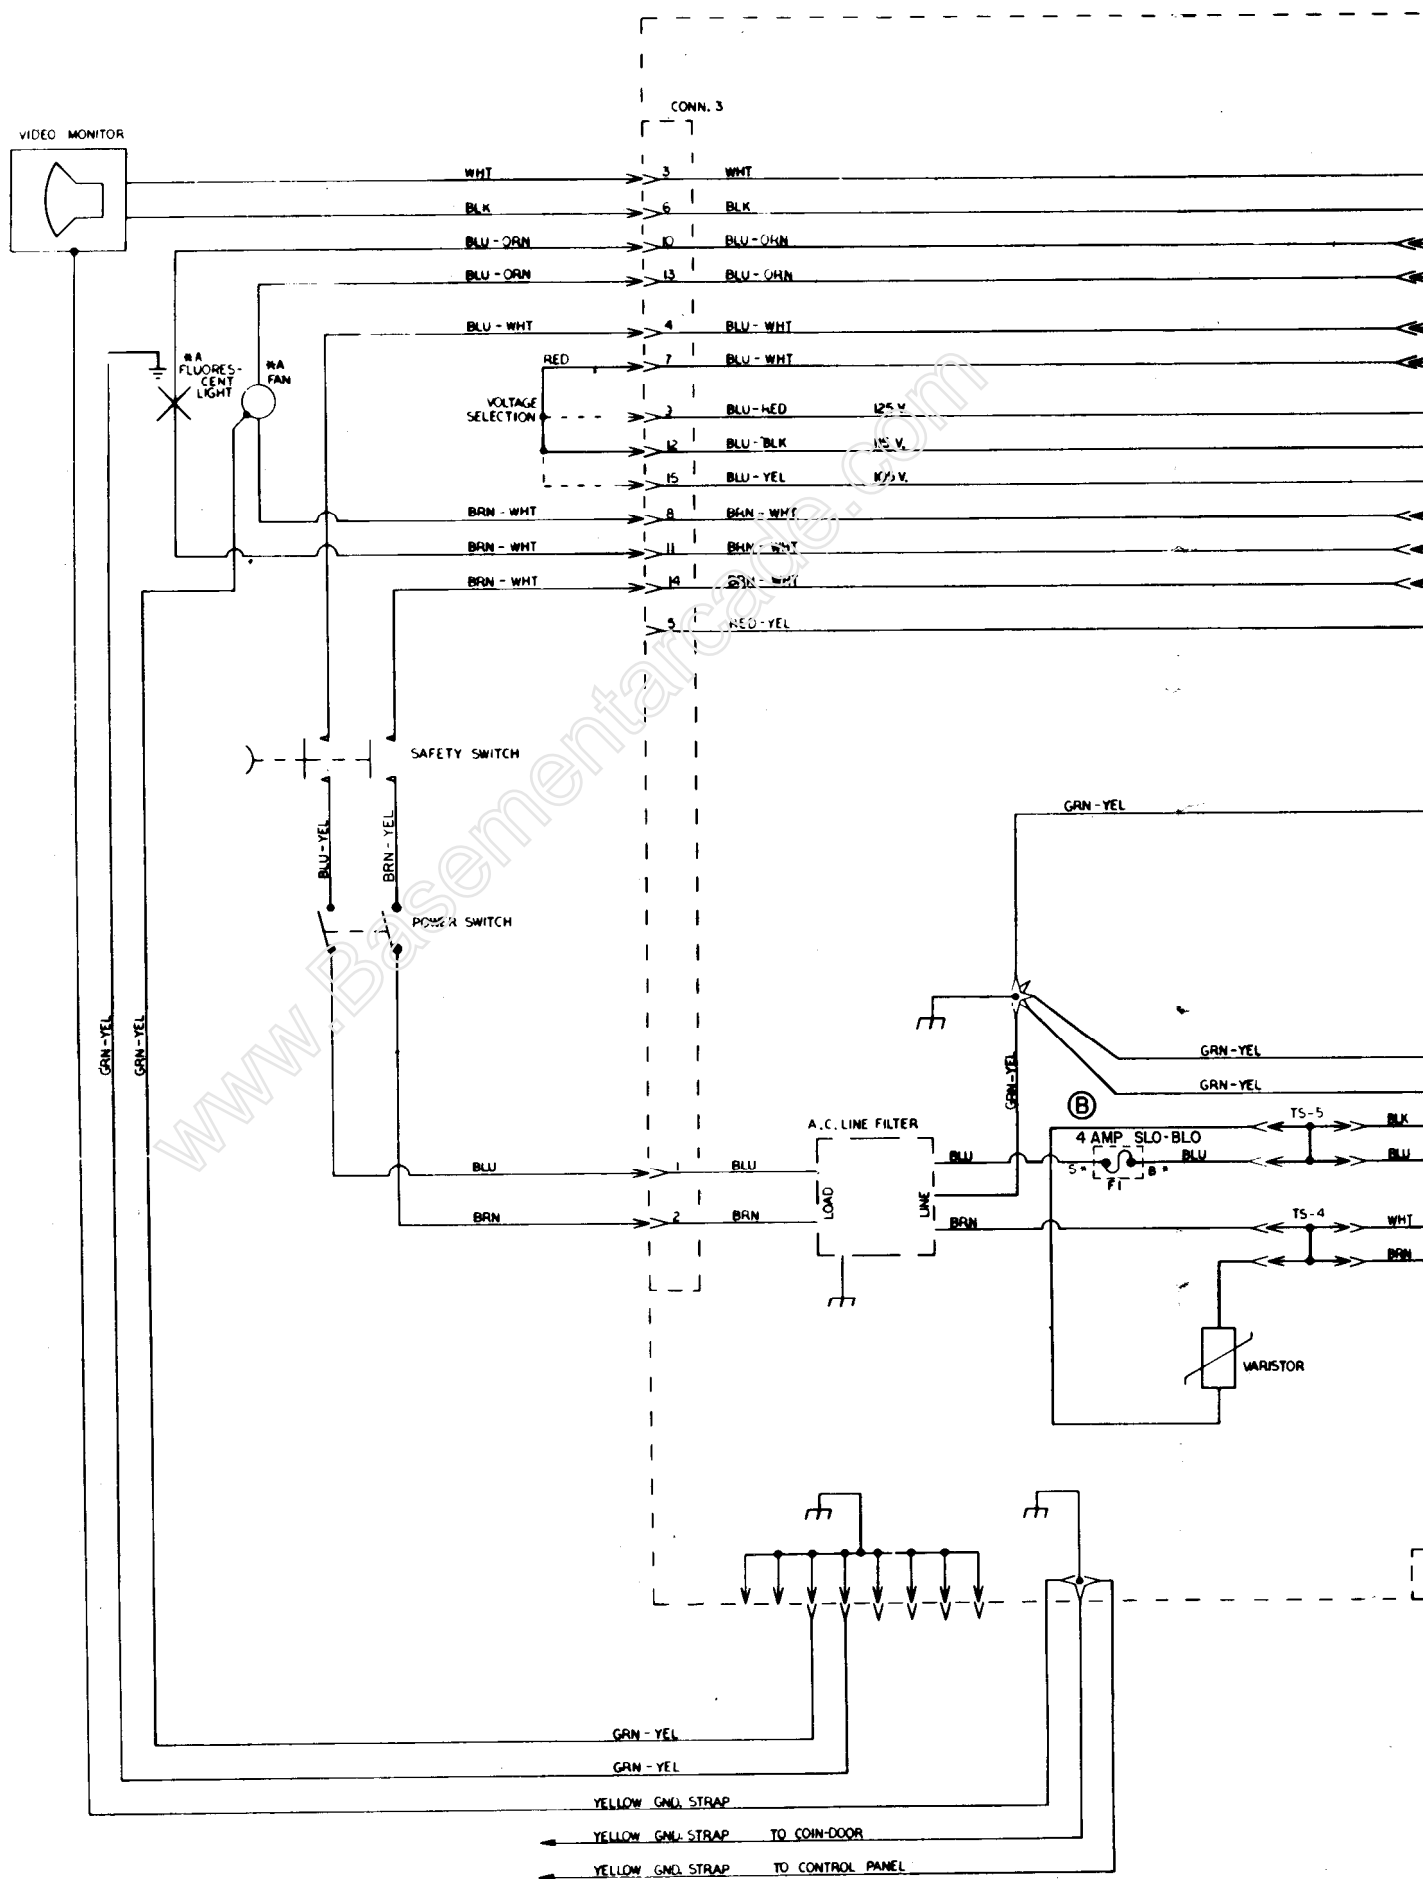

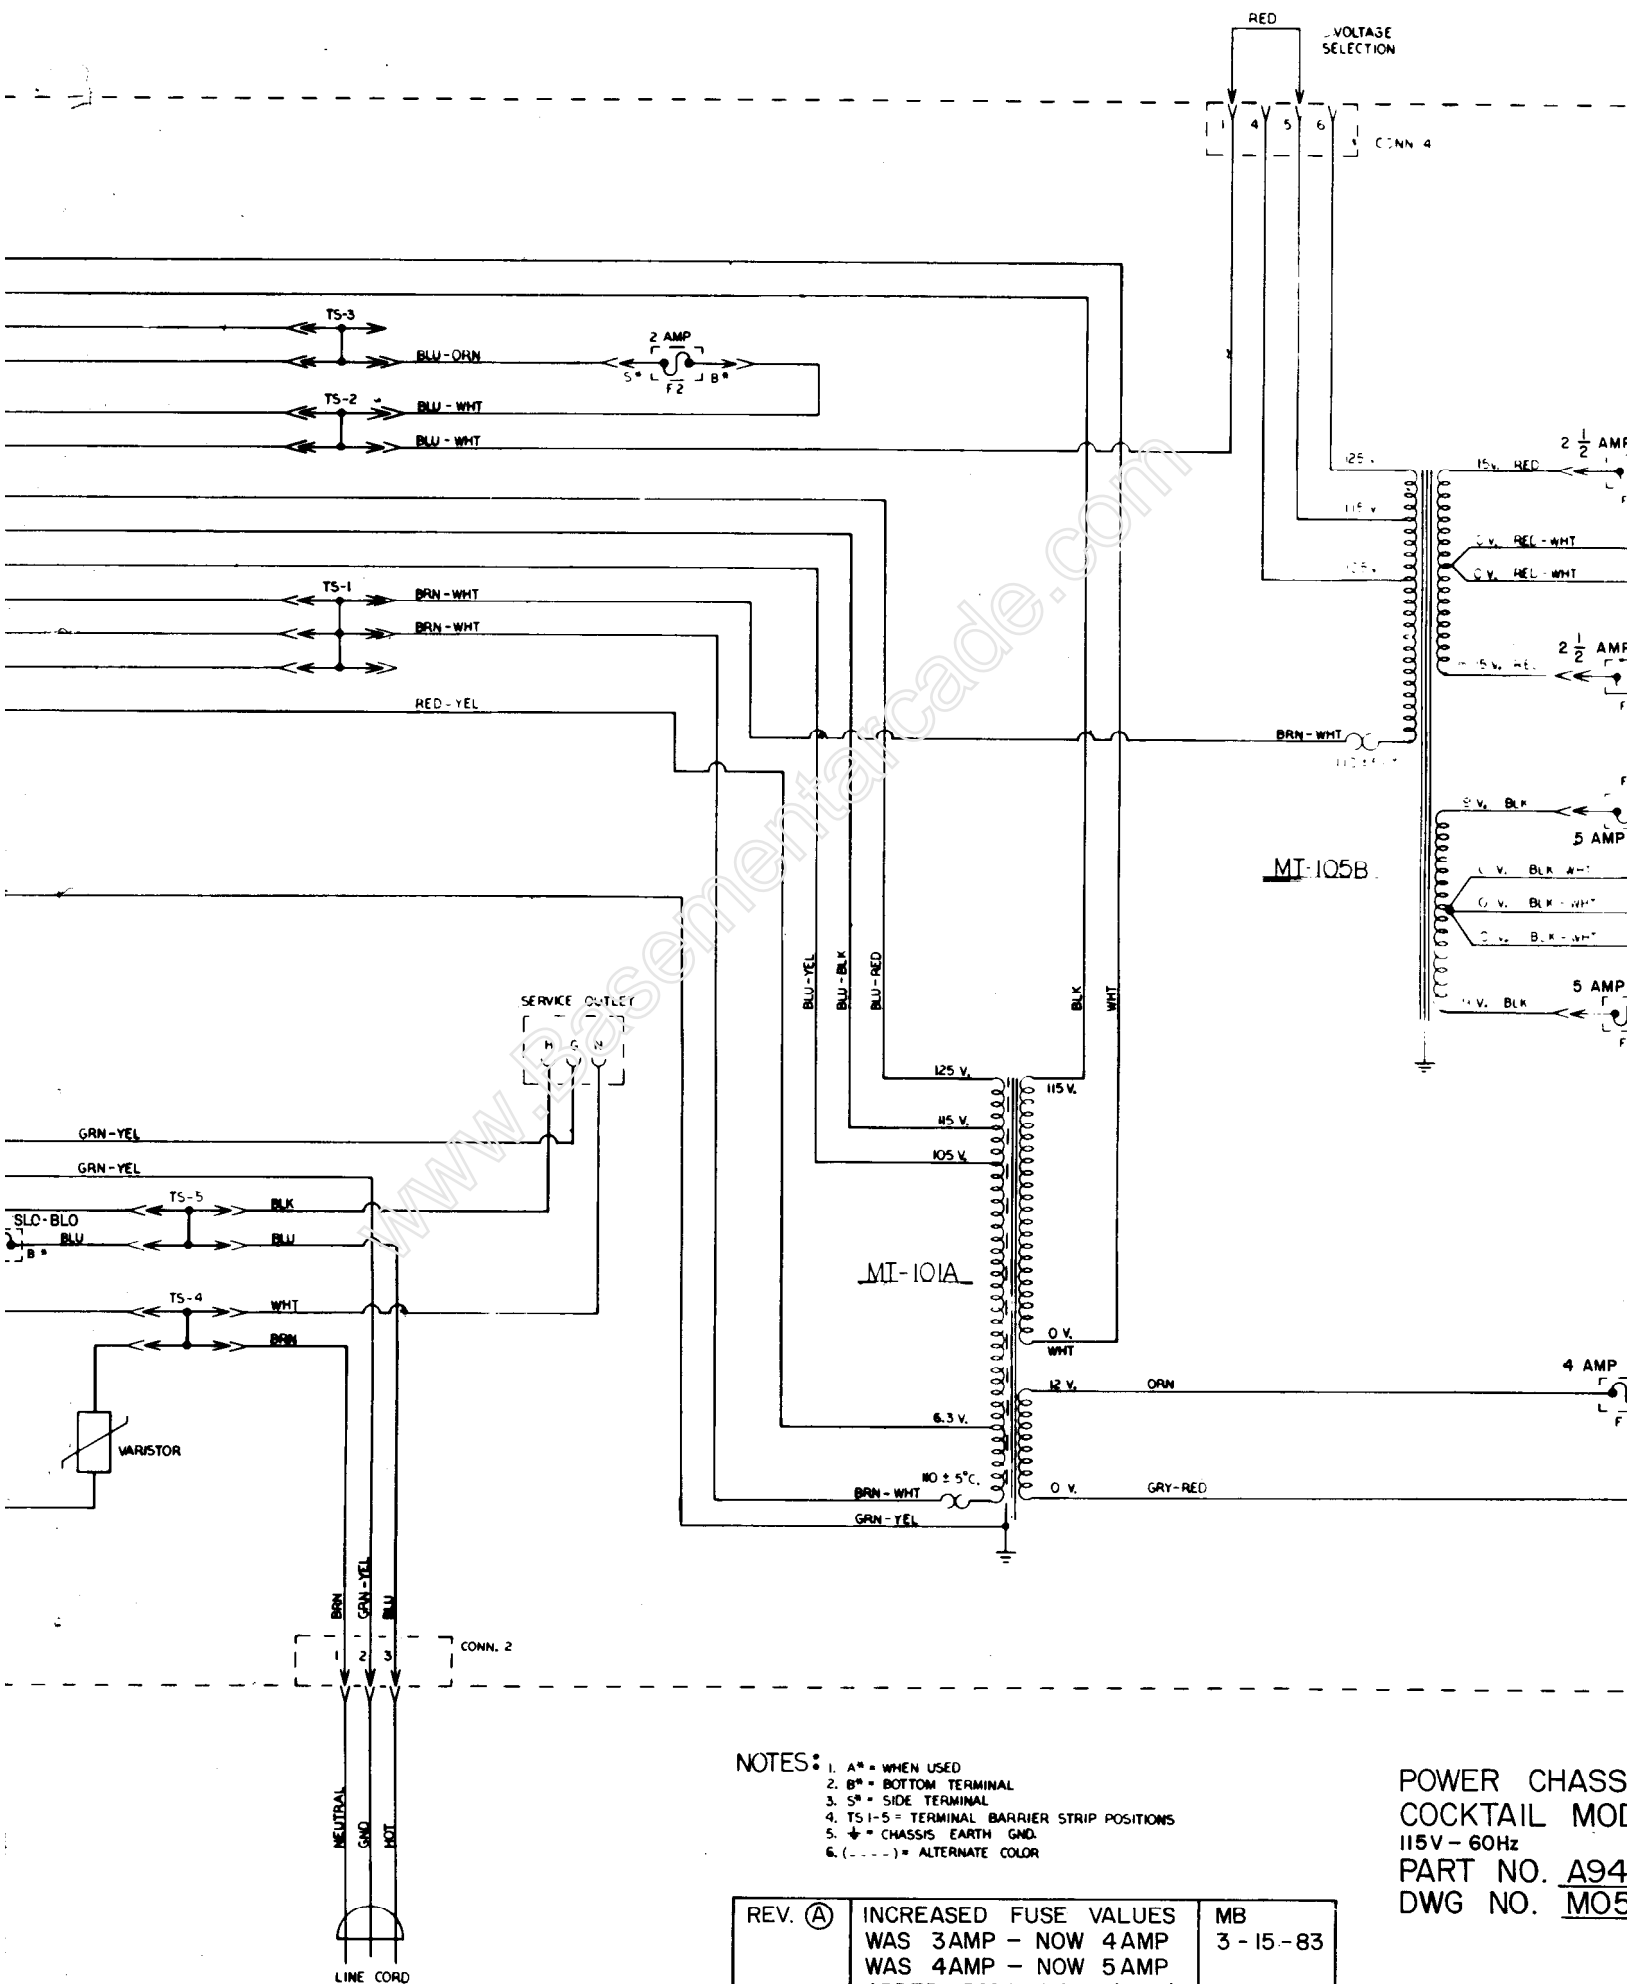


- NOTES:
1. A\* = WHEN USED
  2. B\* = BOTTOM TERMINAL
  3. S\* = SIDE TERMINAL
  4. TS 1-5 = TERMINAL BARRIER STRIP POSITIONS
  5. + = CHASSIS EARTH GND.
  6. (---) = ALTERNATE COLOR

POWER CHASS  
COCKTAIL MO  
115V - 60Hz  
PART NO. A94  
DWG NO. MO5

|          |  |               |
|----------|--|---------------|
| REV. (A) | INCREASED FUSE VALUES<br>WAS 3AMP - NOW 4AMP<br>WAS 4AMP - NOW 5AMP<br>ADDED PART NO. (U.L.) | MB<br>3-15-83 |
| REV. (B) | INCREASED FUSE VALUE<br>WAS 3AMP - NOW 4AMP  | MB<br>3-24-83 |




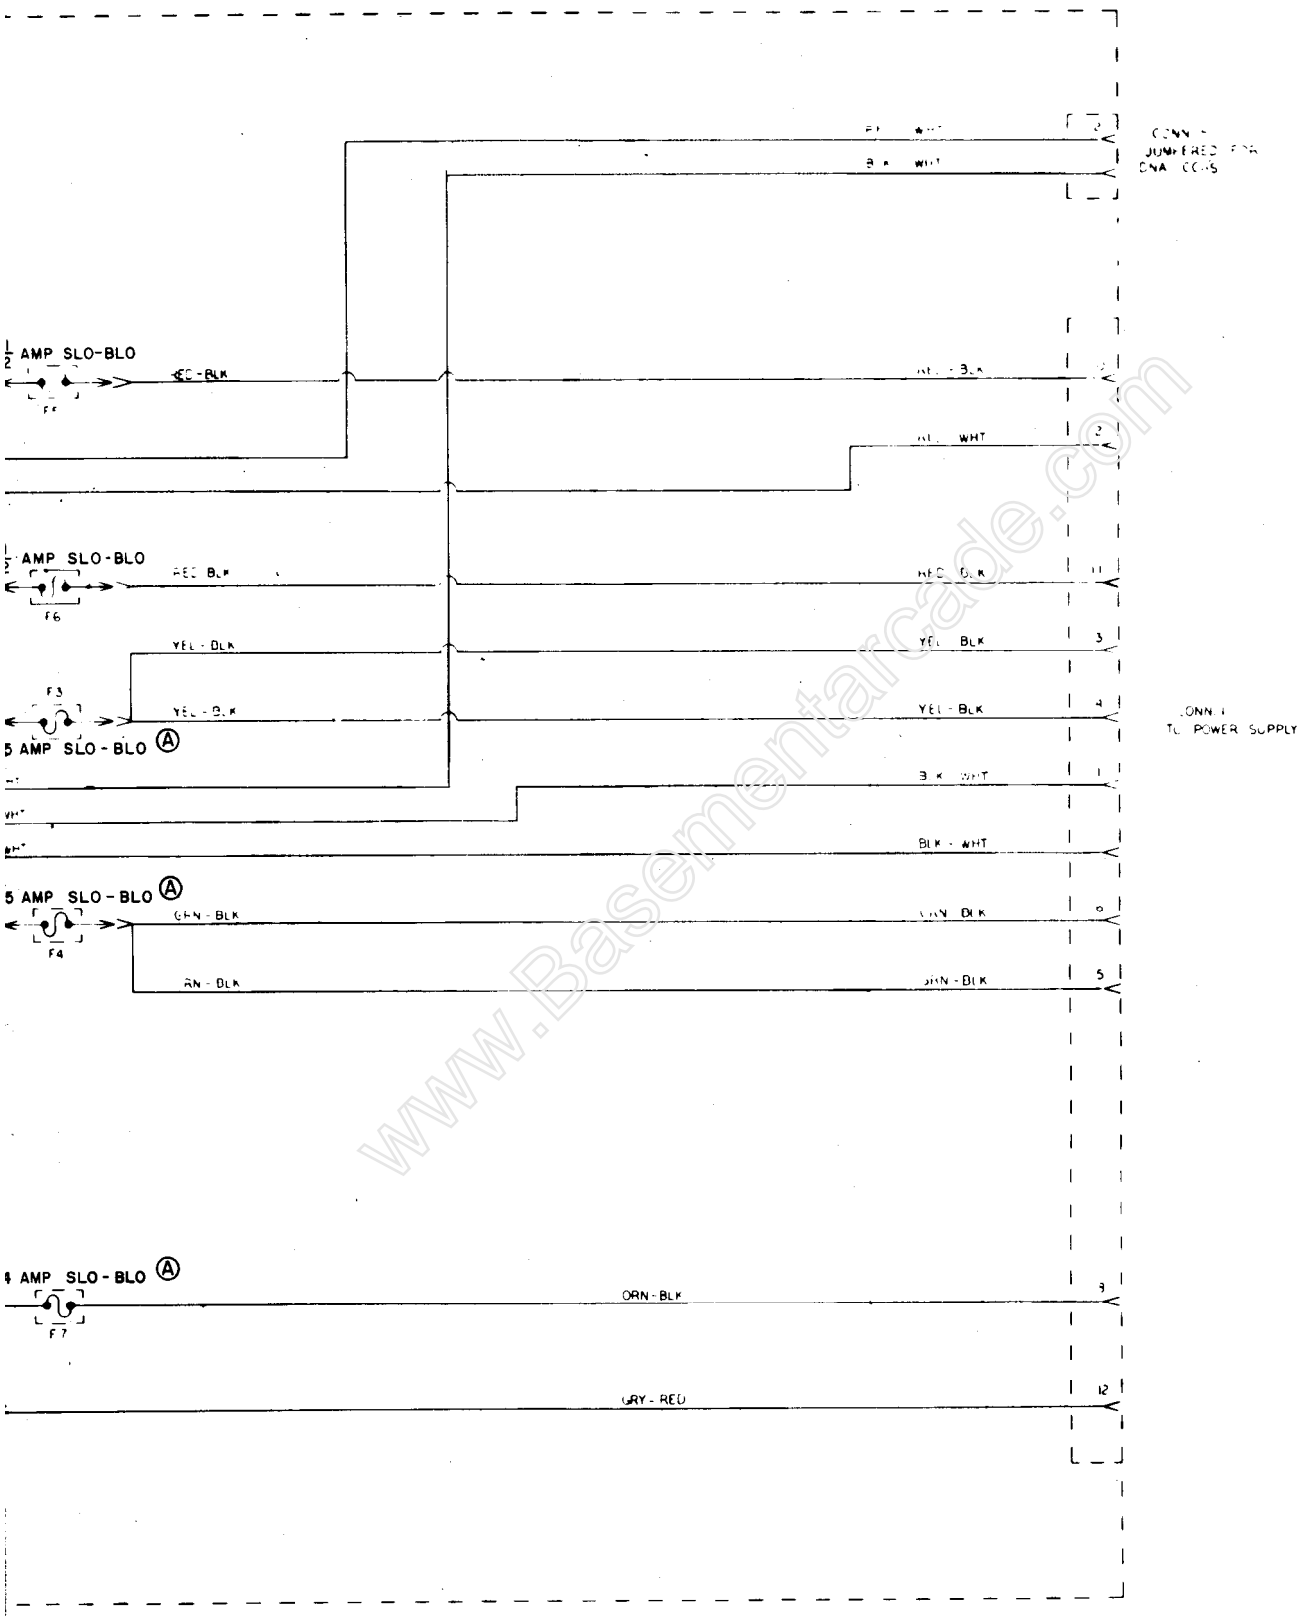


MASSIS #70VA  
MODEL


BALLY / MIDWAY  
10601 W BELMONT AVE  
FRANKLIN PARK, IL 60131

A945-00036-0000  
M051-00945-B046

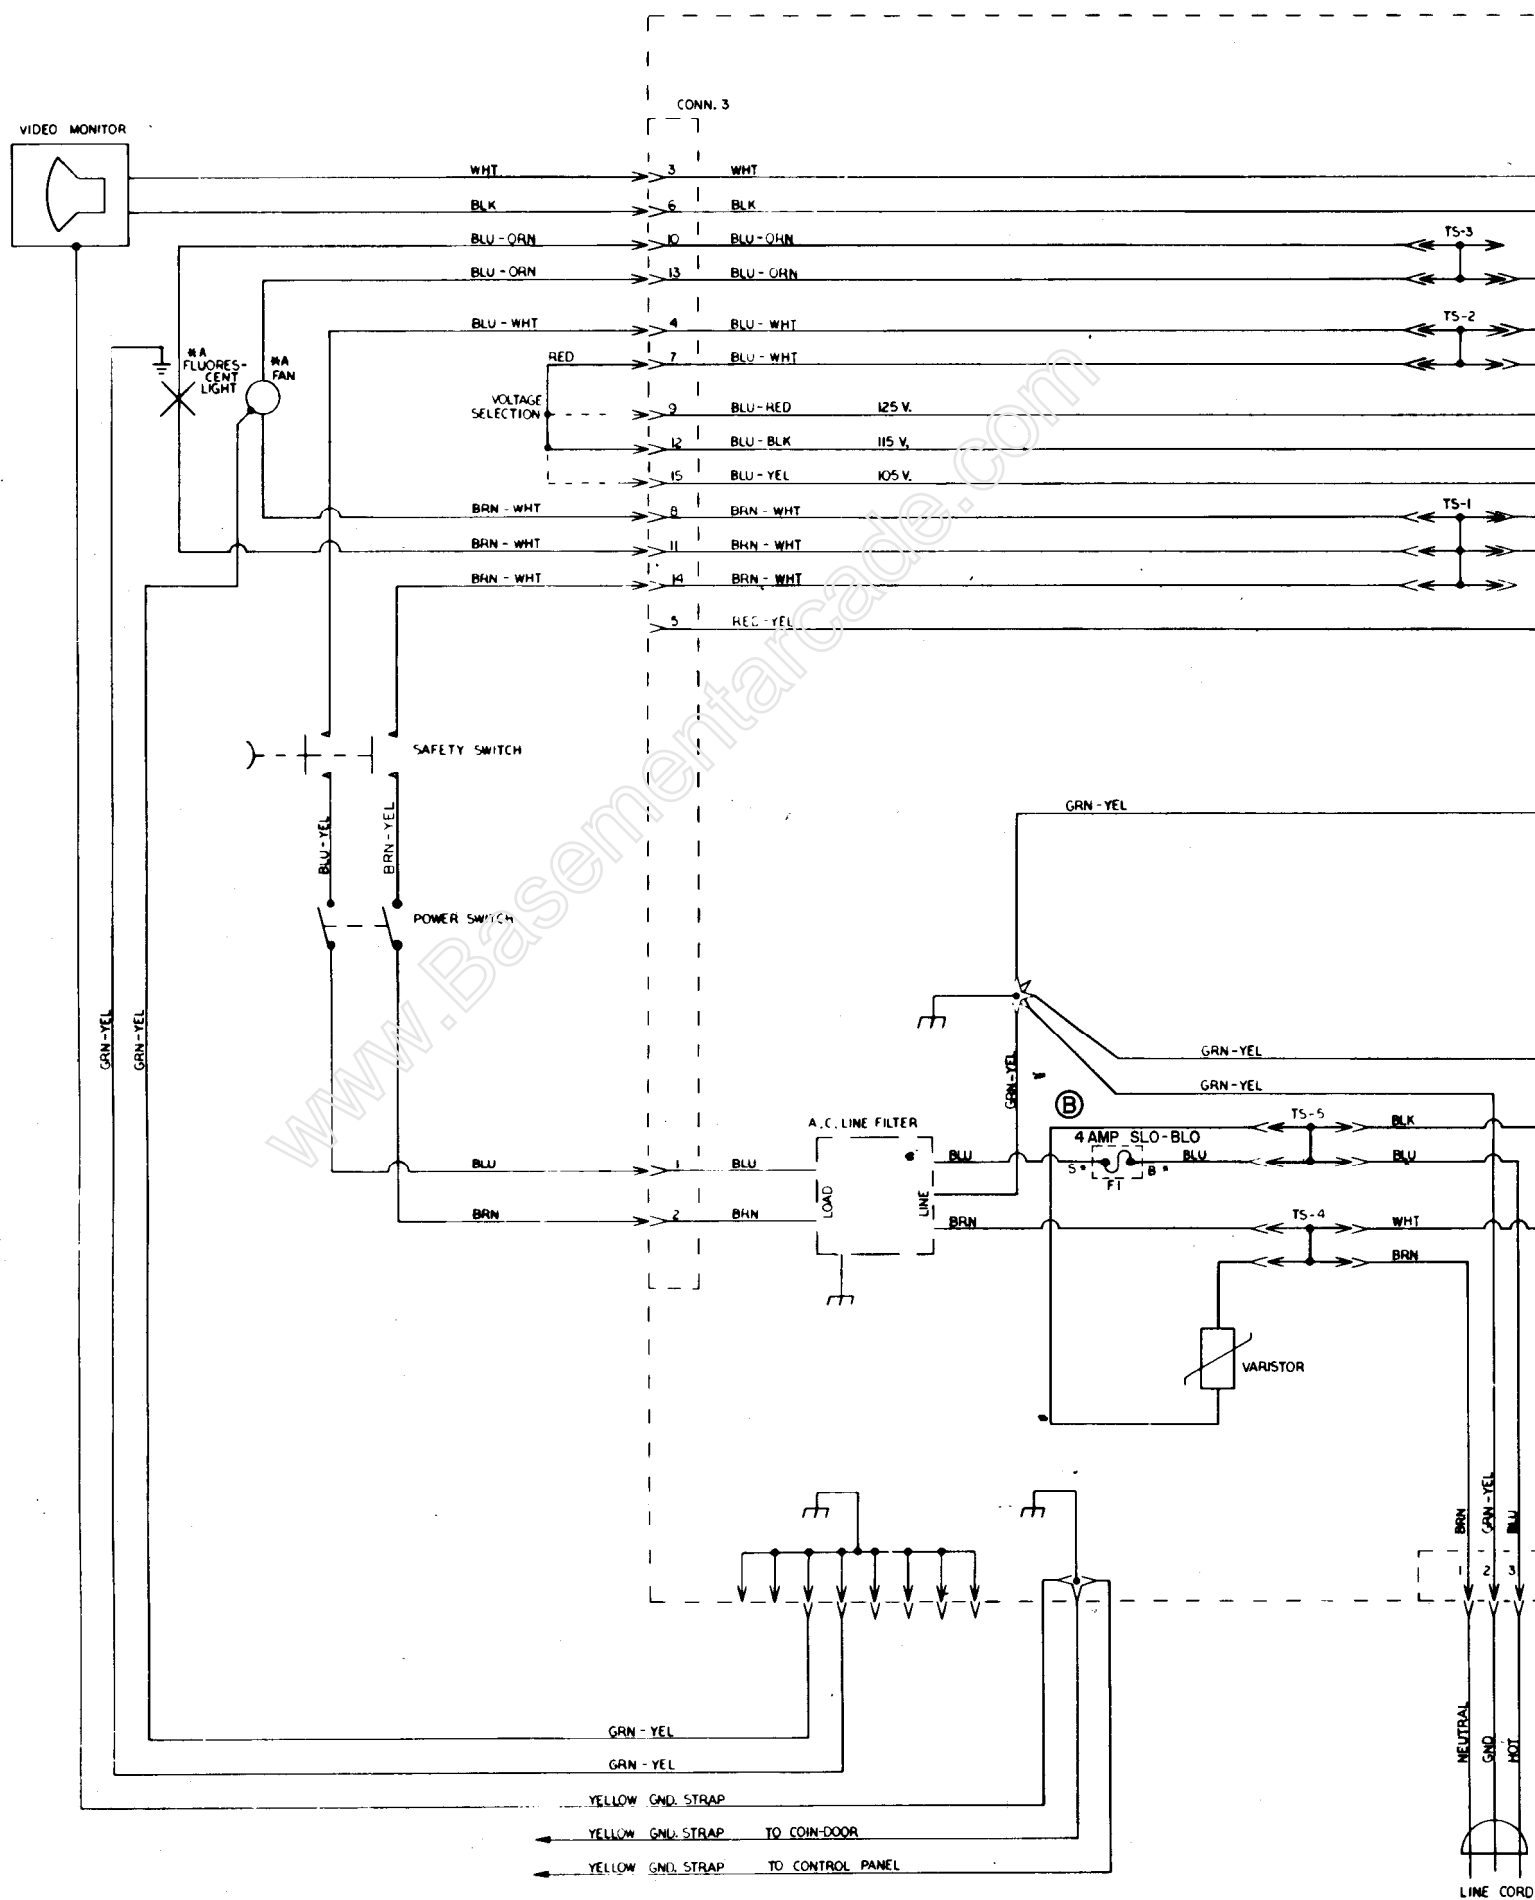

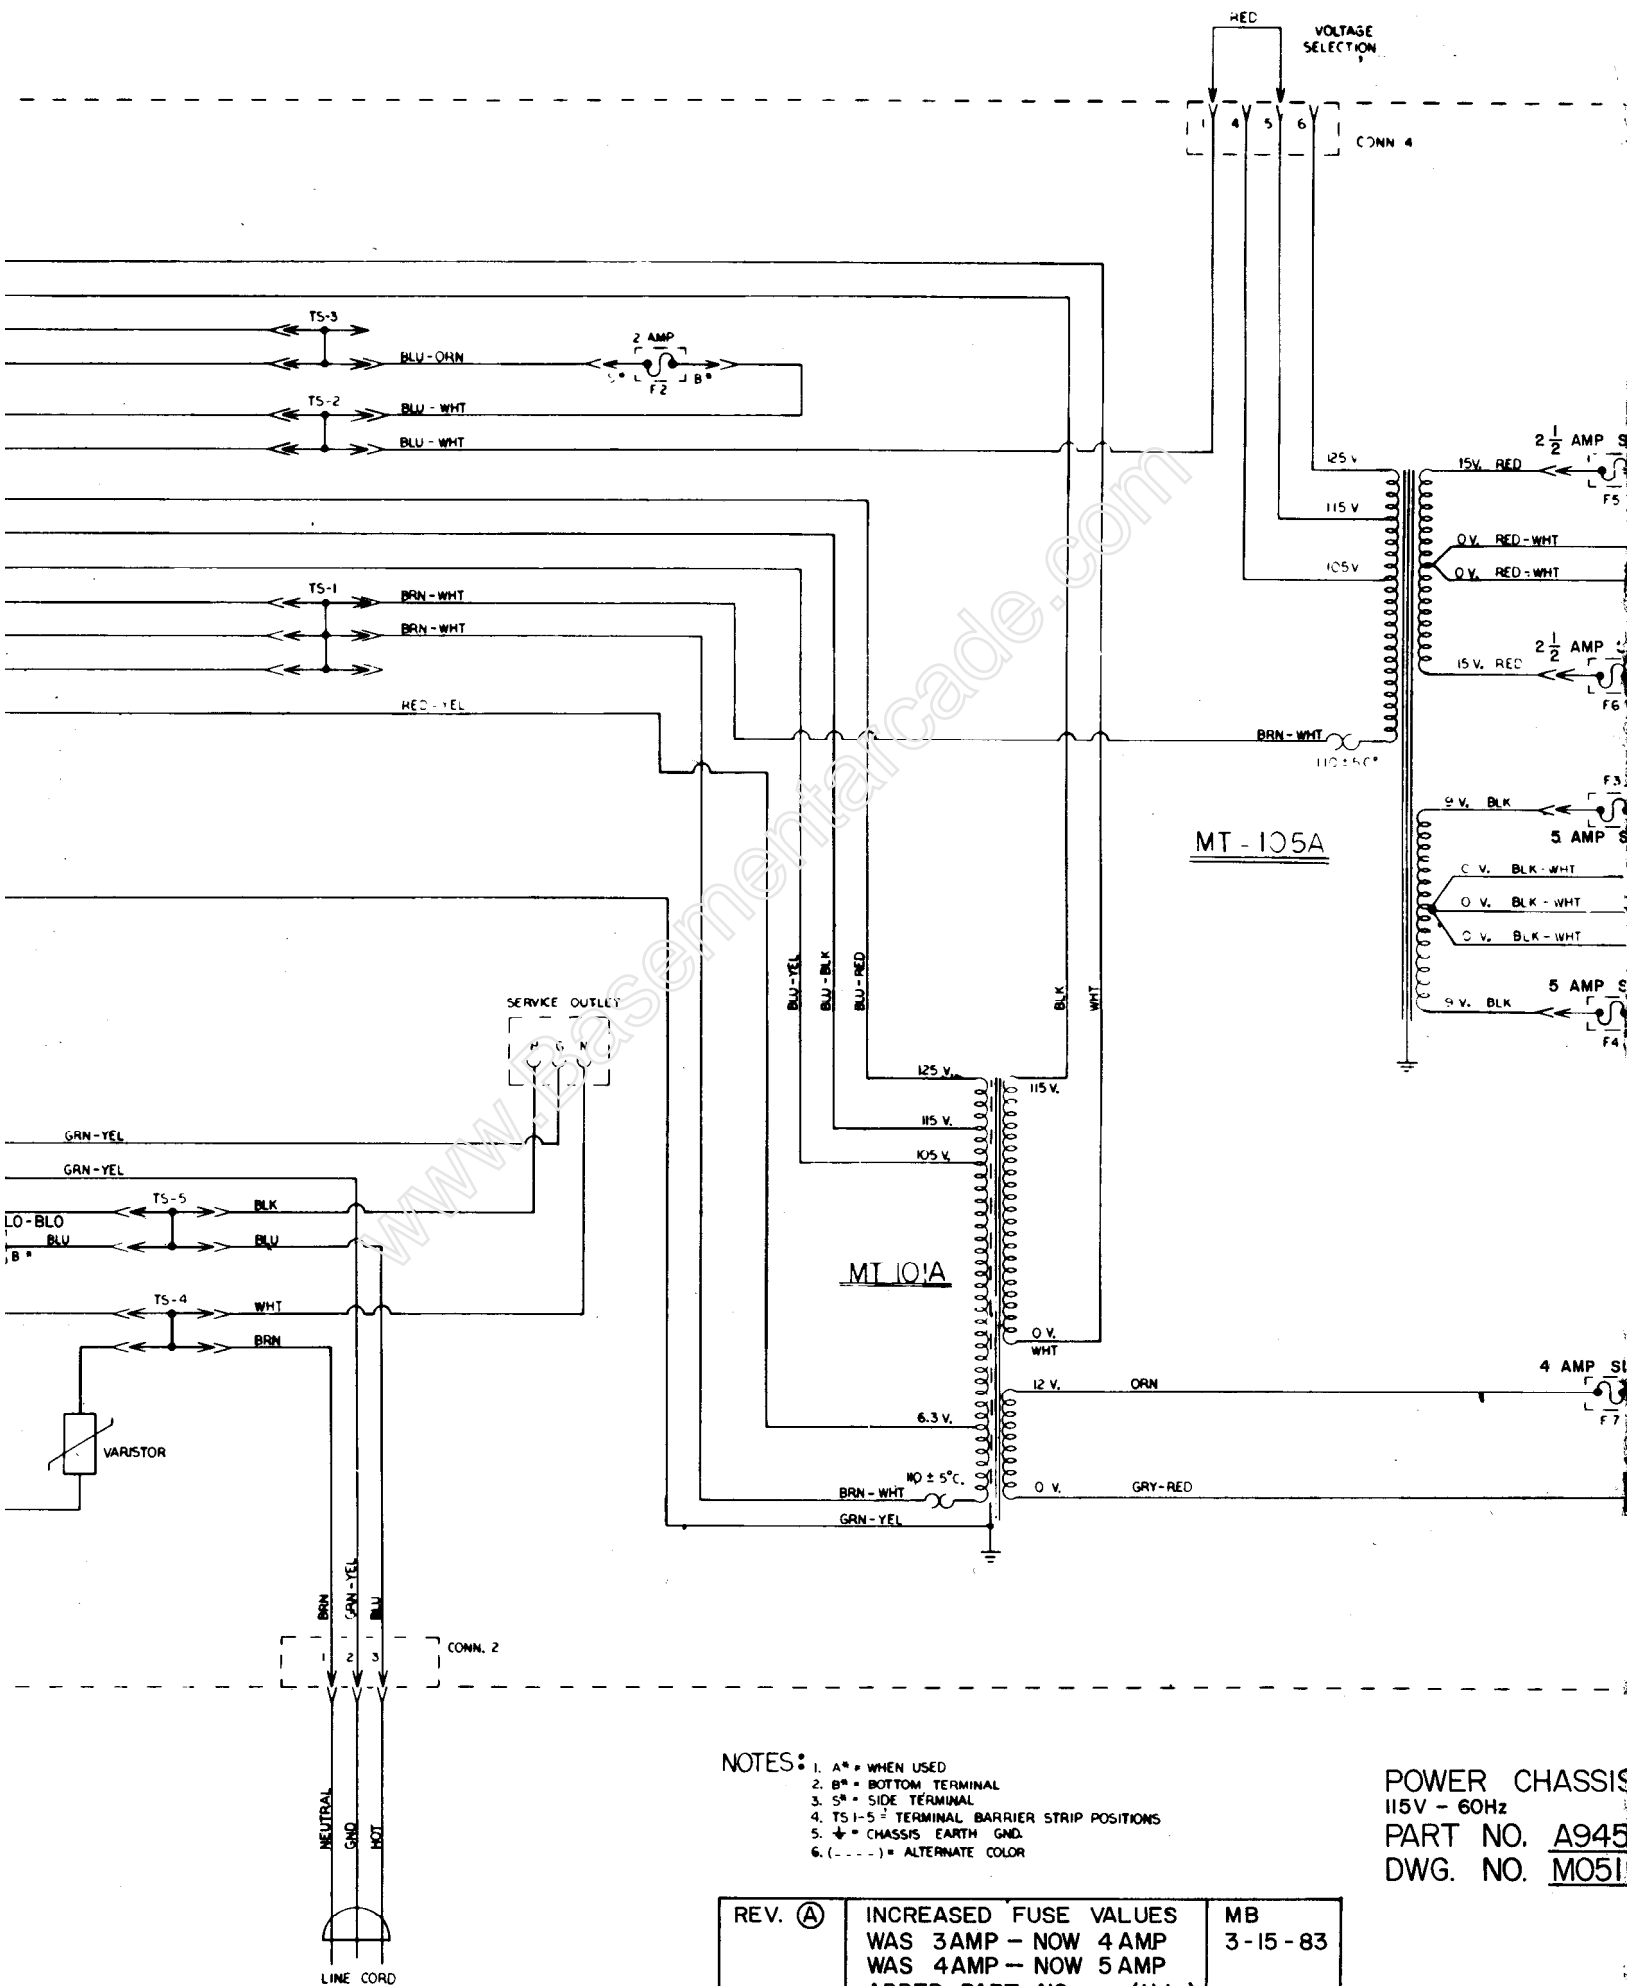


|          |  |               |
|----------|--|---------------|
| REV. (A) | INCREASED FUSE VALUES<br>WAS 3AMP - NOW 4AMP<br>WAS 4AMP - NOW 5AMP<br>ADDED PART NO. (U.L.) | MB<br>3-15-83 |
| REV. (B) | INCREASED FUSE VALUE<br>WAS 3AMP - NOW 4AMP  | MB<br>3-24-83 |

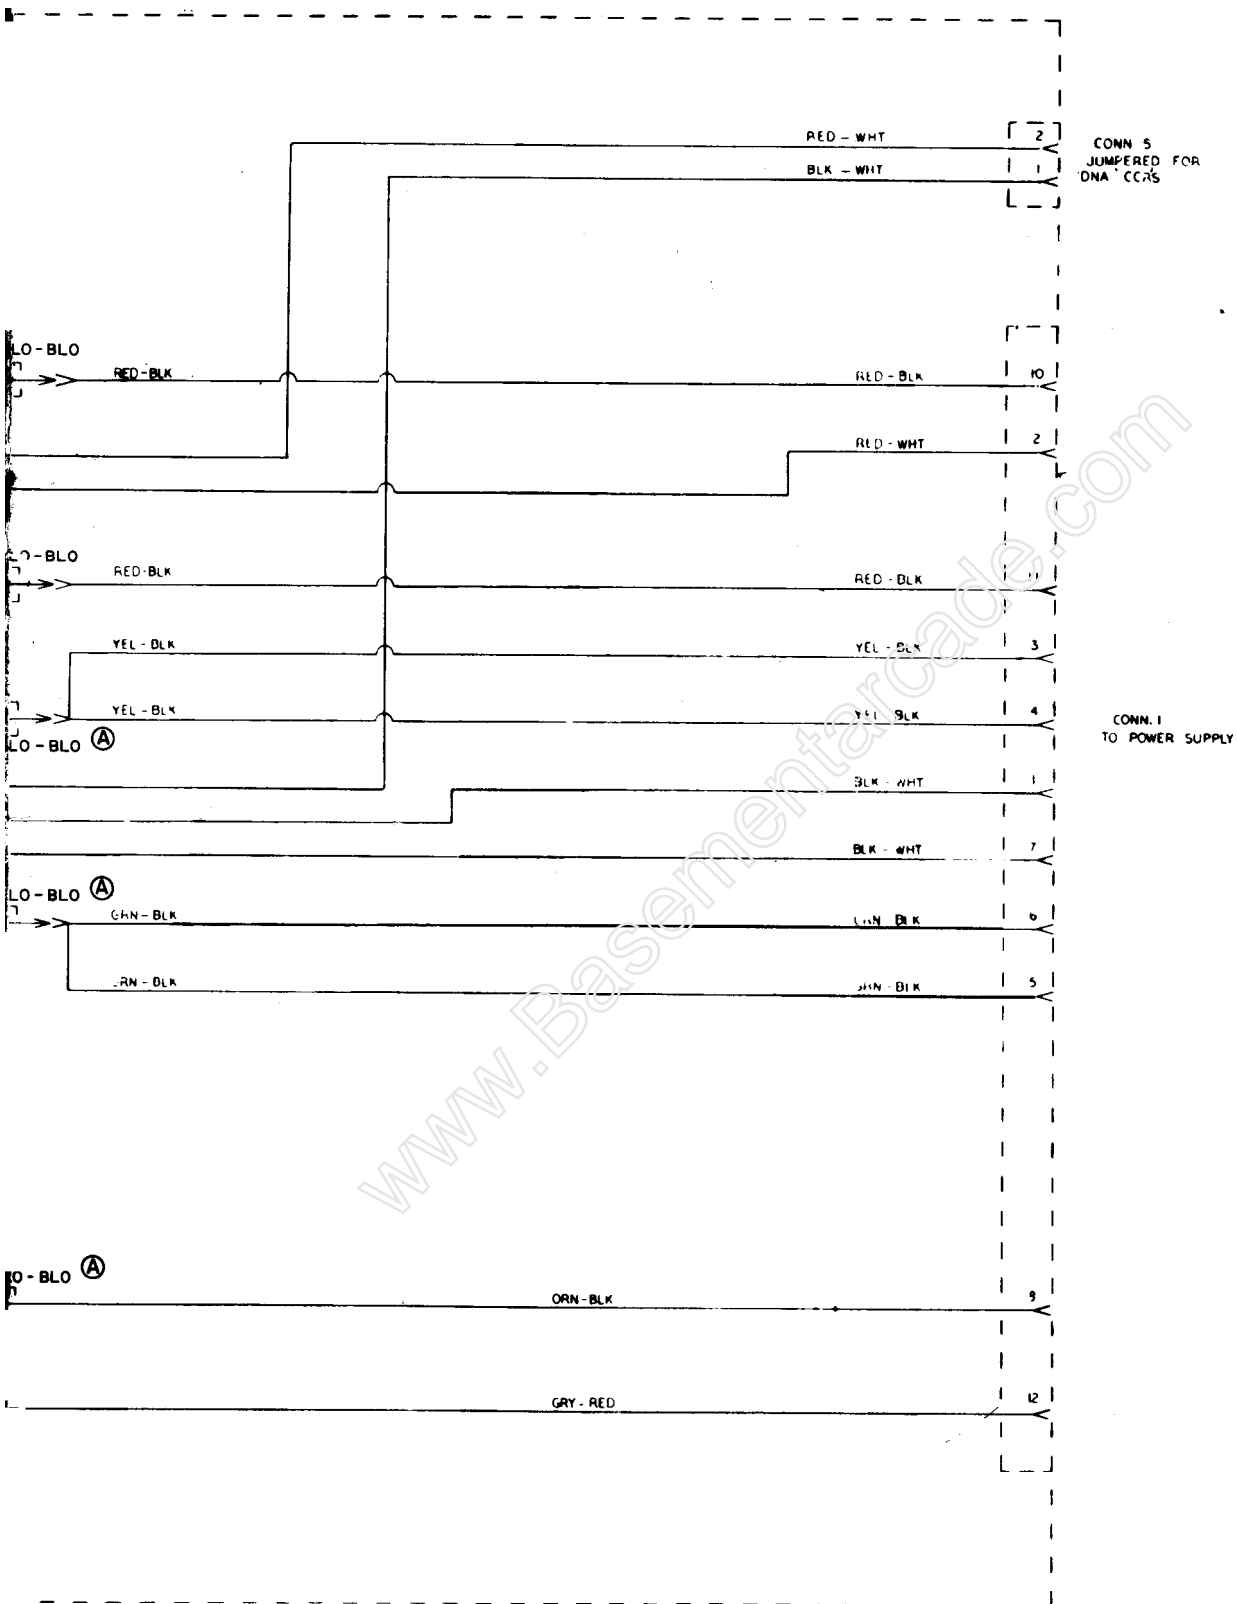


#70VA - UPRIGHT

BALLY / MIDWAY  
10601 W BELMONT AVE.  
FRANKLIN PARK, IL. 60131

- 00036-0002  
- 00945-B051

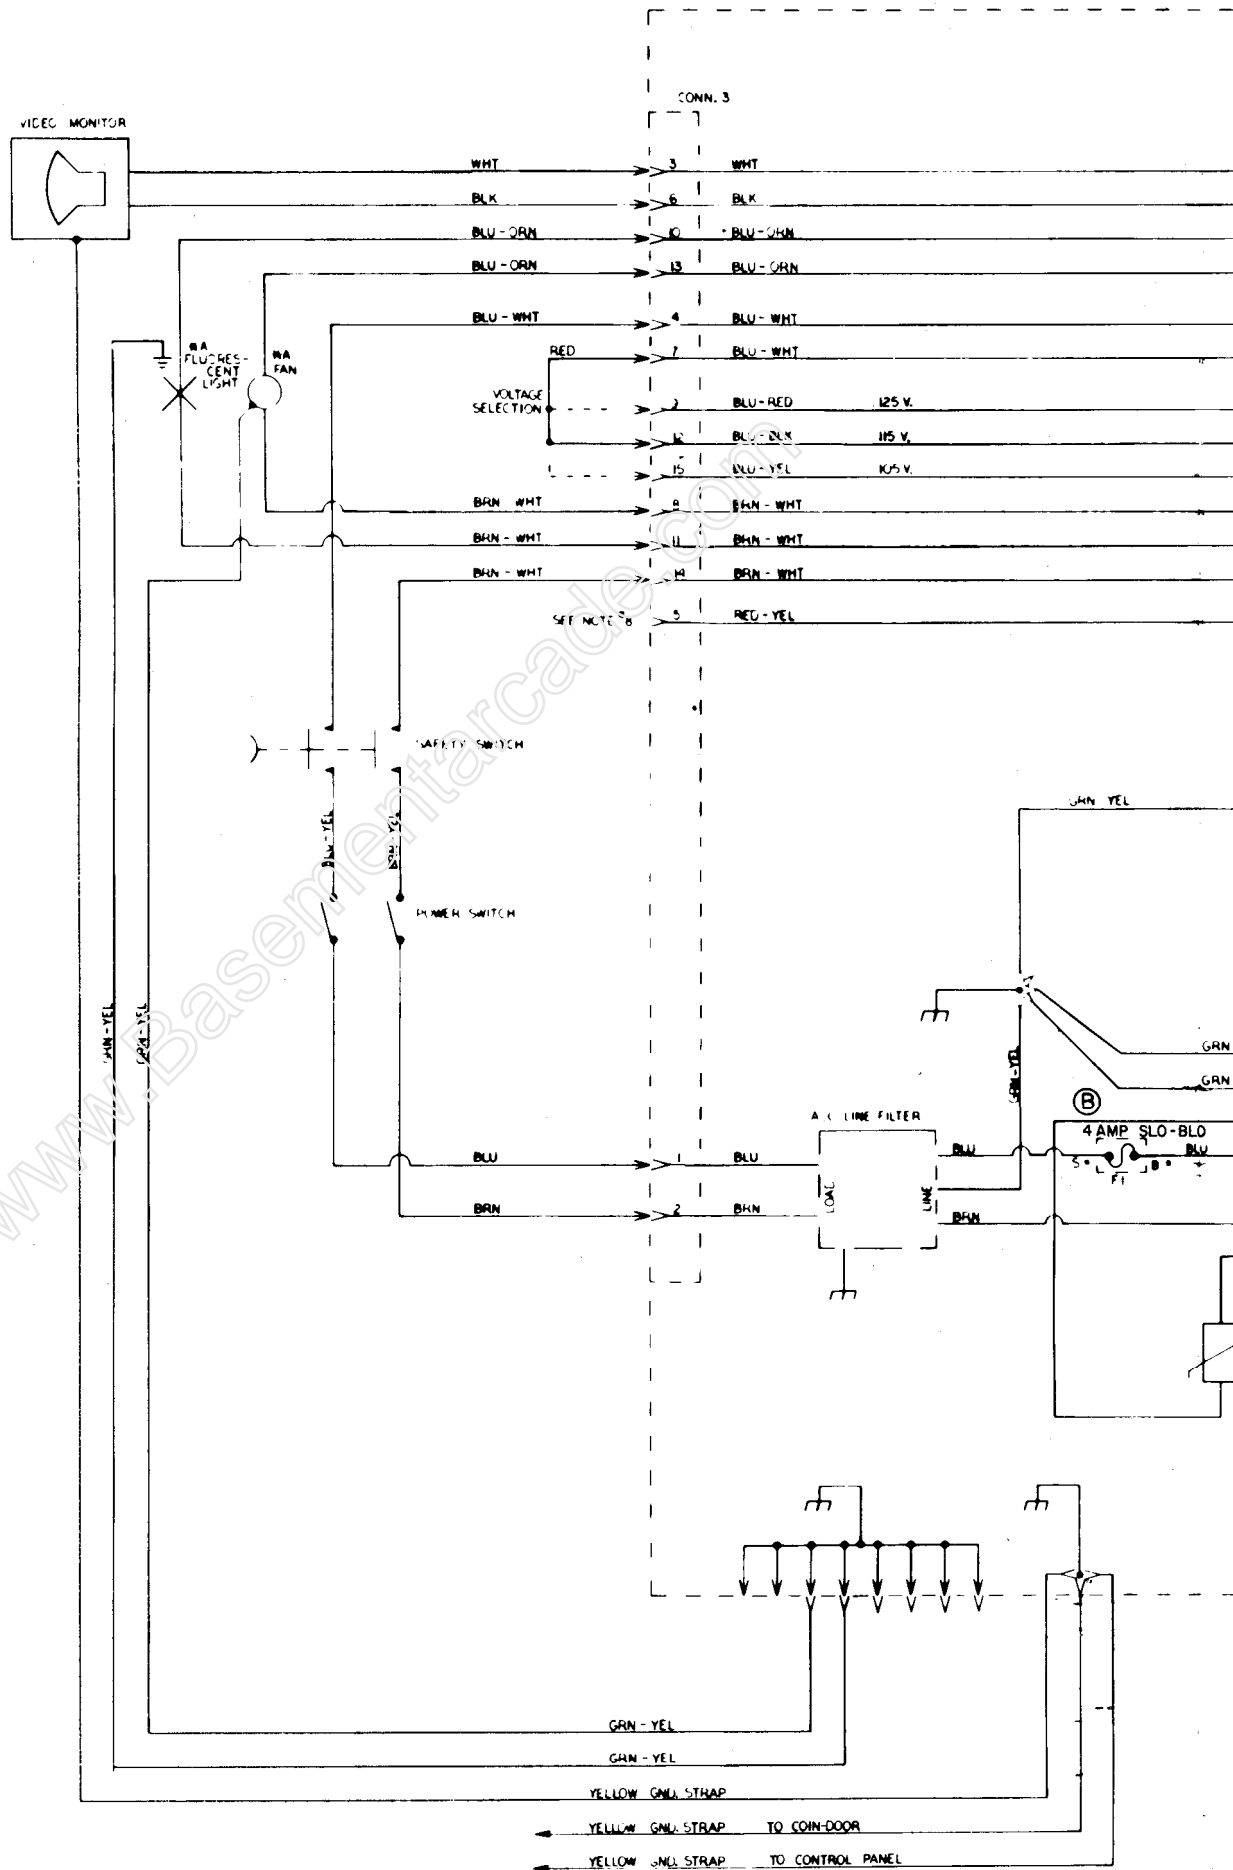

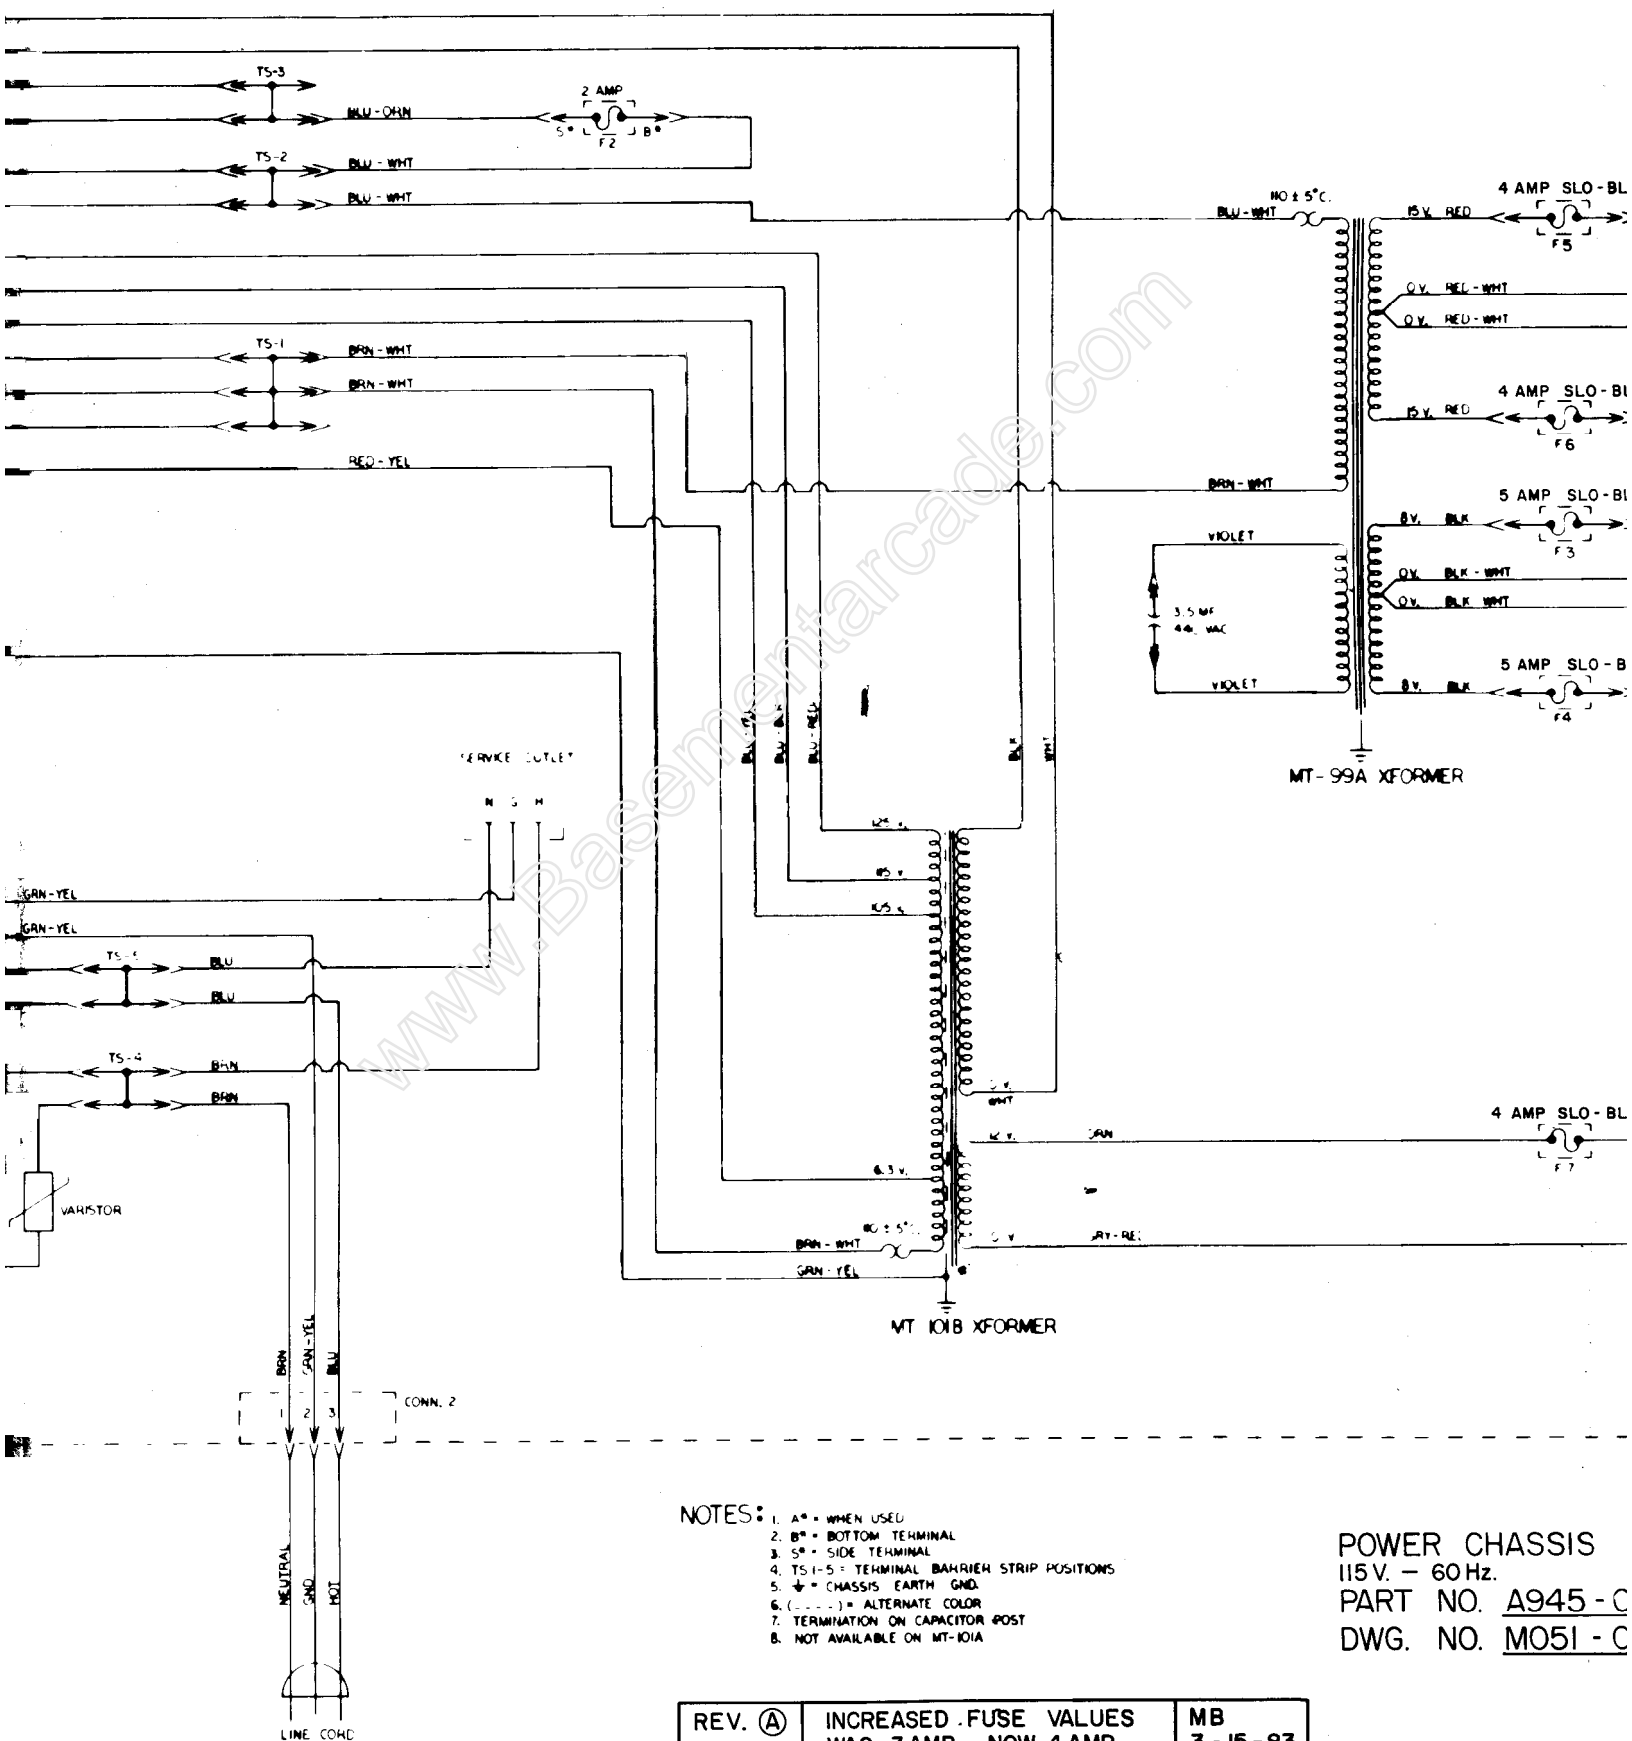

- NOTES:
1. A\* - WHEN USED
  2. B\* - BOTTOM TERMINAL
  3. S\* - SIDE TERMINAL
  4. TS1-5 - TERMINAL BARRIER STRIP POSITIONS
  5. \* - CHASSIS EARTH GND
  6. (...) - ALTERNATE COLOR
  7. TERMINATION ON CAPACITOR POST
  8. NOT AVAILABLE ON MT-101A

POWER CHASSIS  
115V. - 60Hz.  
PART NO. A945 - C  
DWG. NO. M051 - C

|          |   |               |
|----------|---|---------------|
| REV. (A) | INCREASED FUSE VALUES<br>WAS 3 AMP - NOW 4 AMP<br>ADDED PART NO. (UL) | MB<br>3-15-83 |
| REV. (B) | INCREASED FUSE VALUE<br>WAS 3 AMP - NOW 4 AMP                         | MB<br>3-24-83 |



## VI. Self-Test Mode

The Self-Test mode is a special mode for checking game play statistics as well as game switches and computer functions. It is the easiest and best way to check for proper operation of the entire game.

**NOTE:** Putting the game into Self-Test **WILL NOT** cause the game to erase any CREDITS it has in its memory when the Self-Test mode is entered.

You may begin a Self-Test at any time by sliding the Self-Test switch to the "ON" position after the power to the game is on (the Self-Test switch is located just inside the cabinet coin door frame as you face it). When this is done, the game will react as follows:

1. If the game is in the Attract mode when the Self-Test switch is moved to the "ON" position, it will finish the sequence and then go into the Self-Test mode. This is illustrated by the display of the Self-Test Mode Menu on the monitor screen.
2. If the game is in the Ready-To-Play mode or the Play mode when the Self-Test switch is slid to the "ON" position, it **WILL NOT** go into the Self-Test mode until **AFTER** the game is over. At this point, the game will go into the Self-Test mode. Again, this is illustrated by the display of the Self-Test Mode Menu on the monitor screen.
3. The fastest way to enter the Self-Test mode is to slide the Self-Test switch to the "ON" position and then activate the "TILT" switch located on the back side of the coin door just below the lock mechanism. The game will then **IMMEDIATELY** go into the Self-Test mode.

The Self-Test mode has eight (8) major categories as illustrated by Figure 6-1.

1. It is easy to select what category you want to enter. By following the ON SCREEN instructions, the Cursor at the left of the screen can be moved UP or DOWN until it is in front of the category you want to test.
2. After the Cursor has been positioned, follow the ON SCREEN instructions again, and the monitor screen will display the test category you have selected.

**NOTE:** There is one exception to this. If you select the "PRE-SET" category on the Self-Test Mode Menu, **EVERYTHING**, I repeat — **EVERYTHING** — including **ALL** information in the "BOOKKEEPING" mode, and **ALL operator selected options**, will be set back to zero ("0") and to the factory recommended settings — **respectively**.

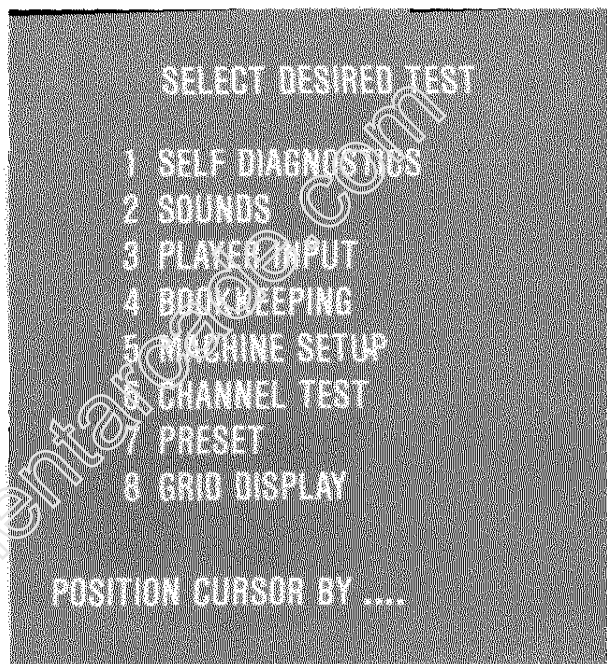


Figure 6-1 Self-Test - Menu

□ Once you are **IN** one of the Self-Test mode categories, FOLLOW THE **ON-SCREEN INSTRUCTIONS TO COMPLETE THE TEST**.

3. The next group of Figures show the **CORRECT** screen presentation for **EACH** category of the Self-Test mode.

During the SELF DIAGNOSTICS section of the Self-Test mode, you will **first** see a cross hatch pattern on the screen for about 1/2 second. **Second**, you will see a lot of different colored bars shown on the monitor screen. These bars will be UNpainted one at a time from the top down. **Third**, you will see the screen painted Red, Blue, and Green in bars from the top down. **Fourth**, all the different colored bars you saw "**Second**" are displayed again. And **fifth**, the different colored bars are replaced by an exit message. If you do not exit, the test will repeat itself. This feature was designed into the game to enable over-night testing for an intermittent hardware problem.

If the SELF DIAGNOSTICS find one or more bad ROM or RAM chips: instead of going through what is described above, the game will give you a written message as to which parts are bad. This message includes their I.D.'s and their P.C. Board locations.



During the SOUNDS section of the Self-Test mode, the game will give a display which looks like that shown in Figure 6-1a.

- In this category, each of the game's separate sounds can be checked individually in any order — or — you can tell the game to check them all in order.

During the PLAYER INPUT section of the Self-Test mode, the game will give a display which looks like that shown in Figure 6-1b.

- In this category, each of the game's player operated controls — including the coin switches on the back side of the coin door — may be checked individually. A game sound will be heard as each switch/control is actuated. If no game

sound is heard, that switch/control is either not working, miswired, or disconnected. Check it out thoroughly.

During the BOOKKEEPING section of the Self-Test mode, the game will give a display which looks like that shown in Figure 6-1c.

- In this category a basic bookkeeping function is performed. And with the selection of the "TIME REPORT" and the "SCORE REPORT", detailed breakdowns of game times and scores may be obtained.

In the TIME REPORT and SCORE REPORT sections of the BOOKKEEPING mode, the game will give displays which look like those shown in Figures 6-1d and 6-1e respectively.

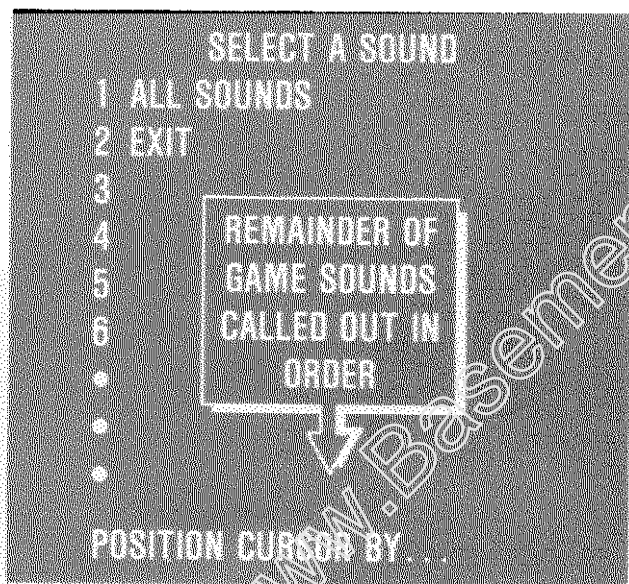


Figure 6-1a Self-Test - Sounds

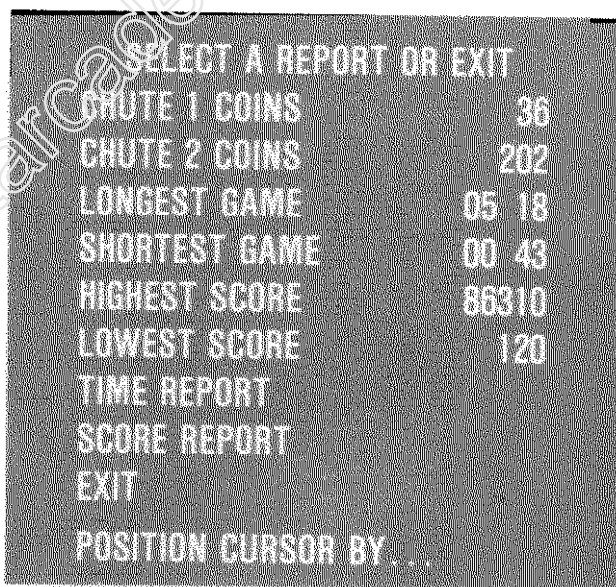


Figure 6-1c Self-Test - Bookkeeping

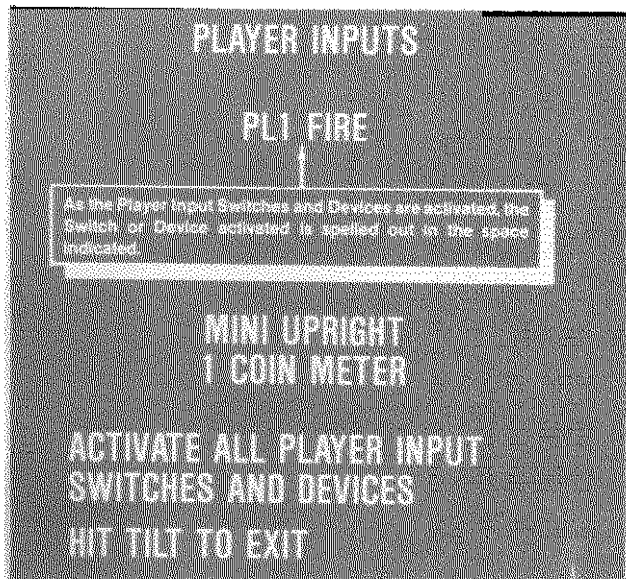


Figure 6-1b Self-Test - Player Inputs

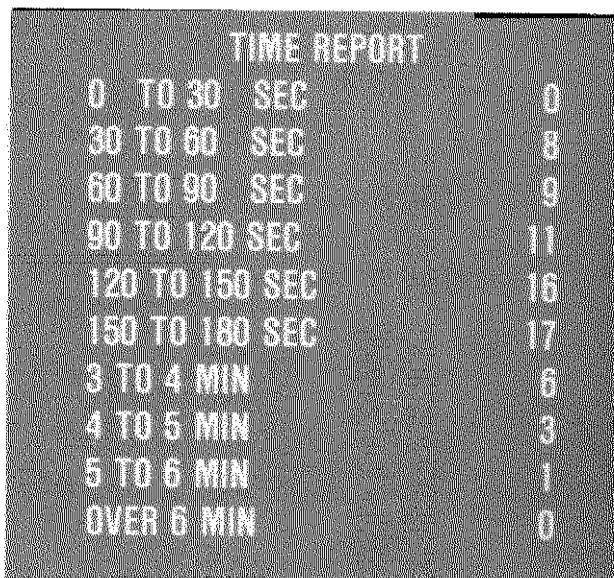


Figure 6-1d Self-Test - Time Report

| SCORE REPORT         |    |
|----------------------|----|
| 0 TO 5000 PTS        | 14 |
| 5000 TO 10000 PTS    | 13 |
| 10000 TO 20000 PTS   | 24 |
| 20000 TO 40000 PTS   | 16 |
| 40000 TO 70000 PTS   | 3  |
| 70000 TO 100000 PTS  | 1  |
| 100000 TO 150000 PTS | 0  |
| 150000 TO 200000 PTS | 0  |
| 200000 TO 250000 PTS | 0  |
| OVER 250000 PTS      | 0  |

**Figure 6-1e Self-Test - Score Report**

During the SETUP OPTIONS section of the Self-Test mode, the game will give a display which looks similar to that shown in Figure 6-1f.

- ☐ In this category, all common game options may be changed from the control console: coins per credit, credits per base, bonus base(s) awarded at, difficulty level --, and so on.

| SETUP OPTIONS         |  |
|-----------------------|--|
| COIN CHUTE 1          |  |
| *1 COINS FOR          |  |
| *1 CREDITS            |  |
| COIN CHUTE 2          |  |
| *1 COINS FOR          |  |
| *1 CREDITS            |  |
| *1 CREDITS FOR        |  |
| *3 BASES              |  |
| 1ST EXTRA BASE AT     |  |
| *20000 POINTS         |  |
| ADDITIONAL BASE EVERY |  |
| *20000 POINTS         |  |
| *3 DIFFICULTY LEVEL   |  |

\* = Factory recommended settings.

**Figure 6-1f Self-Test - Set-Up Options**

#### DIFFICULTY LEVEL EXPLANATION:

The Difficulty Level setting has a range of 1 to 9. With 1 being the easiest level of play and 9 being the most difficult level of play. We recommend that a setting of 3 be used as a beginning point.

Game play can then be made **MORE** difficult or **LESS** difficult, according to the skill levels attained by the players in your area.

#### CHANNEL TEST:

During the CHANNEL TEST section of the Self-Test mode, the game will give a display which looks like that shown in Figure 6-1g.

- ☐ In this category, the game conducts a test of its SOUND SYSTEM.

Once you enter the CHANNEL TEST section of the Self-Test mode, the game automatically tests Channels 1 through 6 giving a tone for each one as it checks it. After the 6th Channel is tested, the game automatically repeats the test until exited. It then goes back to the Self-Test Mode Menu.

During the GRID DISPLAY section of the Self-Test mode, the game shows a white cross hatch pattern on the monitor screen. This is for alignment and/or test purposes. This pattern will remain on the monitor screen until exited. The game will then go back to the Self-Test Mode Menu.

To leave the Self-Test mode, simply slide the Self-Test switch to the "OFF" position at **ANY** time. The game will then run through the ROM/RAM test display after which normal game functions will return to the monitor screen.

| CHANNEL TEST |  |
|--------------|--|
| CHANNEL 1    |  |
| CHANNEL 2    |  |
| CHANNEL 3    |  |
| CHANNEL 4    |  |
| CHANNEL 5    |  |
| CHANNEL 6    |  |

**Figure 6-1g Self-Test - Channel Test**

#### RACK ADVANCE:

The game can be made to advance through the various racks by beginning a game **and THEN** sliding the Self-Test switch to the "ON" position. After this has been done, each time you depress the ONE PLAYER BUTTON the game will advance one rack.

When you reach the desired rack, slide the Self-Test switch to the "OFF" position. (If you leave the Self-Test switch in the "ON" position, the game will go into the Self-Test mode when you are finished playing.)

### CROSS HATCH PATTERN:

A cross hatch pattern is shown on the screen when power is first turned on to the game, when the TILT Switch is actuated, and during the "SELF DIAGNOSTIC" portion of the Self-Test mode, and during the "GRID DISPLAY" portion of the Self-Test mode.

This pattern may be kept on the screen for adjustment purposes as described earlier.

When you are finished using the cross hatch pattern, simply exit at the GRID DISPLAY to return to the Self-Test Mode Menu.

### HARDWARE MASTER RESET SWITCH:

There are two of these little red switches, one on the Sound I/O Board and one on the CPU Board, located as shown in Figure 6-2.

The function of each of these switches — when pressed — is to make the game think it has **JUST** been turned on. They set up an "initial power-up" condition.

We **DO NOT** recommend that you indiscriminately press **EITHER** of these switches. They should **ONLY** be used if there is a major problem encountered while testing the P.C. Boards.

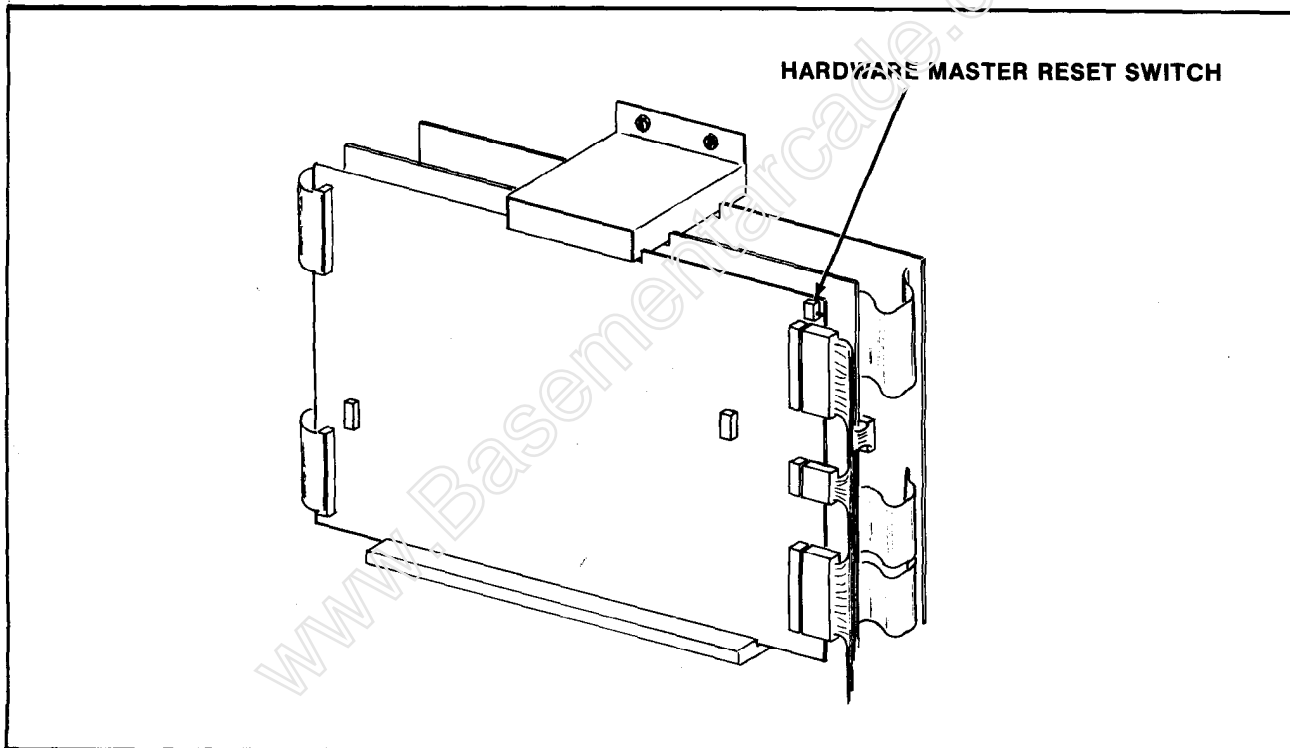


Figure 6-2 Location of Hardware Master Reset Switch